

Dell Pro Premium Compact Mouse




MS7421W

User's Guide

Regulatory model: MS7421Wc/RG-1216

The Dell Technologies logo, featuring the word "DELL" in a stylized blue font with a diagonal line through the "E", followed by the word "Technologies" in a blue sans-serif font.

Notes, Caution, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2020-2025 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

 
2025-04

Rev. A03

Contents

- What’s in the box 4**
- Features 5**
 - Top view 5
 - Bottom view 6
- Shortcut gestures 7**
- Dell Display and Peripheral Manager 8**
- Setting up your wireless mouse 9**
- Pairing your wireless mouse. 11**
 - Pairing with a USB device 11
 - Pairing your wireless mouse using Bluetooth 12
 - Pairing device three using Bluetooth 14
- Charging your wireless mouse 16**
- Specifications. 17**
- Troubleshooting 18**
- Charging power requirement 22**
- Oman regulatory information. 26**
- Statutory information. 27**


What's in the box

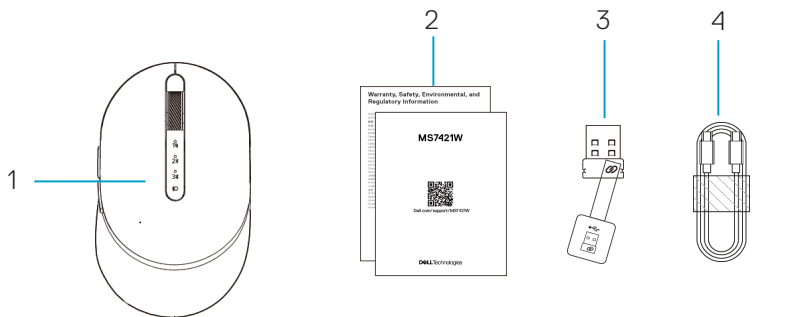

- 1 Wireless mouse
- 2 Documents
- 3 Dell Universal Dongle
- 4 USB-C cable for recharging


Features

 Top view

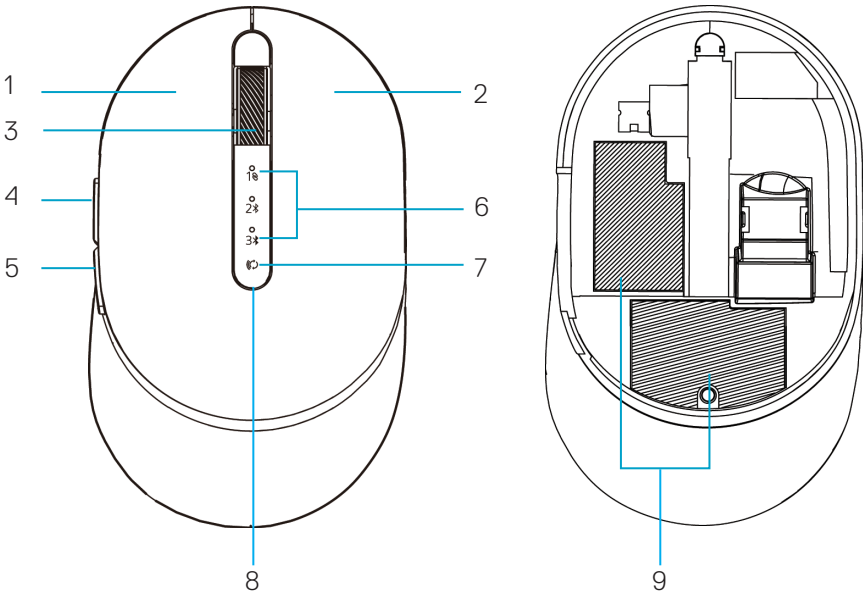

- | | | | |
|---|-----------------|---|---|
| 1 | Left button | 6 | Connection-mode lights |
| 2 | Right button | | • White LED blinking: device is not connected to computer |
| 3 | Scroll wheel | | • LED lighting solid white: device is connected to computer |
| 4 | Forward button | 7 | Connection-mode button |
| 5 | Backward button | 8 | Charging/low battery lights |
| | | | • White LED breathing: battery in charging |
| | | | • Amber LED pulsing: device battery is low, need to recharge. |
| | | 9 | PPID/Regulatory labels |

 
Bottom view

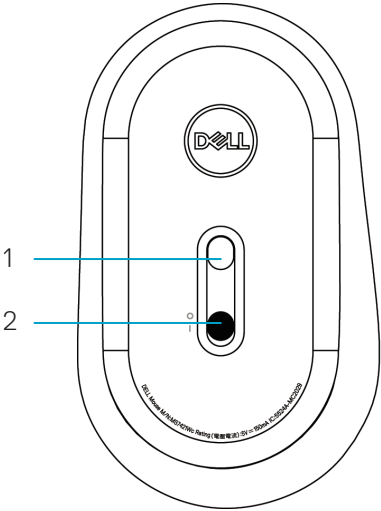

1 Optical sensor

2 Power switch

 Shortcut gestures

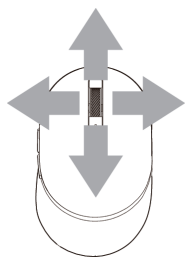


Scroll and Tilt

4-way scroll



Forward function

 Press the front button on the side.

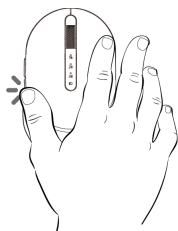

Backward function

Press the rear button on the side.

Dell Display and Peripheral Manager

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Assign shortcuts to programmable buttons of your mouse through the **Button Customization** tab.
- View device information such as firmware version and battery status for wireless devices.
- Configure DPI setting and set primary mouse button.
- Upgrade to the latest firmware for your device.
- Pair or unpair to the RF dongle.

Installing Dell Display and Peripheral Manager

 
When you connect the device to your computer for the first time, you may be prompted to download and install the app.




NOTE: If the download prompt does not appear within a few minutes, you can manually install the software from **Drivers & Downloads** tab on Dell.com/support/MS7421W. For more information, see the *Dell Display and Peripheral Manager User's Guide* in the **Documentation** tab.

Setting up your wireless mouse


1. Locate the slot on the side of the mouse cover. Using your fingertip, pry open the cover.

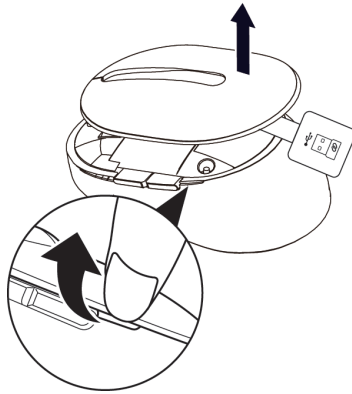

 
2. Remove the Dell Universal Dongle from its compartment.

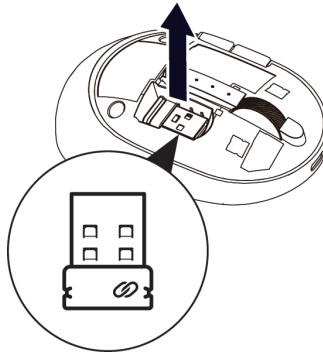

 
3. Replace the mouse cover.

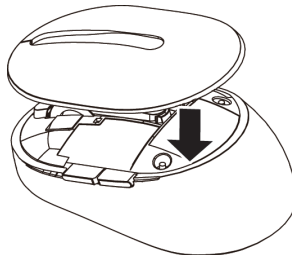

 4. Slide the power switch down to turn on the wireless mouse.

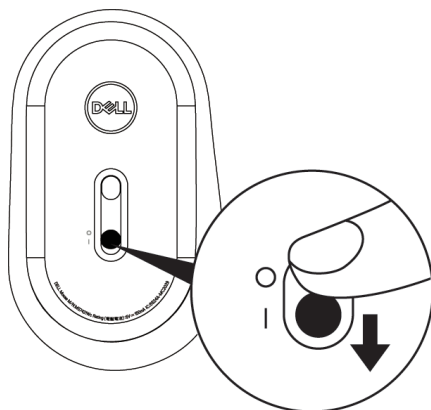


 **NOTE:** Ensure that the distance between your computer and mouse is within ten meters.

Pairing your wireless mouse

 
Your Dell wireless mouse can be paired via the Dell Universal Dongle or direct Bluetooth connection. You can pair and switch between a laptop, desktop, and a compatible mobile device.

Pairing with the Dell Universal Dongle


 **NOTE:** You can connect a device to your wireless mouse using the Dell Peripheral Manager.

1. Plug the Dell Universal Dongle into the USB port on your computer.


 **NOTE:** The Dell Universal Dongle is pre-paired with your wireless mouse in the factory.

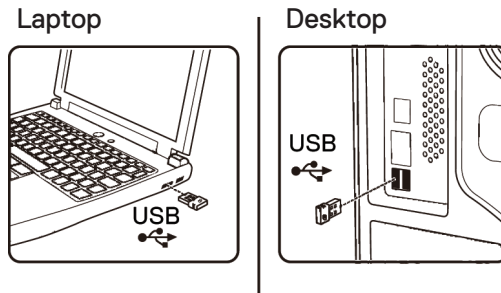

 2. The connection-mode light (18) on the wireless mouse turns on to indicate the Dell Universal pairing, and then turns off.

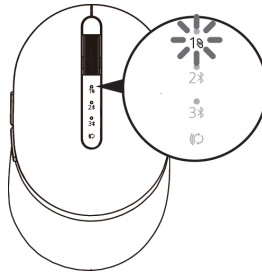

 
3. The wireless mouse is paired with your Dell Universal Dongle.

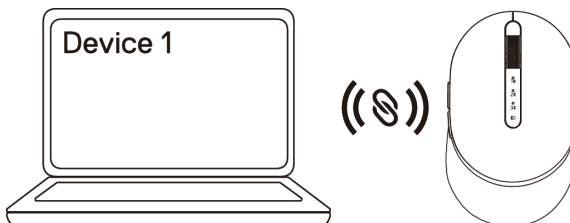


Pairing your wireless mouse using Bluetooth


You can connect up to two devices with your wireless mouse using Bluetooth.

 **NOTE:** Before pairing your wireless mouse using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth driver to the latest version on your computer. For more information, see [Drivers & Downloads at https://www.dell.com/support](https://www.dell.com/support)

 1. Press the connection-mode button twice on your wireless mouse (within 3 seconds) until the connection-mode light (2*) turns on indicating that the second Bluetooth connection is selected.

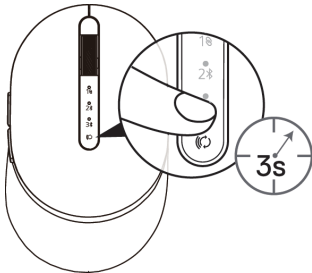

 
2. The connection-mode light (2*) blinks for 3 minutes, indicating your wireless mouse is in the pairing mode.

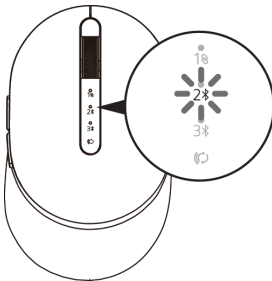


3. Pair your wireless mouse with your Bluetooth-enabled computer.

Swift Pair:

 - a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the “Show notifications to connect using Swift Pair” box is checked.




 - d. Ensure that the Bluetooth is turned on.
- e. Place your wireless mouse near your computer. The **New Dell Mouse** found window appears.
- f. Click **Connect** and confirm the pairing process on both wireless mouse and your computer.

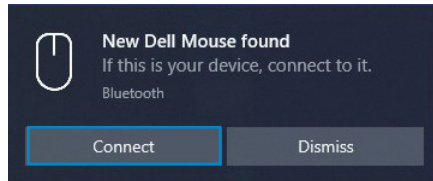



Add Device:

 - a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the Bluetooth is turned on.
- d. Click **Add Bluetooth or other device > Bluetooth**.
- e. From the list of available devices, click **Dell Mouse**.

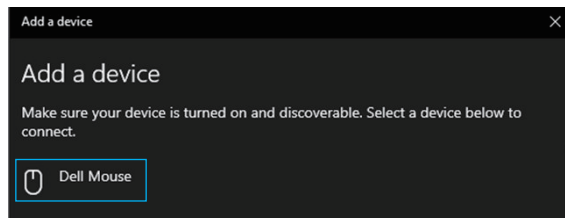


NOTE: If Mouse MS7421W is not listed, ensure that the pairing mode is enabled on the wireless mouse.

  4. Confirm that both the wireless mouse and the device are paired.
The second Bluetooth connection light turns solid white for 3 seconds to confirm the connection is established, and then turns off. After the wireless mouse and a device are paired, they connect automatically when Bluetooth is enabled and they are within Bluetooth range.

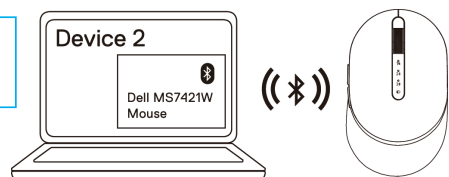


Pairing device three using Bluetooth


 **NOTE:** You can connect a third device to your wireless mouse using Bluetooth.

 **NOTE:** Before pairing your wireless mouse using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth driver to the latest version on your computer. For more information, see **Drivers & Downloads** at <https://www.dell.com/support>

 1. Press the connection-mode button twice on your wireless mouse (within 3 seconds) until the connection-mode light (3*) turns on indicating that the third Bluetooth connection is selected.

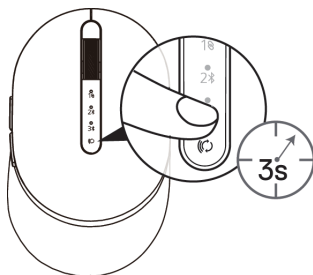

 2. The third Bluetooth connection light (3*) starts blinking to confirm the pairing mode is enabled.

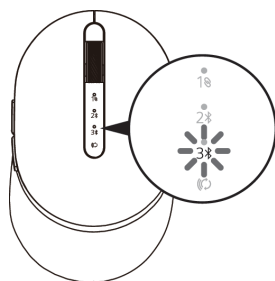


3. Pair your wireless mouse with your Bluetooth-enabled computer.

Swift Pair:

- a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the “Show notifications to connect using Swift Pair” box is checked.
- d. Ensure that the Bluetooth is turned on.


☒ Show notifications to connect using Swift Pair
When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.

 
- e. Place your wireless mouse near your computer. The **New Dell Mouse** found window appears.
- f. Click **Connect** and confirm the pairing process on both wireless mouse and your computer.

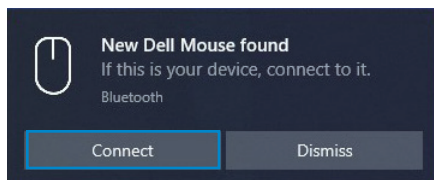


Add Device:

 - a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the Bluetooth is turned on.
- d. Click **Add Bluetooth or other device > Bluetooth**.
- e. From the list of available devices, click **Dell Mouse**.

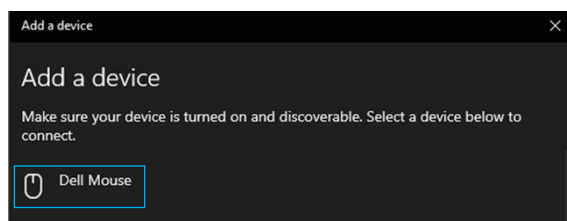

 **NOTE:** If Mouse MS7421W is not listed, ensure that the pairing mode is enabled on the wireless mouse.

 
4. The third Bluetooth connection light turns solid white for 3 seconds to confirm the connection is established then dims off. After the wireless mouse and a device are paired, they connect automatically when Bluetooth is enabled and they are within Bluetooth range.

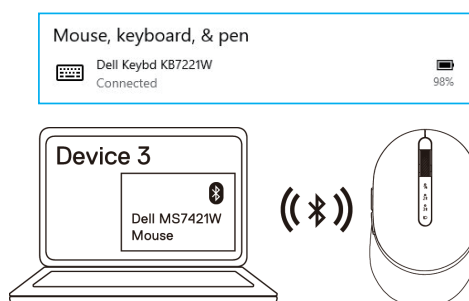


Charging your wireless mouse

European Union (EU) has a common charger requirement for wireless products that have embedded rechargeable battery. For more information about the EU charging power requirements, see [Charging power requirement](#).

 - 1. When the amber LED of mouse blinks, you need to charge your wireless mouse.

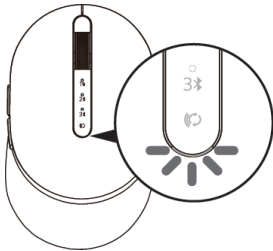


 - 2. Connect the USB-C cable to your wireless mouse.

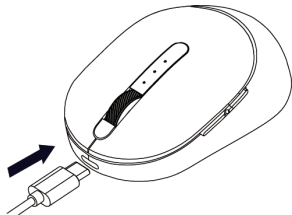


- 3. Connect the USB-C cable to your laptop or desktop computer

 Laptop


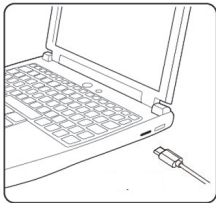



Desktop

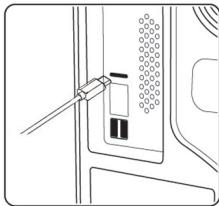 

- 4. Battery charging

  The battery LED will be breathing white to indicate charging and will turn solid white for 10sec to indicate charge completed

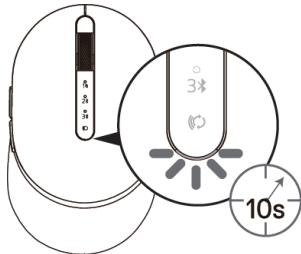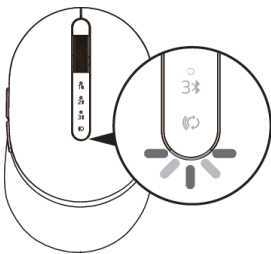

 **NOTE:** Battery charging time may vary in low temperature environment.

Specifications

General

Mouse model number	MS7421W
Connection type	2.4 GHz Wireless & Bluetooth dual mode technology
Supported operating systems (2.4 GHz)	<ul style="list-style-type: none">• Windows 10/8/7/XP• Server 2008/Server 2012• Linux 6.x, Ubuntu, Free DOS,• Chrome and Android• MAC OS
Supported operating systems (Bluetooth)	<ul style="list-style-type: none">• Windows 10/8• Chrome and Android• MAC OS

Electrical

From USB host (Operating)	5 V
Battery Voltage (Operating)	3.6 V to 4.2 V
Battery Life	Approximately 6 months
Battery Requirements	Li-ion polymer Battery

Physical characteristics

Weight	80.20 g +/-3 g (with dongle)
Dimensions:	
• Length	101.76 mm (4.0 in.)
• Width	61.88 mm (2.44 in.)
• Height	35.44 mm (1.40 in.)

Environmental

Temperature:	
• Operating	0°C to 40°C (32°F to 104°F)
• Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	95% maximum relative humidity; non-condensing

2.4 GHz/BLE Wireless

Radio Transmission	Bi-directional communication (Transceiver)
Range	Up to 10 meters

Troubleshooting


Problems	Possible causes	Possible solutions
Unable to use the wireless mouse	The white LED indicator at top of the wireless mouse does not light up when the wireless mouse is turned on.	<div><div>1. Check the battery level. This mouse uses a rechargeable battery, please ensure that the battery is fully charged.</div><div>2. Turn the wireless mouse off, and then turn on again. Check if the battery status light amber pulsing for 5 sec then dim off, flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.</div><div>3. Ensure that the Dell Universal Dongle is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.</div><div>4. Change the USB port. Insert the Dell Universal Dongle into another USB port on your computer.</div></div>

Problems	Possible causes	Possible solutions
Unable to pair the wireless mouse to the computer using Bluetooth	The Bluetooth icon on the computer does not light up when connecting the wireless mouse to the computer.	<ol style="list-style-type: none"> 1. Check the battery level. This wireless mouse uses a rechargeable battery, please ensure that the battery is fully charged. 2. Turn the wireless mouse off, and then turn it on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on. 3. Restart your computer. 4. Check the operating system is Windows 10/Windows 8/Chrome/Android. 5. Ensure that the wireless mouse is set to Bluetooth Low Energy (BLE) mode in your computer. For more information, see the documentation that came with your computer. 6. Turn off then on, and then turn on the Bluetooth. Low Energy (BLE) mode in your computer. For more information, see the documentation that came with your computer.

Problems	Possible causes	Possible solutions
Mouse pointer does not move	The wireless mouse pointer is not responding	<ol style="list-style-type: none"> 1. Check the battery level This wireless mouse uses a rechargeable battery, please ensure that the battery is fully charged.
Left/right buttons does not work	No response when the left or right mouse button is pressed	<ol style="list-style-type: none"> 2. Turn the wireless mouse off, and then turn it on. Check if the battery-status light is flashing amber ten times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on. 3. Restart your computer.
Unable to pair the wireless mouse with the computer	Wireless pairing error message is received while pairing the wireless mouse with the computer	<ol style="list-style-type: none"> 1. Check the battery level. This wireless mouse uses a rechargeable battery, please ensure that the battery is fully charged.


Problems	Possible causes	Possible solutions
Unable to pair the wireless mouse with the computer	Wireless pairing error message is received while pairing the wireless mouse with the computer	<p>2. Turn the wireless mouse off, and then turn it on again.</p> <p>Check if the battery-status light is flashing amber ten times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.</p> <p>3. Restart your computer.</p>
Wireless connection is lost	Previously paired mouse no longer works on the computer	<p>1. Ensure that the Dell Universal Dongle is connected directly to your computer.</p> <p>Avoid using the port replicators, USB hubs, and so on.</p> <p>2. Change the USB port.</p> <p>Insert the Dell Universal Dongle into another USB port on your computer.</p>
Dell Display and Peripheral Manager software features are not working as intended.		<p>The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer. For more information, see the documentation for Dell Display and Peripheral Manager at www.dell.com/support/ddpm.</p>

Charging power requirement

 **NOTE:** The information in this section is applicable only to the European Union (EU) countries.

Charging power requirement

 The power delivered by the charger must be between minimum 0.7 W required by the radio equipment, and maximum 0.7 W in order to achieve the maximum charging speed.



Изискване за мощност на зареждане:

Мощността, осигурявана от зарядното устройство, трябва да е между минимум 0.7 W, изисквана от радиооборудването, и максимум 0.7 W, за да се постигне максимална скорост на зареждане.

Požadavek na nabíjecí výkon:

Aby bylo dosaženo maximální rychlosti nabíjení, musí být výkon dodávaný nabíječkou mezi minimem 0.7 W požadovaným rádiovým zařízením a maximem 0.7 W.

Strømkrav til opladning:

Den effekt, der leveres af opladeren, skal være mellem de minimale 0.7 W, der kræves af radioudstyret, og maksimaleffekten på 0.7 W for at opnå den maksimale opladningshastighed.

Charging power requirement:

The power delivered by the charger must be between minimum 0.7 W required by the radio equipment, and maximum 0.7 W in order to achieve the maximum charging speed.

Laadimisvõimsuse nõue:

maksimaalse laadimiskiiruse saavutamiseks peab laadija tarnitav võimsus jääma raadioseadmete nõutava minimaalse võimsuse 0.7 W ja maksimaalse võimsuse 0.7 W vahele.

Lataustehovaatimus:

Laturin tuottaman tehon on oltava radiolaitteen vaatiman minimin 0.7 W ja maksimin 0.7 W välillä maksimilatausnopeuden saavuttamiseksi.

Puissance requise pour le chargement :

L'alimentation fournie par le chargeur doit être comprise entre la puissance minimale requise par l'équipement radio (0.7 W) et la puissance maximale autorisée (0.7 W) afin d'atteindre la vitesse maximale de chargement.

Ladeanforderungen:

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 0.7 W für die Funkgeräte und maximal 0.7 W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

Απαίτηση ισχύος φόρτισης:

Η ισχύς που παρέχει ο φορτιστής πρέπει να κυμαίνεται μεταξύ των ελάχιστων 0.7 W που απαιτούνται από τον ραδιοεξοπλισμού και των μέγιστων 0.7 W, προκειμένου να επιτευχθεί η μέγιστη ταχύτητα φόρτισης.

Töltési teljesítményigény:

A maximális töltési sebesség eléréséhez a töltő által leadott teljesítménynek a rádióberendezés által megkövetelt minimális 0.7 W és a maximális 0.7 W között kell lennie.

Requisiti di alimentazione per la ricarica:

L'alimentazione fornita dal caricabatterie deve essere compresa tra i 0.7 W minimi richiesti dall'apparecchiatura radio e i 0.7 W massimi, al fine di raggiungere la velocità di ricarica massima.

Uzlādes jaudas prasība.

Lādētāja nodrošinātajai jaudai jābūt no min. 0.7 W, kas nepieciešama radio aprīkojumam, un maks. 0.7 W, lai sasniegtu maksimālo uzlādes ātrumu.

Ķkrovimo galios reikalavimai.

Kad būtu pasiektas didžiausias ģkrovimo greitis, ģkroviklio galia pagal radio ģrangos reikalavimus turi būti ne mažesnė kaip 0.7 W ir ne didesnė kaip 0.7 W.

Rekwizit dwar il-potenza tal-iċċarġjar:

Il-potenza pprovduta miċ-ċarġer trid tkun bejn il-minimu ta' 0.7 W meħtieġ mit-tagħmir tar-radju tiegħek, u l-massimu ta' 0.7 W biex tinkiseb il-veloċità massima tal-iċċarġjar.

Vereiste oplaadstroom:

De stroom die door de oplader wordt geleverd, moet tussen minimaal 0.7 W, vereist door de radioapparatuur, en maximaal 0.7 W zijn om de maximale oplaadsnelheid te bereiken.

Wymaganie dotyczące zasilania:

Zasilanie dostarczane przez ładowarkę musi znajdować się w zakresie od wartości minimalnej 0.7 W wymaganej przez urządzenie radiowe po wartość maksymalną 0.7 W zapewniającą ładowanie z maksymalną szybkością.

Requisito de potência de carregamento:

A potência fornecida pelo carregador deve situar-se entre o mínimo de 0.7 W exigido pelo equipamento de rádio e o máximo de 0.7 W, a fim de atingir a velocidade máxima de carregamento.

Cerință de alimentare pentru încărcare:

Alimentarea furnizată de încărcător trebuie să fie între minimum 0.7 W, valoare impusă de echipamentul radio, și maximum 0.7 W pentru a obține viteza maximă de încărcare.

Požiadavky na napájanie:

Na dosiahnutie maximálnej rýchlosti nabíjania musí byť výkon dodávaný nabíjačkou medzi minimom 0.7 W požadovaným rádiovým zariadením a maximom 0.7 W.

Zahteve glede moči napajanja:

Za najhitrejše polnjenje mora napajalnik dovajati moč med najmanj 0.7 W (kar zahteva radijska oprema) in največ 0.7 W.

Requisito de carga:

La potencia suministrada a través del cargador debe de ser de entre 0.7 W y 0.7 W para obtener la velocidad de carga máxima en equipos de radio.

Strömförsörjningskrav för laddning:

Den ström som levereras av laddaren måste vara mellan minst 0.7 W och högst 0.7 W enligt radioutrustningens krav för att uppnå maximal laddningshastighet.

Требования к мощности для зарядки:

Зарядное устройство должно подавать мощность в диапазоне от 0.7 Вт, согласно минимальному требованию для радиооборудования, до 0.7 Вт для достижения максимальной скорости зарядки.

Oman regulatory information

Regulatory Model: MS7421Wc, RG-1216

R/10351/20



R/19192/2024



OMAN-TRA

D172338



Statutory information

Warranty

Limited warranty and return policies

Dell-branded products carry three-year limited hardware warranty. If purchased together with a Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at **Dell.com/terms**. This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty—full details of the Dell end user contract and warranty terms can be found by going to **Dell.com**, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty—full details of Dell's warranty terms can be found by going to **Dell.com**, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.