

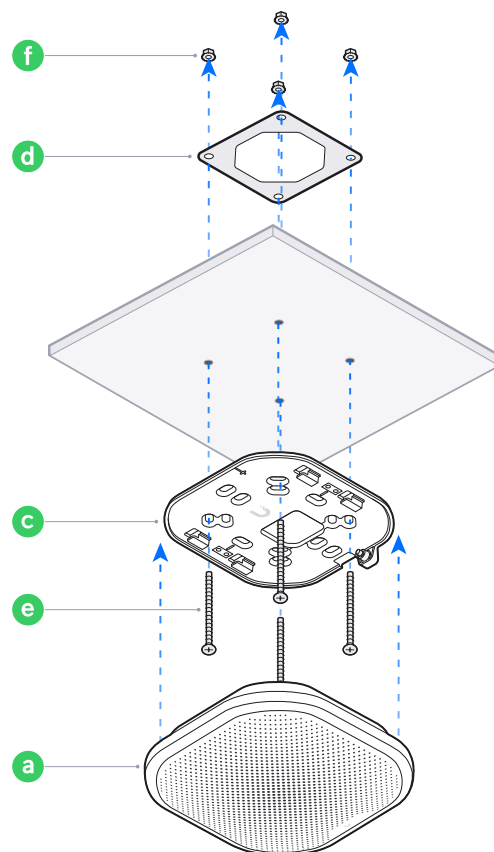
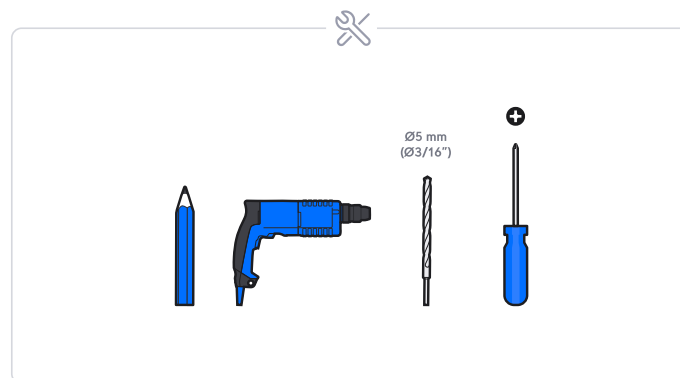


1

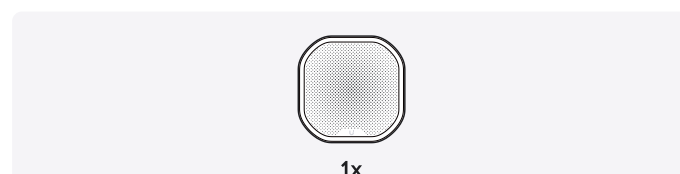


a

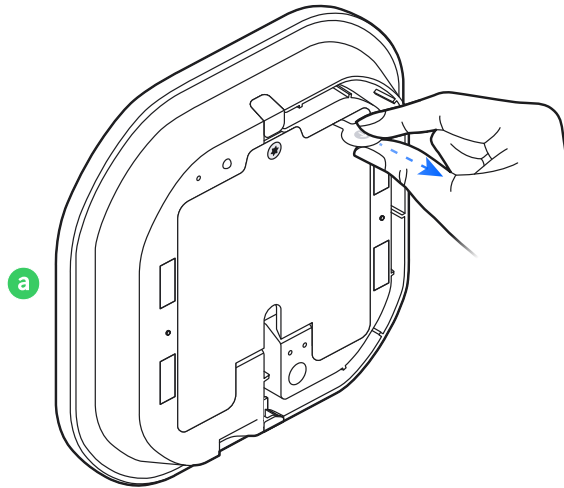

2

A

Powered by battery; triggered by sensor wirelessly.

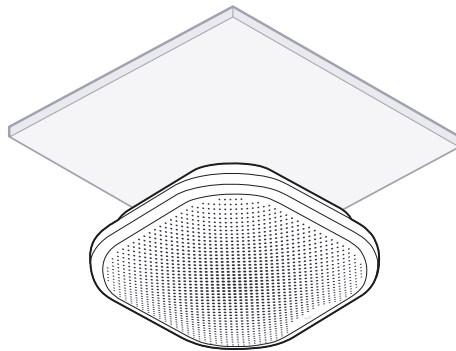

1x

b



1x

c



1x

d



4x

e




4x


f




1x

j



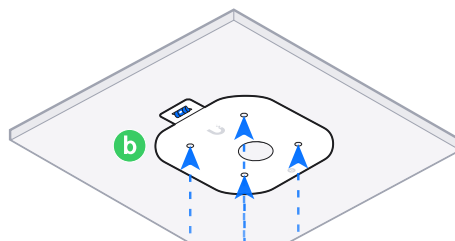





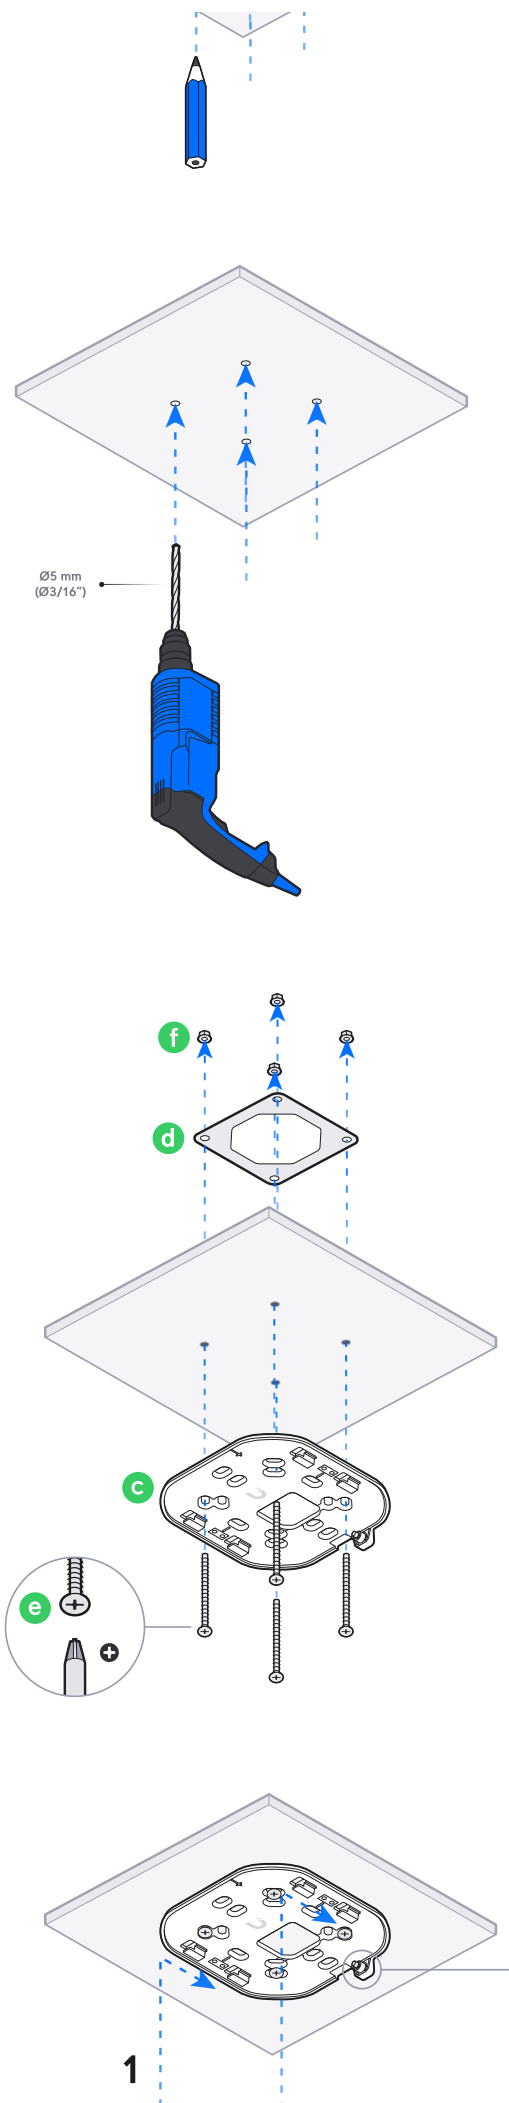




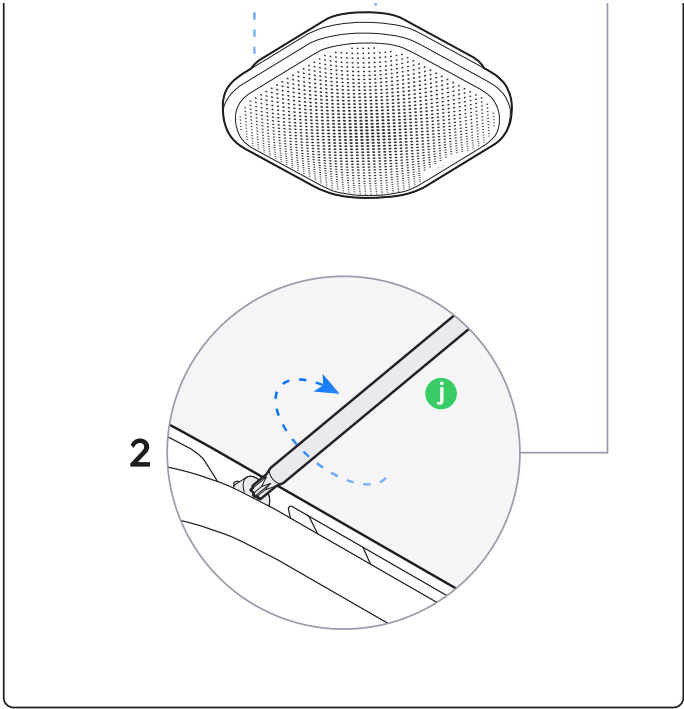






B

 
Powered via DC wires; triggered by sensor through cable.

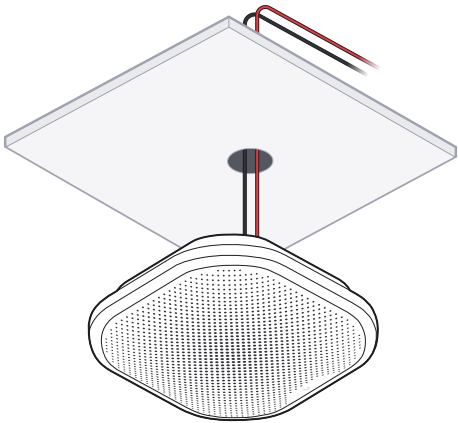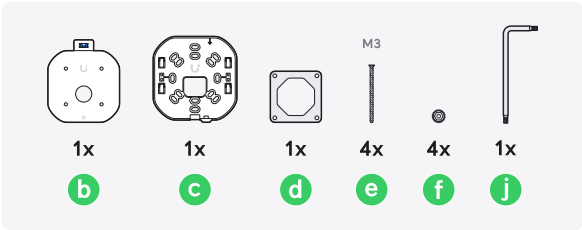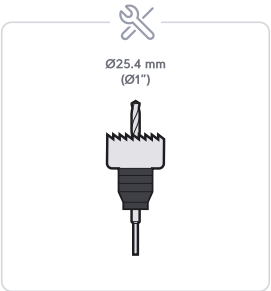

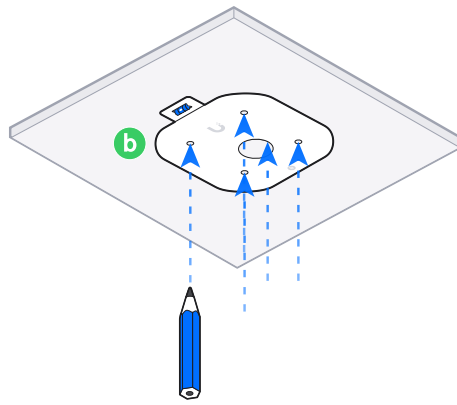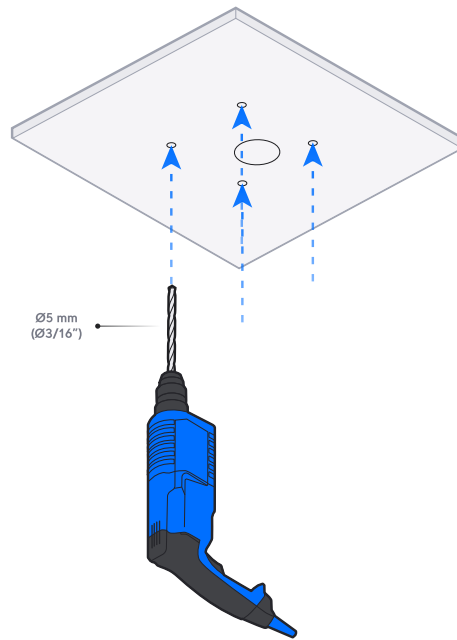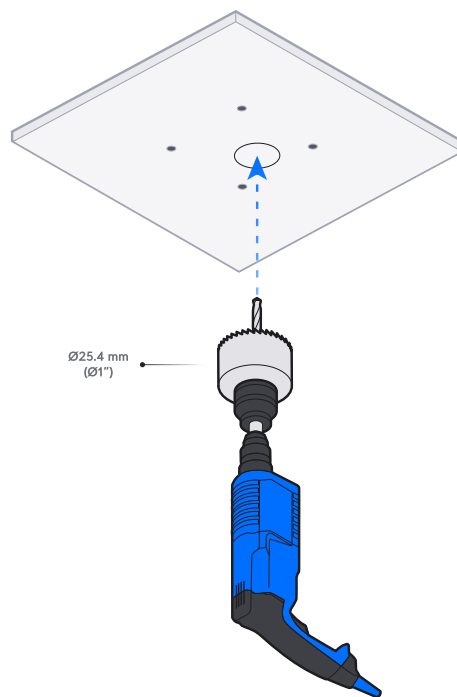


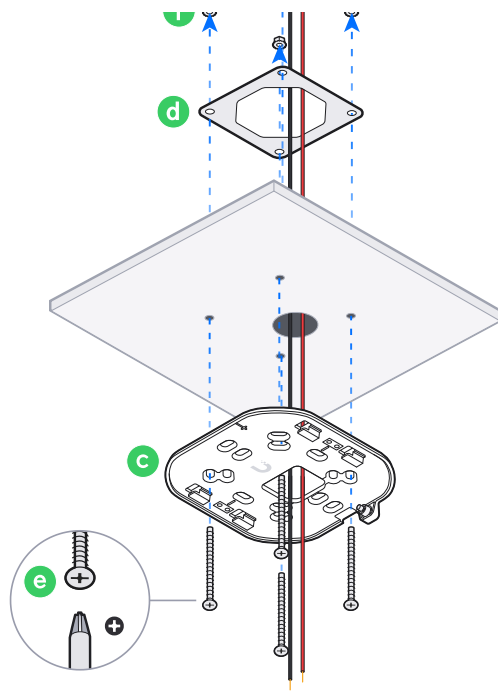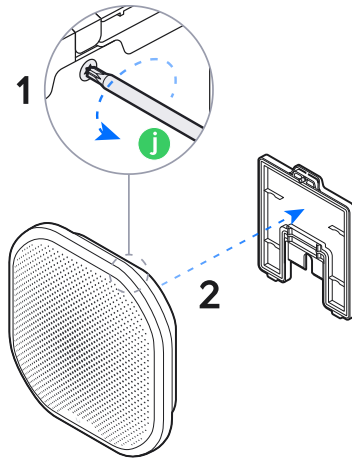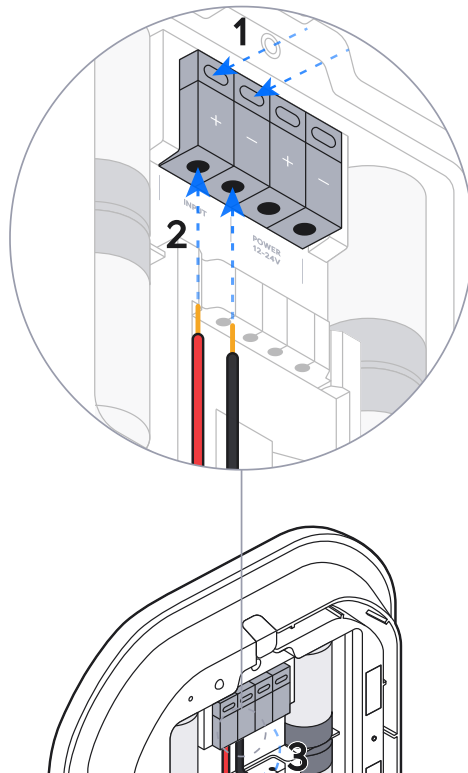


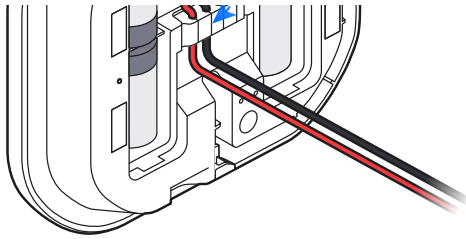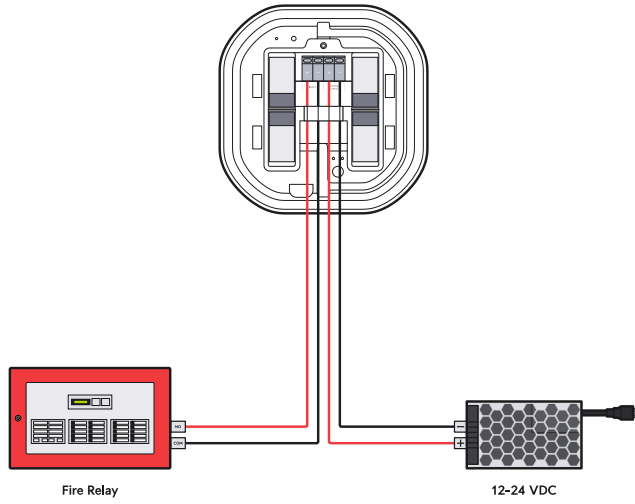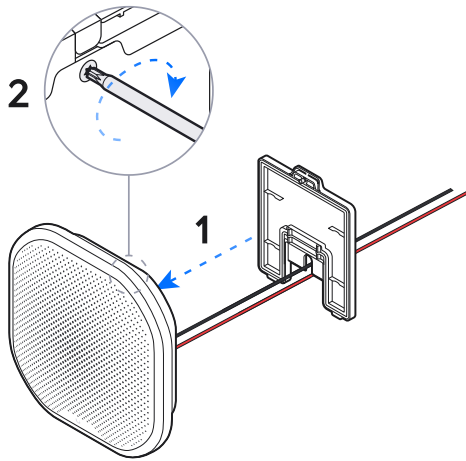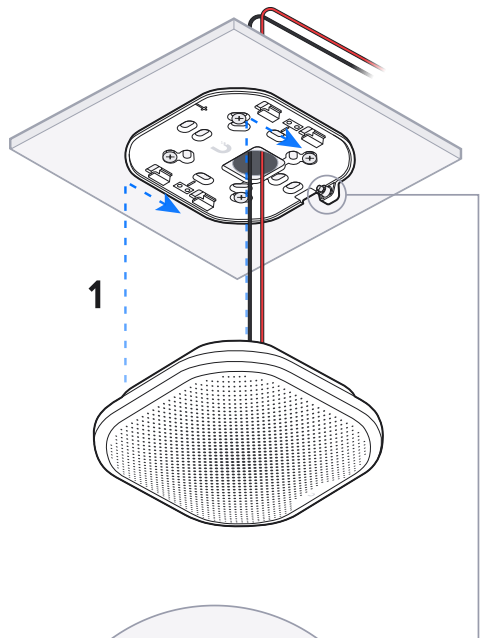

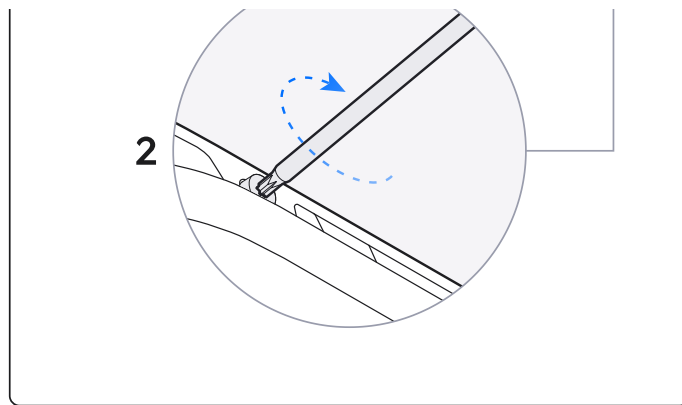

3

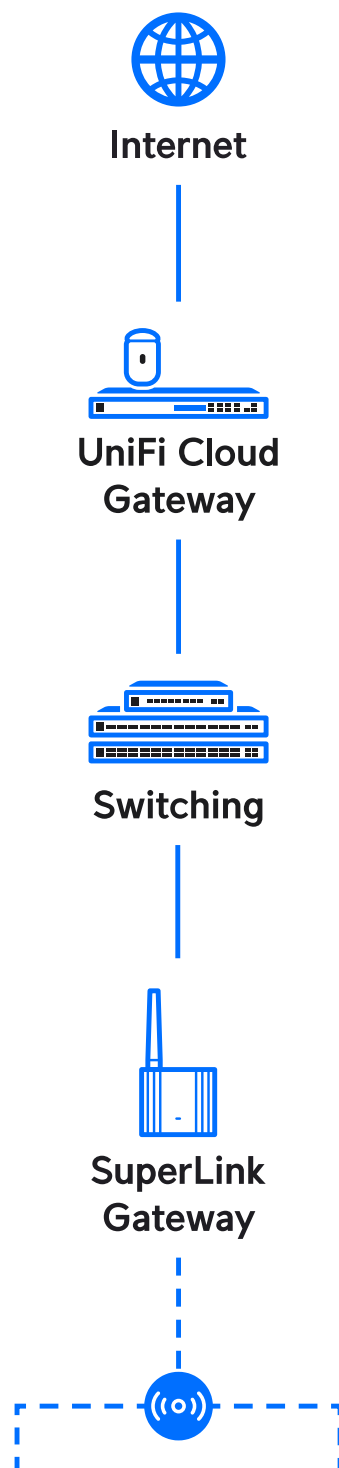

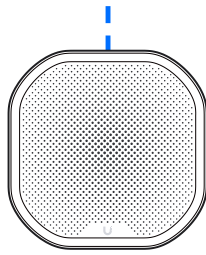

4



If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

©2025 Ubiquiti Inc. All rights reserved. Ubiquiti, the Ubiquiti U logo, UniFi, and UniFi Protect are trademarks or registered trademarks of Ubiquiti Inc. in the United States and other countries and regions. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries and regions. App Store is a service mark of Apple Inc., registered in the U.S. and other countries and regions. Android, Google, Google Play, the Google Play logo are trademarks of Google LLC.

