

# STRONG | androidtv

## 2K TV-STICK

### LEAP-UNA

2K



Subject to alterations

User manual

[www.strong-eu.com](http://www.strong-eu.com)

# SERVICE CENTER

|           |   |           |  |
|-----------|---|-----------|--|
| <b>AT</b> | ✉ <b>support_at@strong-eu.com</b><br>☎ 0820 400 150<br>(€ 0,12/Min. österr. Festnetz) | <b>HU</b> | ✉ <b>support_hu@strong-eu.com</b><br>☎ +36 1 445 26 10     |
| <b>BG</b> | ✉ <b>support_bg@strong-eu.com</b><br>☎ +359 32 634451                                 | <b>IT</b> | ✉ <b>support_it@strong-eu.com</b>                          |
| <b>CZ</b> | ✉ <b>support_cz@strong-eu.com</b><br>☎ 844 44 44 90                                   | <b>NL</b> | ✉ <b>support_nl@strong-eu.com</b>                          |
| <b>DE</b> | ✉ <b>support_de@strong-eu.com</b><br>☎ 0800 7788 787<br>(Gebührenfrei)                | <b>PL</b> | ✉ <b>support_pl@strong-eu.com</b><br>☎ 801 702 017         |
| <b>DK</b> | ✉ <b>support_dk@strong-eu.com</b>   | <b>PT</b> | ✉ <b>support_pt@strong-eu.com</b><br>☎ +351 2 100 06 125   |
| <b>ES</b> | ✉ <b>support_es@strong-eu.com</b><br>☎ +34 91 119 61 76                               | <b>SK</b> | ✉ <b>support_sk@strong-eu.com</b><br>☎ 0850 15 05 50       |
| <b>FR</b> | ✉ <b>support_fr@strong-eu.com</b>   | <b>SL</b> | ☎ +386 1 828 08 58   |
| <b>HR</b> | ☎ +385 1 344 57 66  | <b>UA</b> | ✉ <b>support_ua@strong-eu.com</b><br>☎ +380 (44) 238 61 50 |

Supplied by STRONG Austria  
Represented by STRONG Ges.m.b.H.  
Teinfaltstraße 8/4.Stock, A-1010 Vienna, Austria  
Email: support\_at@strong-eu.com

## LICENSES

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to **Dolby Laboratories**. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

## SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the device LEAP-UNA is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://eu.strong-eu.com/downloads/>

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Wi-Fi, WPA2, WPA are registered trademarks of Wi-Fi Alliance®. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All other product names are trademarks or registered trademarks of their respective owners.

© STRONG 2025. All rights reserved.

## TABLE OF CONTENT

|                                      |           |
|--------------------------------------|-----------|
| <b>1.0 INTRODUCTION</b>              | <b>3</b>  |
| 1.1 SAFETY INSTRUCTIONS              | 3         |
| 1.2 STORAGE                          | 4         |
| 1.3 PACKAGE CONTENT                  | 4         |
| <b>2.0 TV STICK PANEL</b>            | <b>4</b>  |
| 2.1 PANEL                            | 4         |
| 2.2 REMOTE CONTROL                   | 5         |
| 2.3 INSTALLING THE BATTERIES         | 6         |
| <b>3.0 CONNECTION GUIDE</b>          | <b>6</b>  |
| <b>4.0 SETTING UP YOUR DEVICE</b>    | <b>7</b>  |
| <b>5.0 SETTINGS</b>                  | <b>12</b> |
| <b>6.0 DEVICES PREFERENCE</b>        | <b>14</b> |
| <b>7.0 GOOGLE CAST</b>               | <b>14</b> |
| <b>8.0 REMOTE &amp; ACCESSORIES</b>  | <b>15</b> |
| <b>9.0 ABOUT</b>                     | <b>15</b> |
| <b>10.0 DOWNLOADING APPS</b>         | <b>16</b> |
| <b>11.0 GOOGLE ASSISTANT</b>         | <b>16</b> |
| <b>12.0 SIMPLE TROUBLESHOOTING</b>   | <b>17</b> |
| <b>13.0 TECHNICAL SPECIFICATIONS</b> | <b>18</b> |

## 1.0 INTRODUCTION

Thank you for choosing the 2K TV Stick supplied by STRONG. It has been produced with the latest new technology and offers extensive entertainment and great versatility. We wish you many hours of new great experiences exploring the Android world!

### 1.1 SAFETY INSTRUCTIONS

Read all the instructions before operating the device. Keep these instructions well for later use.

Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).

- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-  This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
-  To prevent the spread of fire, always keep candles or other open flames away from this product.
-  Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

#### Precautions

Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards. Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel.

When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.

It is a necessity that you only use an approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.

 Risk of explosion if the battery is replaced by an incorrect type.

Disposing of a battery into the fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

#### Operating Environment

Do not install this equipment in a confined space such as a bookcase or similar unit.

Do not use the set near damp, and cold areas, protect the set from overheating.

Keep away from direct sunlight.

Do not use the set near dust place.

Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

#### WEEE Directive

 Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste

disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please

use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

## 1.2 STORAGE

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

### Equipment Set-up

Please follow the instructions below:

This user manual provides complete instructions for installing and using this product. The symbols will serve as follows:

|                 |  |
|-----------------|--|
| <b>WARNING:</b> | Indicates warning information.                                   |
| <b>NOTE:</b>    | Indicates any other additional important or helpful information. |
| <b>MENU</b>     | Represents a button on the remote control or the product.        |
| <i>Move to</i>  | Represents a menu item within a window.                          |

## 1.3 PACKAGE CONTENT

- 1x Android TV Stick
- 1x Voice Enabled Remote
- 1x Power USB Adaptor 5V / 1A
- 1x HDMI Extender Cable
- 2x AAA Batteries
- 1x Installation instructions

**WARNING:** The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used (e.g. NiMH), we recommend using types with low self-discharge to ensure long time operation of your remote control.

**NOTE:** Only use the original USB power adaptor of 1Ampere. Other adaptors only use 0,5 Ampere which is some not enough to supply this Google TV Stick.

## 2.0 TV STICK PANEL

### 2.1 PANEL


Fig. 1



- 1. HDMI
- 2. LED
- 3. Micro USB Port

## 2.2 REMOTE CONTROL

Fig. 2

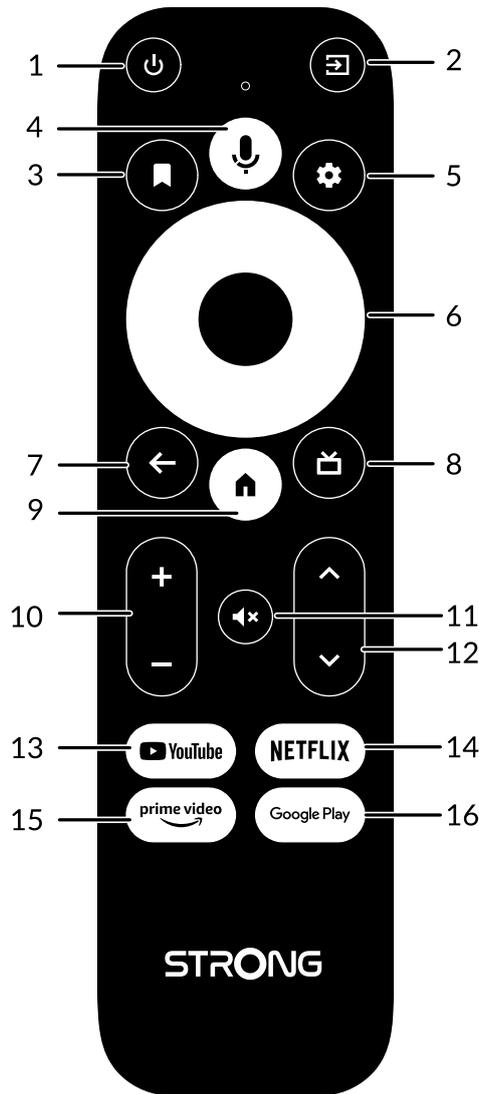

1. 
2. 
3. 
4. 
5. 
6. 
7. 
8. 
9. 
10. VOL +/-
11. 
12. 
13. YouTube
14. NETFLIX
15. prime video
16. Google Play

1. Press to turn the TV/ Stick to On or Standby.
2. Select the input source mode.
3. In home screen open edit function.
4. Press to activate the voice control function\*.
5. Press to access the TV settings.
6. Navigate the menu. Confirm the selection.
7. Press to go back to previously viewed channel. In menu: Back to previous menu.
8. Enter the home desktop.
9. Call Guide / Channel list in some TV applications.
10. Adjust the volume up or down.
11. Press to mute or restore the volume.
12. Change programs up or down.
13. Press for direct access to YouTube.
14. Press for direct access to Netflix\*\*
15. Press for direct access to prime video\*\*\*.
16. Press for direct access to Google Play


\*Voice control and some other functions could work only when this RCU paired with your TV.

\*\* Membership is not included. Netflix is available in selected countries. Streaming Netflix requires to set up an account. Broadband Internet required. See [www.netflix.com/TermsOfUse](http://www.netflix.com/TermsOfUse) for details.

\*\*\* Membership is not included. Prime is available in selected countries. Streaming prime video requires to set up an account. Broadband Internet required. See [www.primevideo.com](http://www.primevideo.com) for details.

## 2.3 INSTALLING THE BATTERIES

Fig. 3

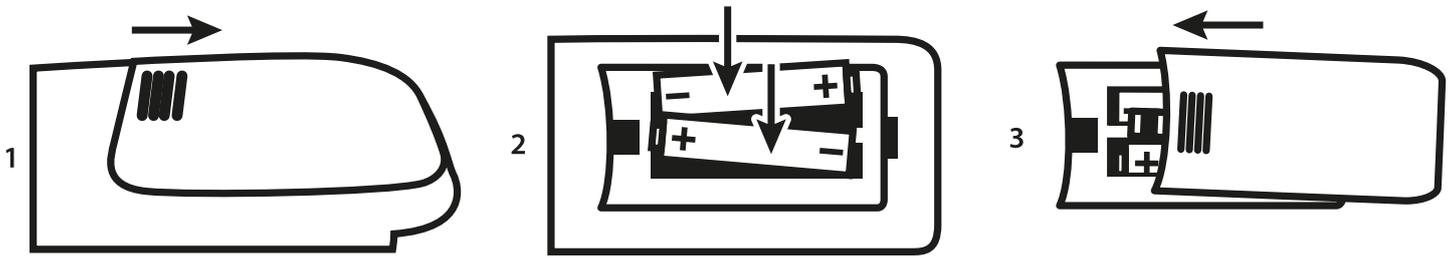

Open the cover on the remote control and insert 2x AAA batteries into the compartment. The correct position of batteries polar diagram is shown inside the batteries compartment.

1. Open the cover.      2. Insert the batteries.      3. Close the lid.


**WARNING:** The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries.

## 3.0 CONNECTION GUIDE

Refer to the diagram below for connecting your Android TV Stick to the TV.

**NOTE:** Before getting started, please turn off all devices to be connected.

Fig. 4

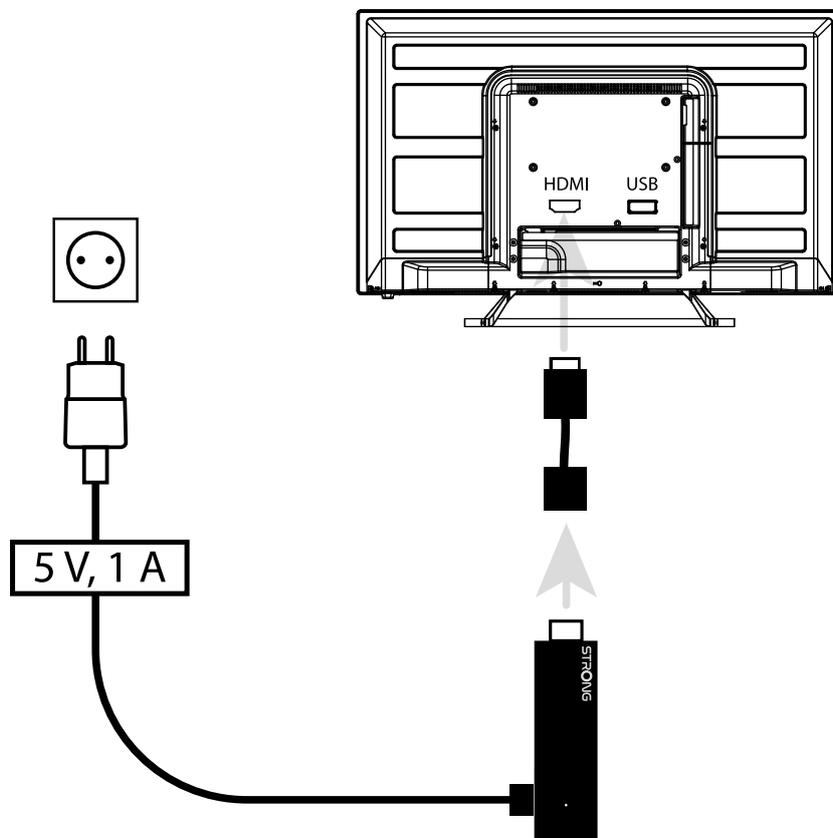


Connect the TV stick to your television on available HDMI port. Connect one end of the Micro USB cable into LEAP-UNA micro power entree. The other end of this cable into USB power adaptor. Now, Insert the USB power adaptor into the wall outlet.

## 4.0 SETTING UP YOUR DEVICE

You may turn on your TV after properly connecting is done in above step 3.


Select on TV the HDMI entrée port where this TV stick is inserted to. Wait until the menu appears on screen. To be able to use the Bluetooth Remote control and Google Assistant, you must first pair the Remote to your TV Stick. Press at same time BACK & HOME button for 3 seconds until the LED on remote is blinking. The pairing will now start and if successful it will go automatically to the next step in installation wizard.

Please, follow the pairing instructions on the screen.

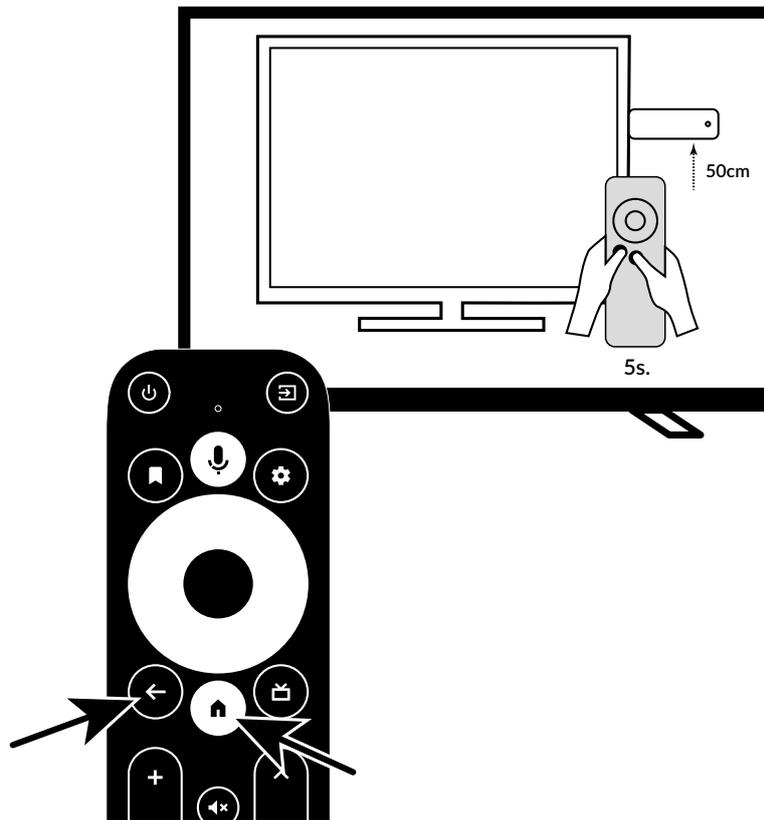


### Step 1: Language

Select your preferred language on the Welcome Page.

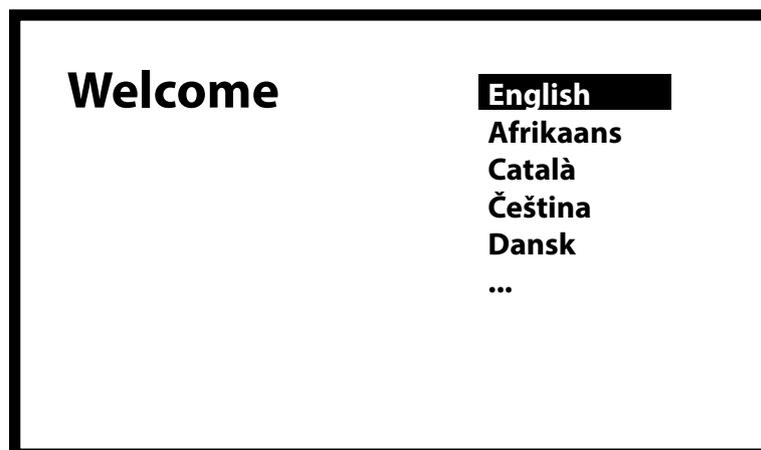

### Step 2: Quickly set up Google account

Choose whether to transfer your Google account from your Android phone or set it up manually in this menu. By selecting Continue, follow the instructions on your phone. Select Skip to proceed in this menu on the TV screen.

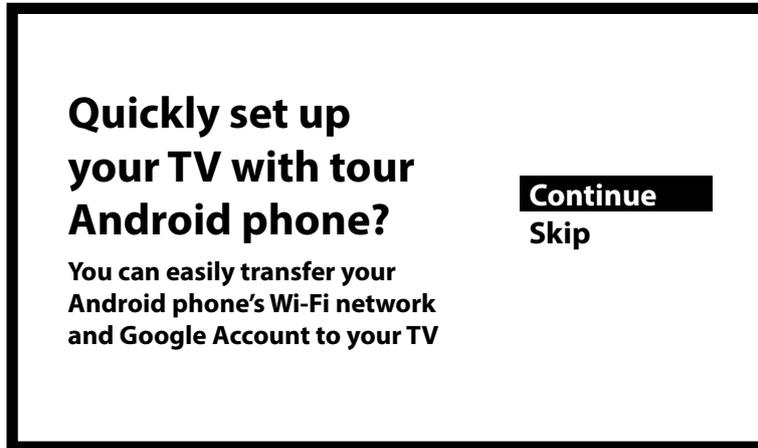

### Step 3: Set up Wi-Fi network


Select your Wi-Fi Network.



### Step 4: Wi-Fi password


Enter the password from your Wi-Fi Network. Select ✓ to confirm and continue

**NOTE:** Routers with Wi-Fi 6 and WPA3 security is not supported.

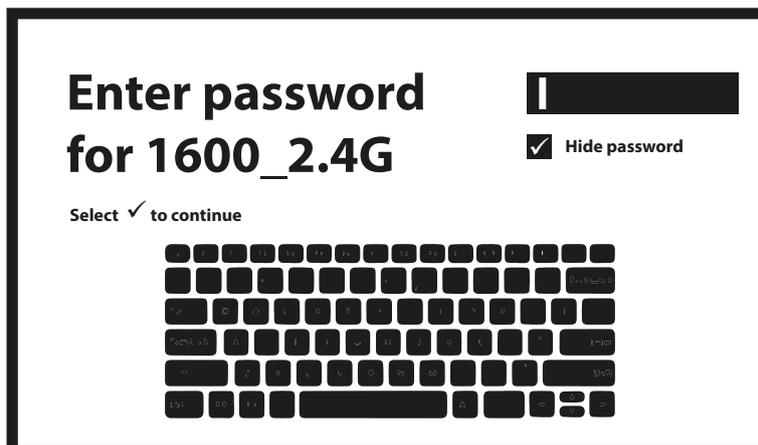


## Step 5: Google Account

Sign in with your Google Account.

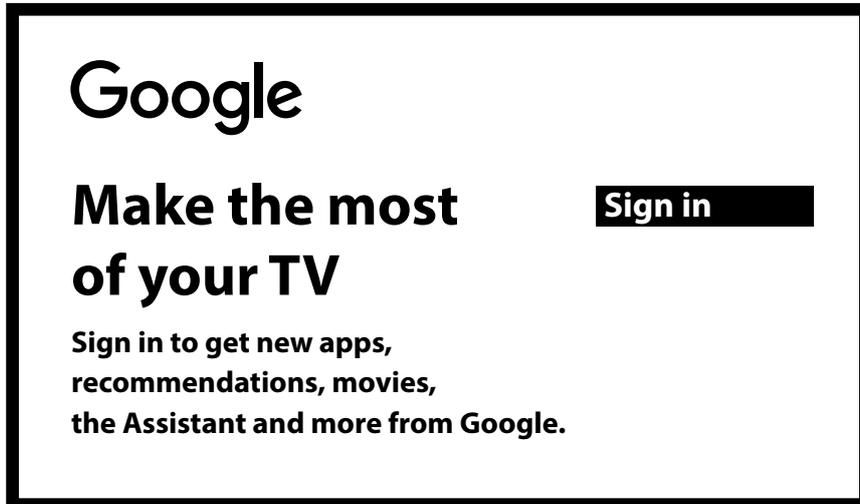

First, enter your account and confirm by pressing the arrow (→).  
In the second step, enter the password for this account and confirm.

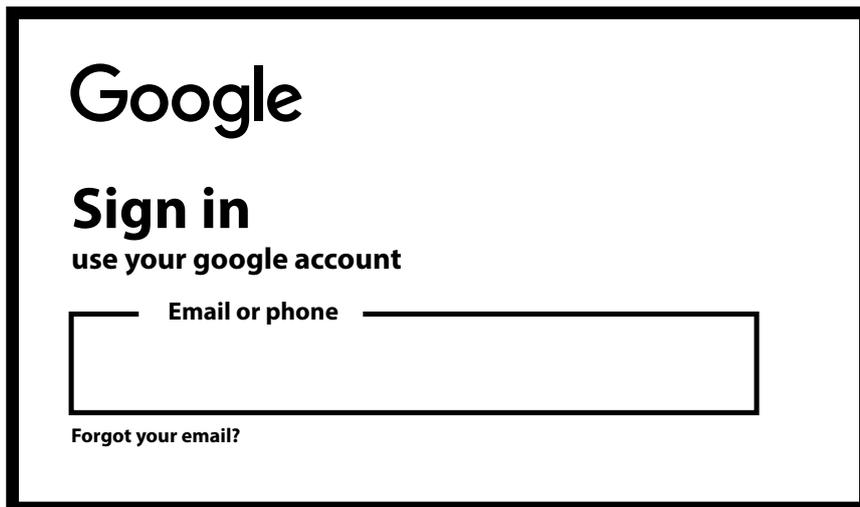

## Step 6: Terms of Service & Privacy Policy

Read and accept the Terms of Services & Privacy Policy.



## Step 7: Diagnostic Report Settings

Select whether to allow your TV stick to send automatic diagnostic and usage data to Google.

# Google

## Google Services

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's privacy Policy. Click "Accept" to confirm your selection of these Google services settings.

**Select one below**

Accept

Use location

Help improve Android TV

Recommendations and ads

Services and your privacy

## Step 8: Meet your Google Assistant



# Google Assistant

Get better voice control for your TV

**Continue**

Turn on the Google Assistant functions to activate this functionality on your remote.



## Search accross all your TV apps

To do this, allow Google to share your requests with your TV's apps


**Choose an option**

**Allow**

No, thanks

## Step 9: Welcome to Android TV


A walkthrough of the features of your device. Press OK for next page.

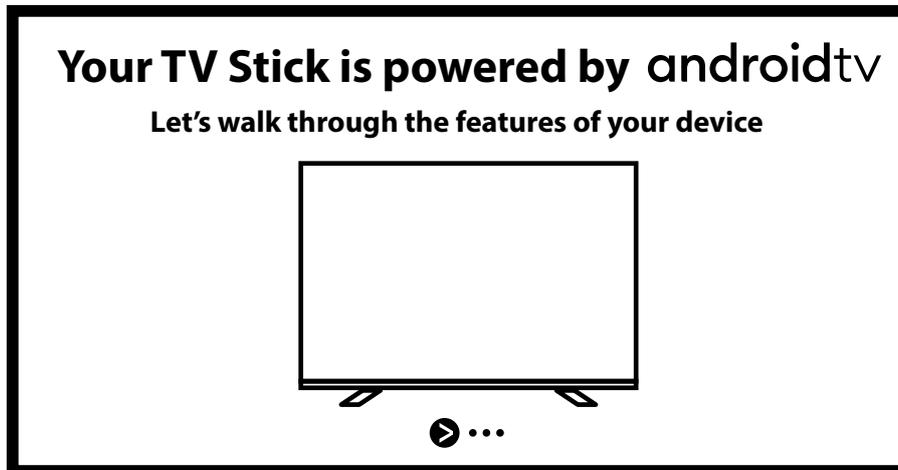


## Step 10: Control of volume through CEC function

This step allows you to set up volume control for other connected devices, such as your TV, soundbar, or amplifier, using this Android remote. The control is sent via the HDMI port using the CEC protocol. To use this function, ensure the CEC function is enabled on the connected device.

**NOTE:** This setup can also be done later. To start using your TV stick immediately, select "Not now."

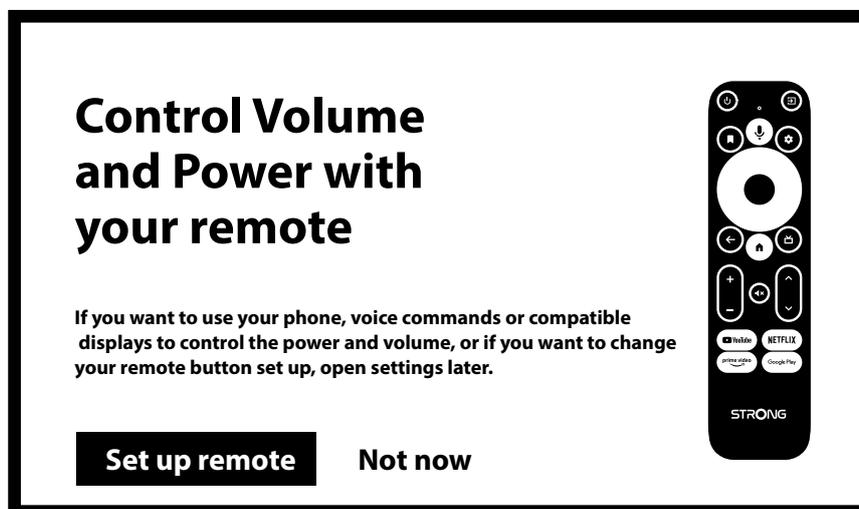


You are ready to begin as the home page will open.

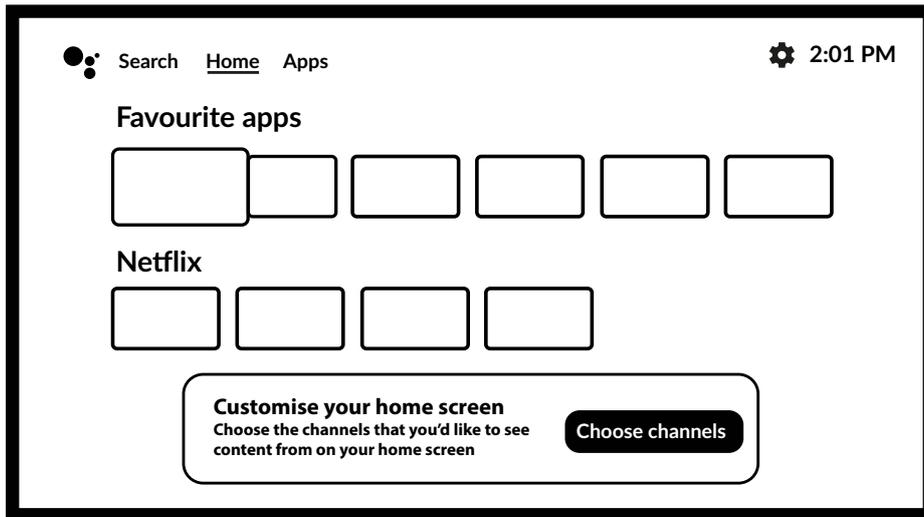

## 5.0 SETTINGS


Press the setting button to open the Settings menu.

Select Settings to check the device information, add/remove accounts and make changes to the system settings.

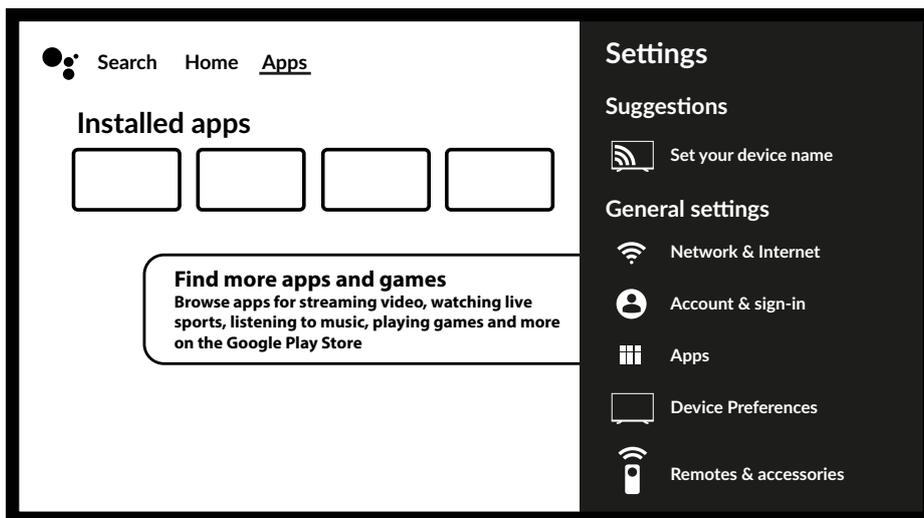

## Wi-Fi Settings

Under Network & Internet Settings, select and enable Wi-Fi to connect to the network. Once the device scans and lists nearby Wi-Fi networks, select the appropriate network name, if required put in the password and select Connect.

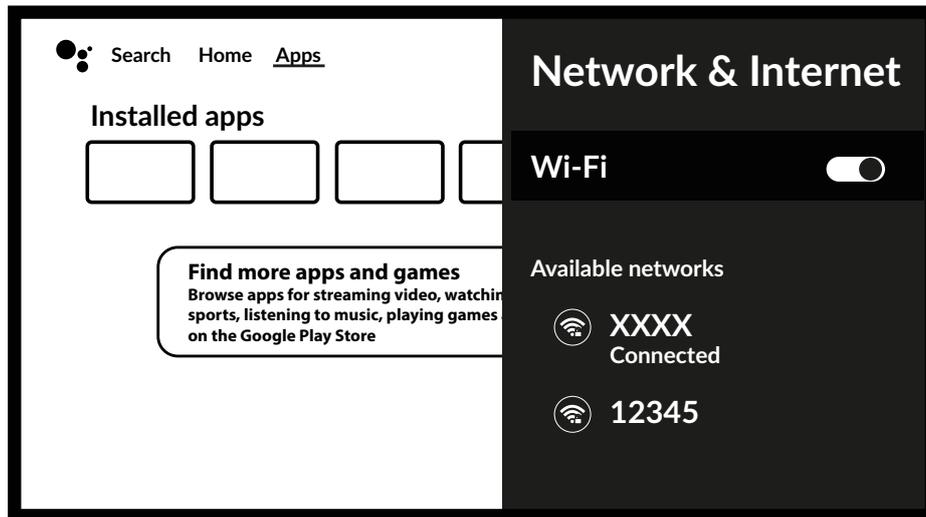


## Account & sign-in

Here you can change or check your Google account and password. You can also add accounts for other users to create their personalized favorite access.

## Adding Accounts

For new Google users: sign up for a new Google account using the TV for easier login and payment security. Add an account or switch accounts under Accounts in the Settings Menu.

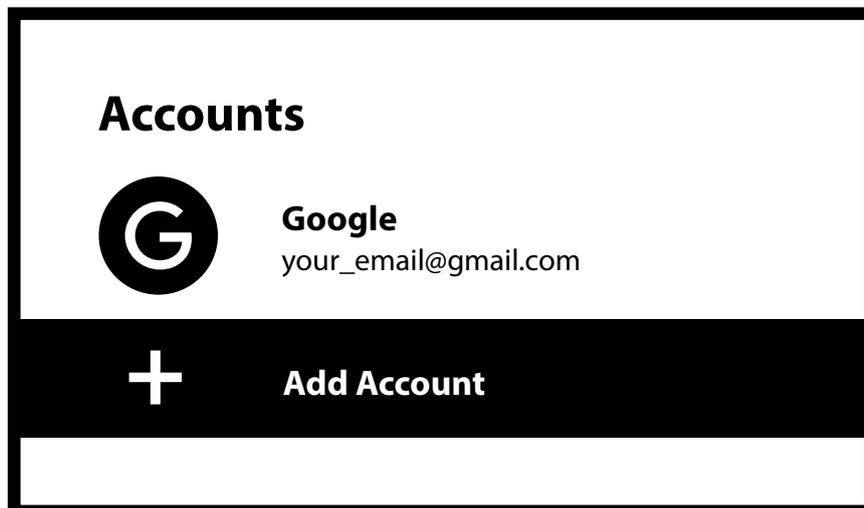

## Apps

This menu gives you supervision and an overview of your installed applications. See the recently used apps, see permissions of these apps. Reset an application if it is not functioning as expected to restart. Removing apps if there is no more interest to use this app to save memory space.

## 6.0 DEVICES PREFERENCE

This is the main menu to select to set up or change settings such as: Time & date, Language, Keyboard, Display & sound, Screen saver, Google Cast functions, Energy saver and location.

### Date & Time

Select the time zone where you are using this device to match the local time.  
You can also choose the time format: 12-hour or 24-hour clock.

### Language Settings

Under *Settings > System* select *Language* to change the language previously set.

### Keyboard

If you like to use other types of keyboard layout, select here the type you like.

### Display & sound

Under this menu select:

|  |   |
|--|---|
| <i>Display &gt; Screen resolution</i>  | to change Resolution, Color space and HDR policy.                 |
| <i>Display &gt; Screen position</i>    | to change size by zoom-in or zooming-out.                         |
| <i>CEC control &gt; CEC switch</i>     | to let TV control connected device.                               |
| <i>CEC control &gt; Volume control</i> | to allow volume control of TV or connected device.                |
| <i>CEC control &gt; Auto Language</i>  | to let sync menu language of connected device.                    |
| <i>System sound</i>                    | Select off or on the click sound when you press button on remote. |

The advanced sound settings option allows you to select the audio format provided by the chosen application. You can either keep it set to *Auto* or select *OFF* to use only the PCM (stereo) audio format.

### Home screen

Under this menu select:

|                           |   |
|---------------------------|---|
| <i>Customize channels</i> | Select which apps you like appear on Home screen.       |
| <i>Video preview</i>      | to show video previews from selected apps.              |
| <i>Audio preview</i>      | to hear audio previews from selected apps.              |
| <i>Discover</i>           | optionsto show options to discover and to customize.    |
| <i>Apps</i>               | to order the position of apps displayed in home screen. |

### Google assistance

Select whether to turn the Google Assistant function *On* or *Off* (see more details in point 9).

If the app also supports voice command search, you can enable or disable this feature as well.

If you disable the Assistant function entirely by selecting *Off*, the microphone on the remote will no longer be available for Assistant-related functions.

## 7.0 GOOGLE CAST

This device has Google Cast built-in which allows you to cast content from an Android phone or tablet to your TV screen. Simply to open a Google cast compatible app on your mobile device Navigate to the screen you wish to cast. To cast from Google Chrome, click the Settings icon : located on the top right corner of the browser on your phone or tablet, then click "Cast". To stop casting, just select again this icon and select "Stop casting".

### Google Cast

Under this menu item, select the Notification settings you prefer. Select options: *Always, while casting* or *Never*.

### Screen saver

Select here selected time that screensaver needs to start when there is no activity.

### Energy saver

Select here selected time to turn off the display screen when there is no activity at all.

Default is set to 3 hours. Options: 15min, 30min, 1, 3, 4, 8, 12, 24 hours or never.

### Location

Google uses your location to enhance performance and improve user experience while using apps.

Select the *Location Status* to activate or turn *Off*.

## 8.0 REMOTE & ACCESSORIES

This menu allows you to add new Bluetooth devices. Like remote, keyboard, speakers.

### Bluetooth Pairing

Select *Add accessories* and press *OK* on the remote to start searching for other Bluetooth devices. If any devices are found, they will appear on the right side of the menu. Select the device you want to pair and press *OK* again. In some cases, you may need to enter a PIN code to complete the pairing process. Follow the instructions on screen in this case.


### Remove a Bluetooth Device

Select the Bluetooth device you want to remove from the access list under the *Remote & Pairing* menu. Press *OK* on the selected device to open options to *Remove (Unpair)* or *Rename* the device. The battery level of the selected remote will be displayed.

## 9.0 ABOUT

### About

You can check information about your device by clicking on *About* under *Settings Device Preferences* Menu. This screen will show you the model of your device, version, firmware version and more. You can also update your system by clicking on *System update* from this menu.

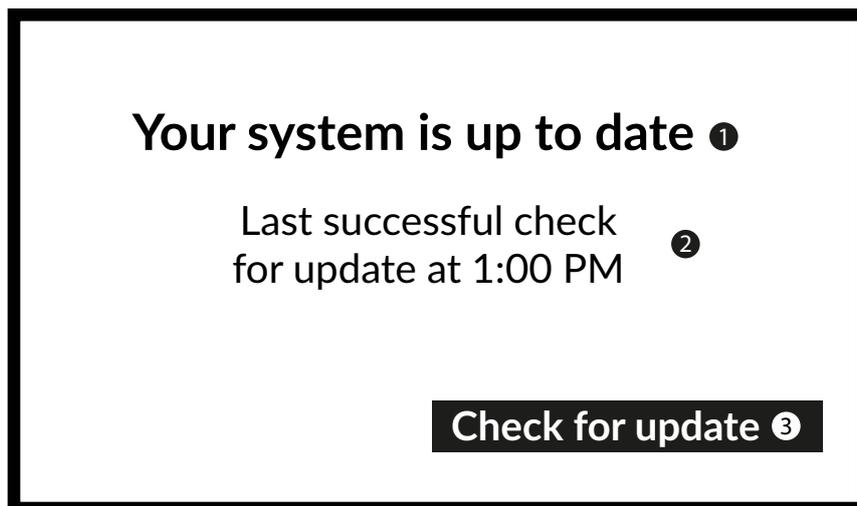

### Factory reset

If the Android TV stick reacts strangely, even after checking all settings or if you want to remove all accounts and apps and restore the device to its original state, select *Factory reset* to reset or restore.

Under *Settings* select *Device Preferences About Factory reset*, Press *OK* and confirm *Factory data reset* to erase everything.


Once this option has been selected, all manually installed apps and user data will be permanently deleted.

**NOTE:** Account(s) will also be deleted.

## 10.0 DOWNLOADING APPS

Apps are available for download on the *Google Play Store*. Select in this application *Search* and type the name or press the microphone and say the name of the app you want to install.

If the app appears on the screen, select *Install* to begin the installation of the app.

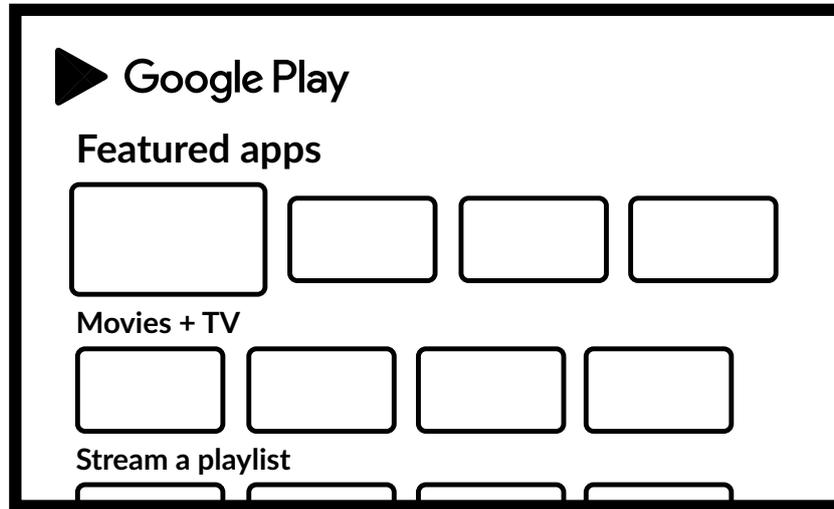

## 11.0 GOOGLE ASSISTANT

**Say it to Play it.**

Ask it to play your favorite show, video, or music. Or find the latest blockbuster to enjoy.

**Movies & TV shows:**

Play *Squid Game* on Netflix. Video clips: Play cat videos. Apps: Open YouTube. Search: Search for sitcoms.

Info: Tell me about the new *Gladiator* movie.

**Control**

Playback: Pause. Stop. Resume Volume: Louder. Softer. Power: Turn off.

**Play music, news, or podcasts**

Music: Play music by Harry Styles. (Learn how to choose your music service provider.) News: Play the news. What's the latest news from BBC?

**Ask Google**

What is the weather like in Paris? Sports: How did the Patriots do? When is the next Warriors game? Calculations: What's 20% of 80? Dictionary: What does "ludic" mean?

Find answers: How far away is the moon? How do you remove stains in a rug? Unit conversions: How many teaspoons in a cup?

Speak into the microphone of your Voice Search remote.

Learn more about the Google Assistant on [assistant.google.com](https://assistant.google.com) or say "What can you do?" Just ask question like: "How is the weather in Paris?"

To get started, press the Google Assistant button on your remote.

## 12.0 SIMPLE TROUBLESHOOTING

| Issue  | Possible Reason  | Solution  |
|--|--|---|
| No LED of menu display after power on                      | The power adapter is not properly connected  | Make sure the device is connected to the power  |
| No Sound   | The TV is on Mute or volume is low.<br>The device is on Mute or the volume is too low              | Press the mute button to restore the sound and increase the volume  |
| Failed to connect to network                               | Wi-Fi is turned off or the signal is too weak  | Restart the Wi-Fi or adjust the position of the device closer to the router   |
| Remote Control Failure<br>Not possible to use and control. | Lost pairing to TV stick<br><br>Remote control batteries are low in power.<br><br>Remote is broken | Call Bluetooth Pairing to pair again. Follow Remove power, Insert power wait until "Google LOGO" appears on screen. Press on remote BACK & HOME for 3 seconds until LED is blinking, wait until pair screen appears. Now it will pair<br><br>Replace batteries or send the device to the local maintenance service station for checking |
| No Picture on Screen                                       | Wrong TV HDMI input  | Make sure that correct HDMI is selected as your TV input  |
| Voice search on remote is not working                      | Remote is not paired to the Google TV Stick  | See the Pairing Bluetooth Device section in this guide  |
| No Audio   | Audio Settings not configured correctly for your TV  | Settings > Display & Sound<br>> Advanced sound settings   |

## 13.0 TECHNICAL SPECIFICATIONS

### Video decoder

|                   |   |
|-------------------|---|
| Aspect ratio:     | 4:3 and 16:9 aspect ratio   |
| Video resolution: | 480i, 480p, 576i, 576p, 720p, 1080i, 1080p24, 1080p30, 1080p60                  |
| Video format:     | HEVC H.265, MPEG-4,MP@ML, MP@HL profiles, AV1, VC-1/VP8/VP9, HDR10, HDR10+, HLG |

### Audio decoder

|                 |  |
|-----------------|--|
| Audio decoding: | MPEG Audio Layers 1, 2 &3, MPEG-4 Audio, AAC LC, AAC LC + SBR Level 2, AAC 5.1, HE AAC Level 2 & Level 4, Dolby Audio Passthrough* |
|-----------------|--|

\*Dolby Digital Plus, Dolby Digital and the double-D symbol are registered trademarks of Dolby Laboratories

### System & Memory

|                  |   |
|------------------|---|
| Android Version: | 11  |
| Chipset:         | Amlogic S805X2 Quad A35<br>15000 DMIPS<br>32K I/D cache<br>512KB L2 cache<br>ARM G31 MP2<br>OpenGL ES 3.2 Graphics engine |
| SDRAM:           | DDR4: 1 GB  |
| Flash:           | eMMC: 8 GB  |

### Connectors

HDMI  
Micro USB port

### General data

|                               |   |
|-------------------------------|---|
| Wi-Fi:                        | IEEE 802.11b/g/n, 2.4 GHz<br>IEEE 802.11a/n/ac, 5 GHz |
| Bluetooth:                    | 5   |
| HDMI                          | HDMI 1.4 with CEC                                     |
| Power supply:                 | AC 110 - 240 V AC ~ 50/60 Hz                          |
| Input voltage:                | DC 5 V, 1 A   |
| Power consumption working:    | 5 W   |
| Operating temperature range:  | 0 ~ +45 °C  |
| Storage temperature:          | -10 ~ +70 °C  |
| Dimensions (W x D x H) in mm: | 90 x 30 x 15  |
| Weight:                       | 35 g  |

### Data Protection:

Please be aware that STRONG, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. STRONG, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you.

Additionally, please keep in mind that some services provided - already in the device or installed by you - may request a registration for which you have to provide personal data.

Besides that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that STRONG cannot be held liable for a possible breach of data protection by services not pre-installed.

\* Availability of apps depending on the country. STRONG cannot be held liable for services by third parties. Offers by third parties may be changed or removed at any time, may not be available in all regions and may require a separate subscription.