



GE-GS 18 Li - Solo

Cordless Pruning Saw

Item No.: 3408220

Ident No.: 11016

Bar Code: 4006825618389

The Einhell GE-GS 18 Li - Solo cordless tree pruning saw is a reliable helper in the garden. Thanks to its high-quality features the cordless tree pruning saw with a blade length of 150 millimeters will even cut through very thick branches with diameters of up to 90 millimeters effortlessly. The saw blade on the Einhell cordless tree pruning saw can be changed quickly and easily because no tools are required to do so. The removable branch handle enables branches to be cut easily in every situation and therefore contributes to tireless working and a perfectly firm hold. The GE-GS 18 Li – Solo cordless tree pruning saw is equipped with a high-quality saw blade "Made in Switzerland". The battery and charger are available separately.

Features


- Easy blade change without tools
- Removable branch handle for cutting branches easily
- Softgrip for comfortable operation and a perfectly firm hold
- High-quality saw blade "Made in Switzerland"
- Without battery or charger

Technical Data

- | | |
|---------------------------------------|--------|
| - Saw blade length | 150 mm |
| - Cutting depth without branch handle | 90 mm |
| - Cutting depth with branch handle | 70 mm |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 1.14 |
| - Gross weight (kg) | 2.57 |
| - Pieces per export carton | 6 Pieces |
| - Gross weight of export carton | 15.42 kg |
| - Container quantity (20"/40"/40"HC) | 3114 6468 7728 |

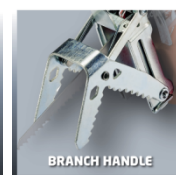

Illustrations can contain accessories, which are not included in standard extent of delivery

Illustration similar (in design), production-wise modifications reserved

GS mark belongs to the product itself only, excluded accessory

Generated at: 06.10.2016 09:53

Page 1

Available as special accessories



18V 30min Power-X-Change
PXC-Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 1,5 Ah Power-X-Change
Battery
Item No.: 4511340
Bar Code: 4006825590586
Einhell Accessory



18V 5,2 Ah Power-X-Change
Battery
Item No.: 4511357
Bar Code: 4006825598865
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory