




1

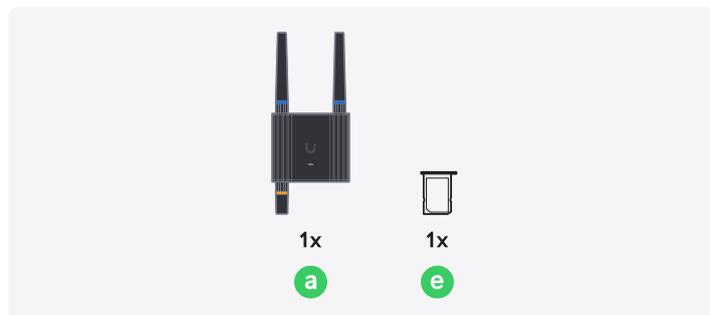

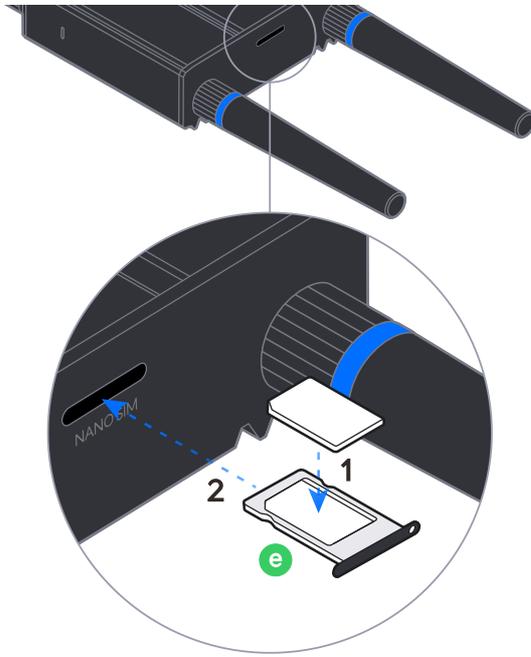


2


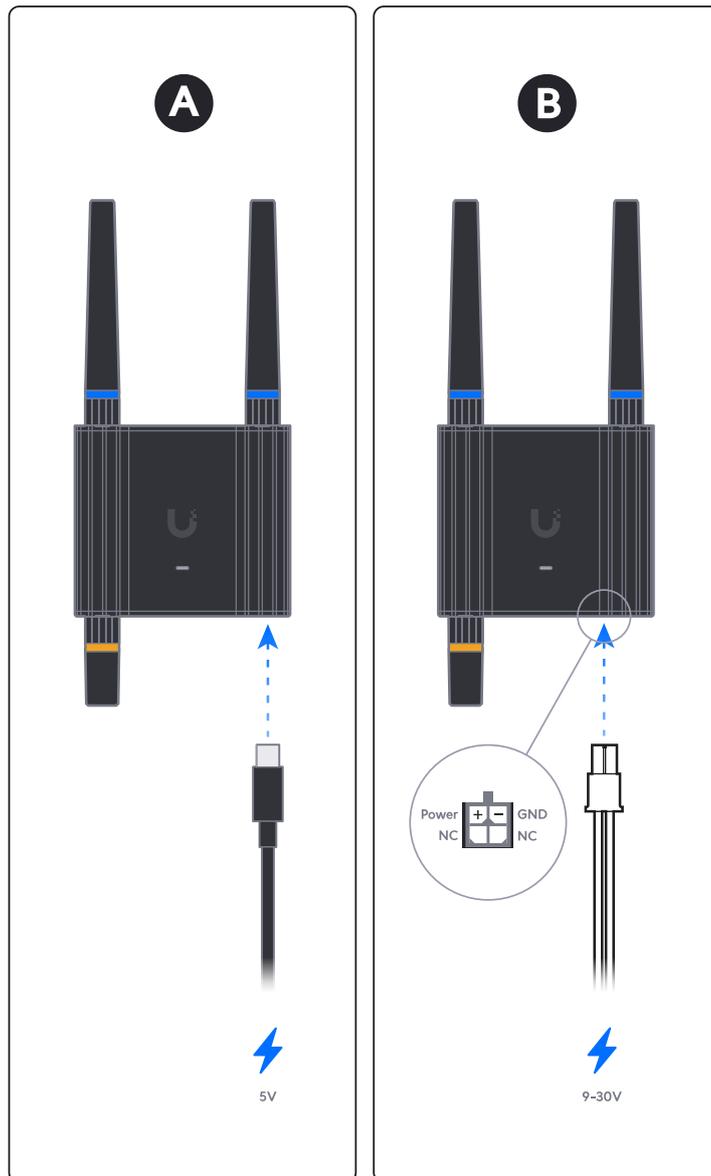


Power on and initialize (up to 2.5 min).


3

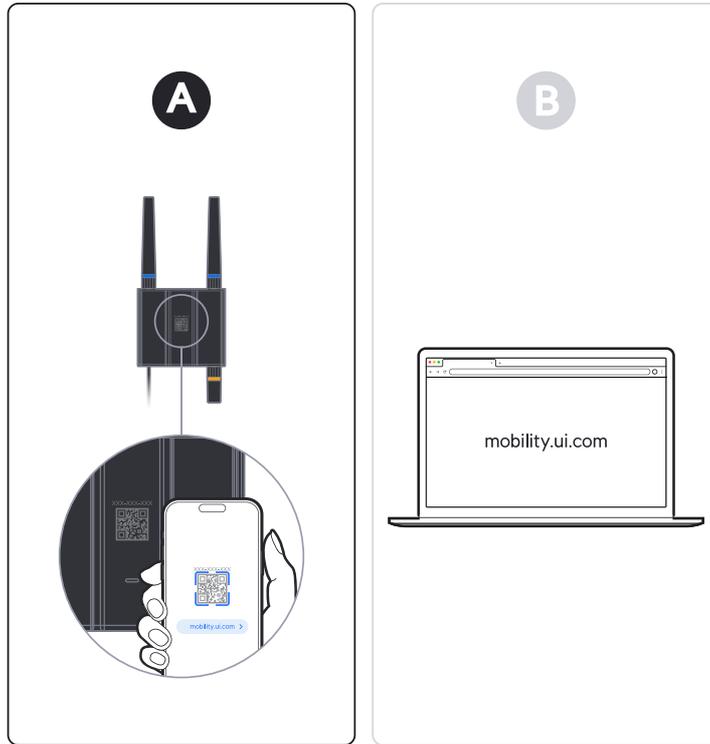


4

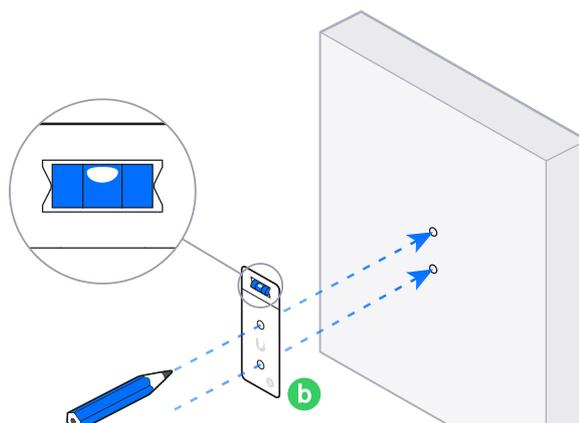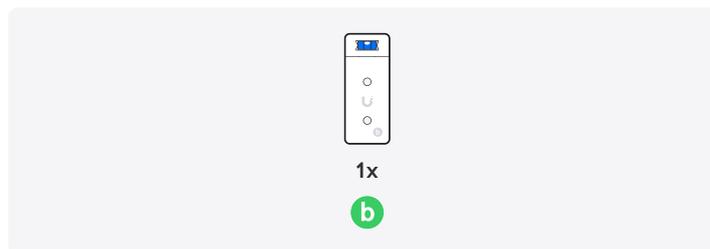


5

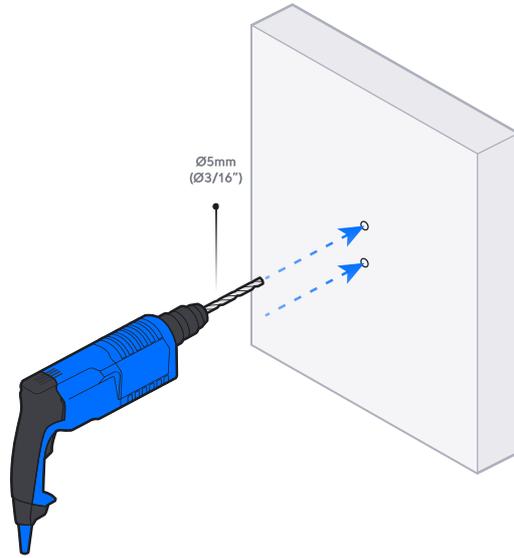

6

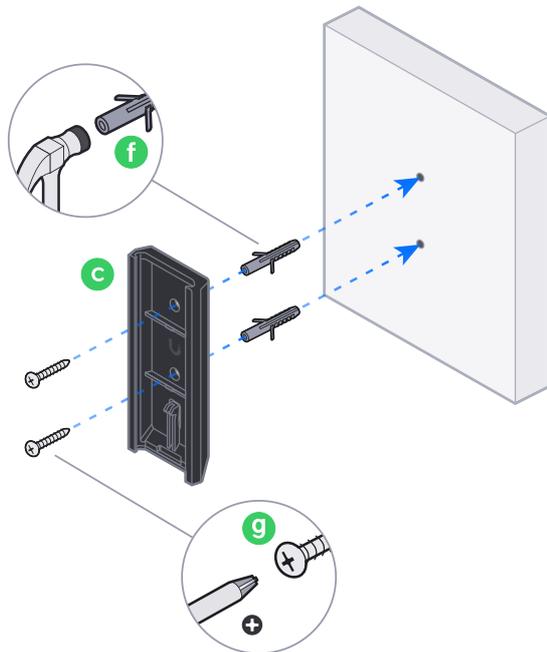

7

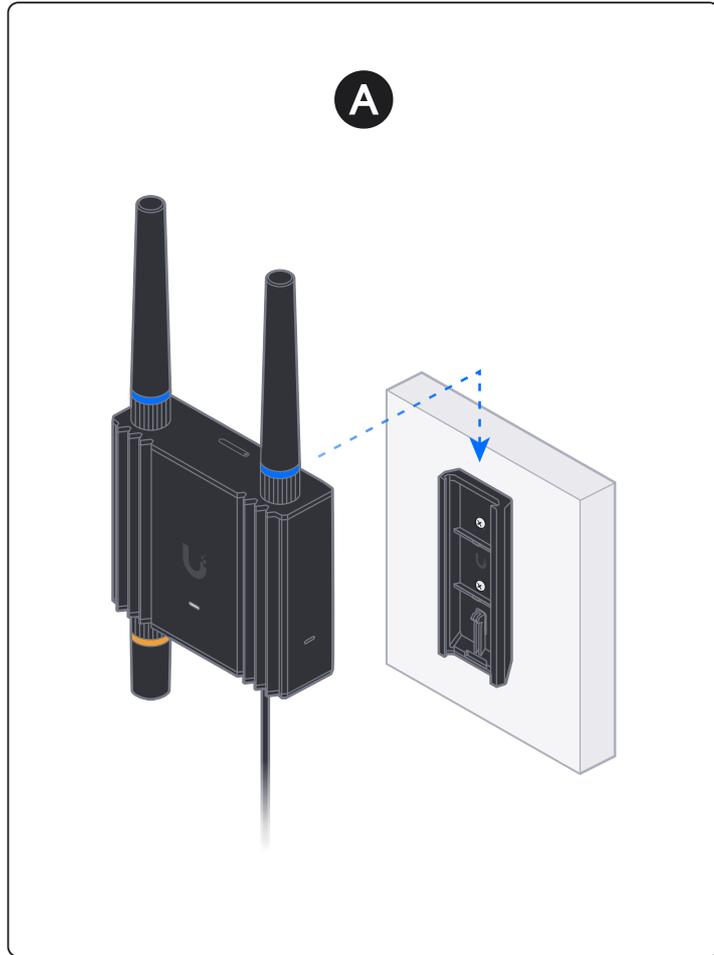




- Steady White Device ready for setup.
- Steady Blue Setup successful. Continue at mobility.ui.com.
- ⏸ Flashing White Unable to activate SIM. Check SIM PIN and APN.


 Flashing Blue Unable to connect to the LTE network.
Relocate the device or contact your ISP.

For more details please visit mobility.ui.com/doc/led.

1

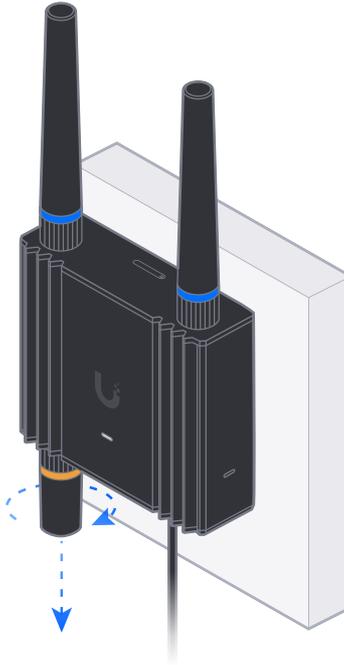


2

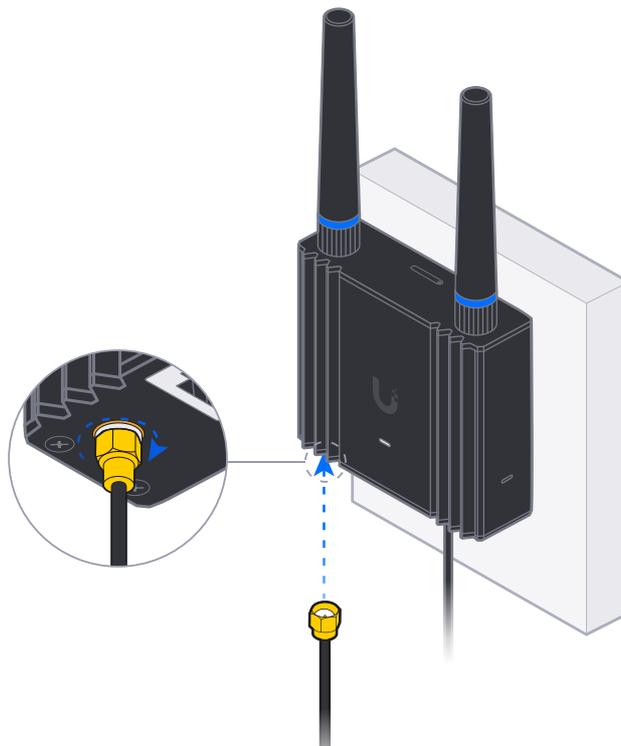



1x

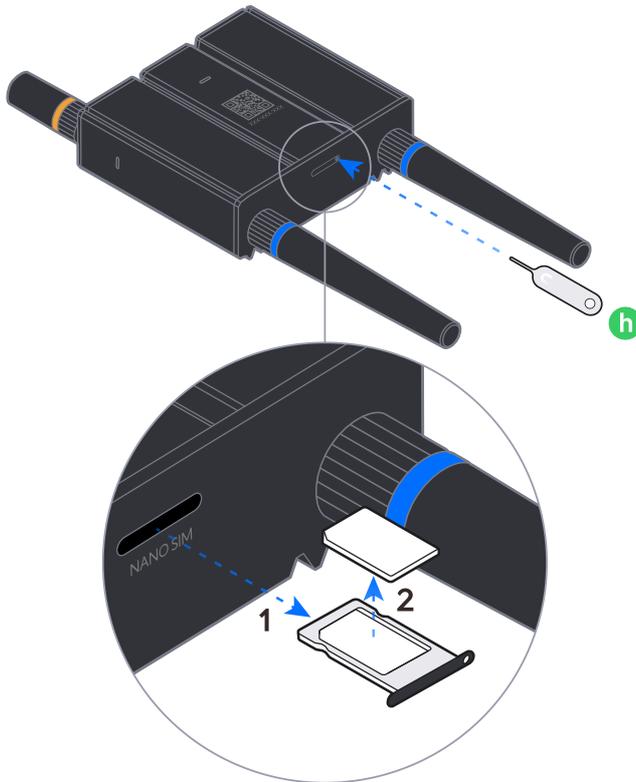

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

