

 







Dell Pro P 24 USB-C hubbskärm med webbka-
mera

 


P2426HEV



Snabbstartsguide




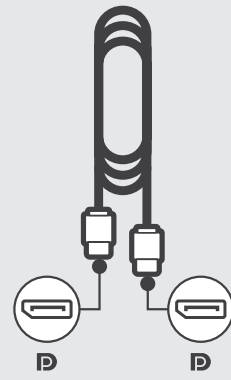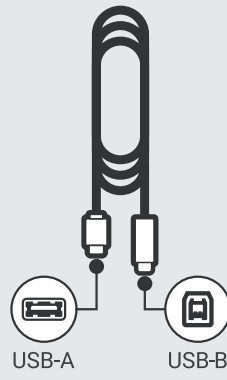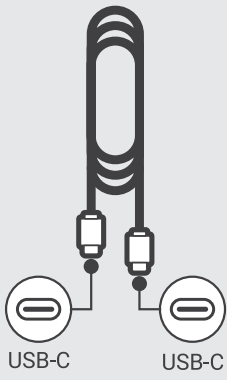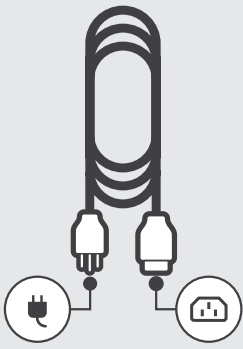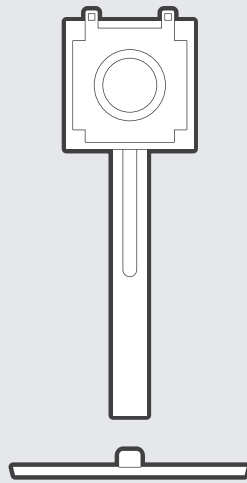


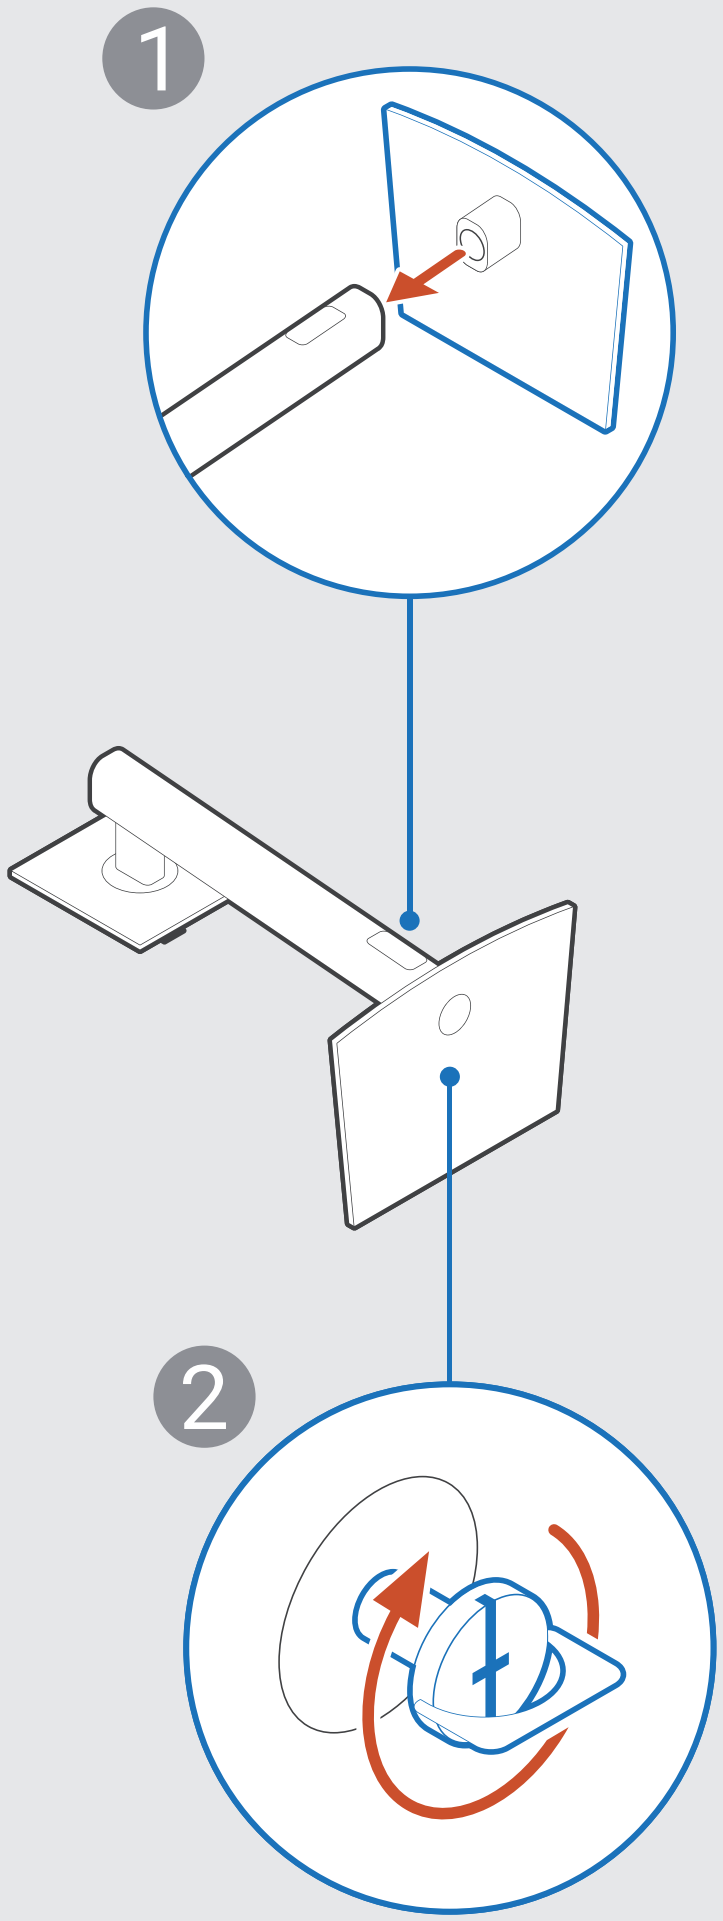


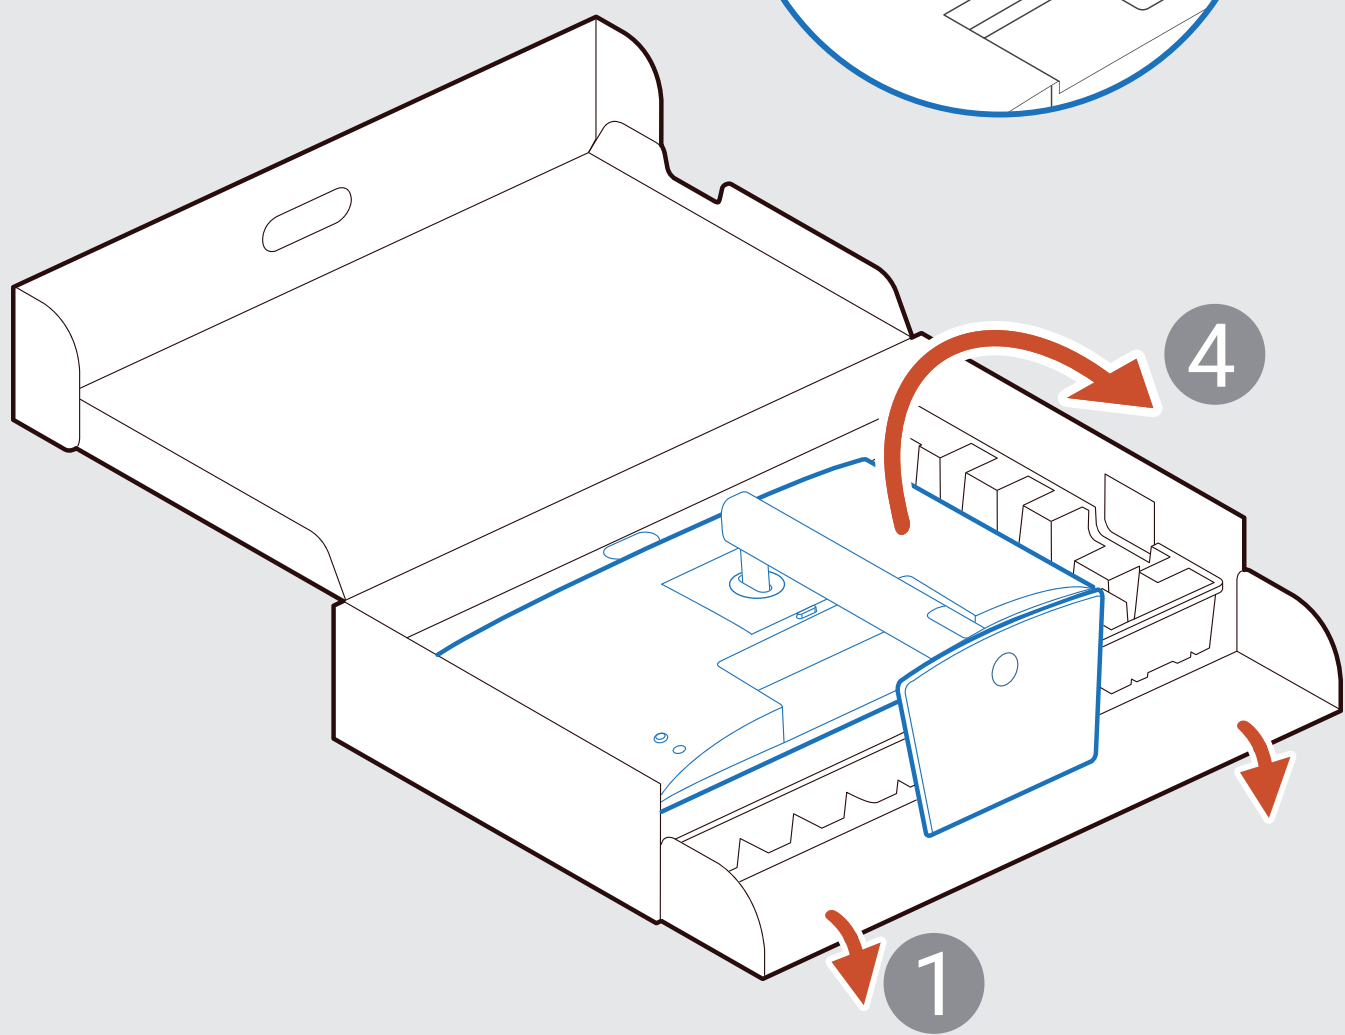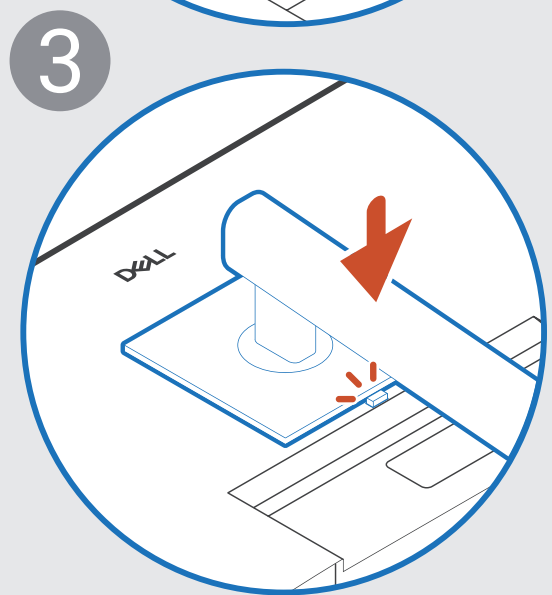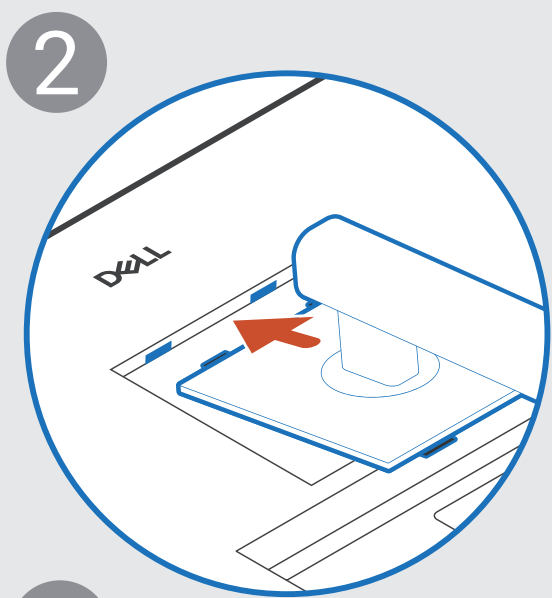


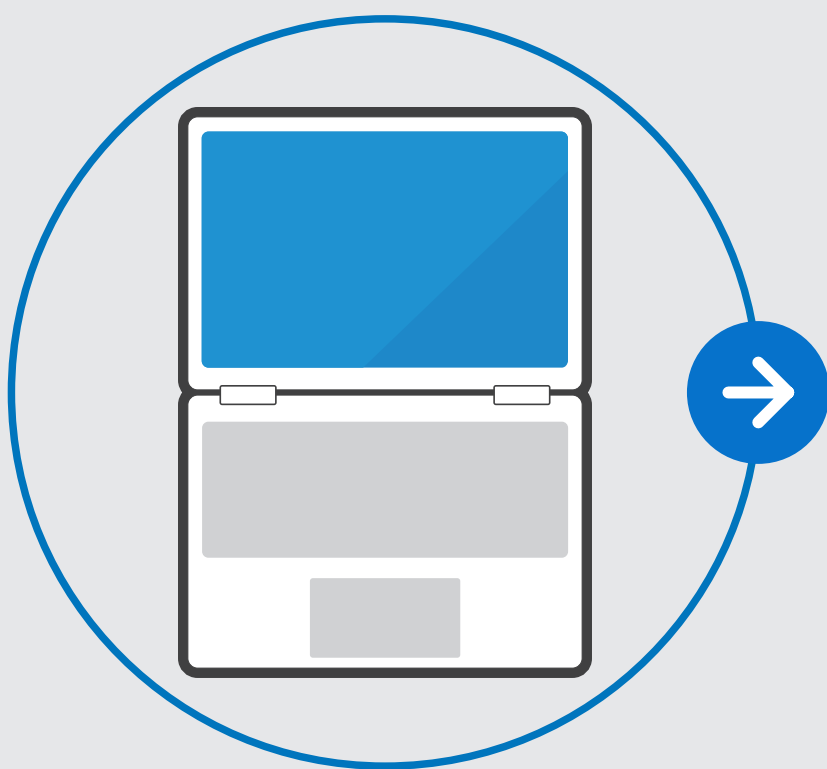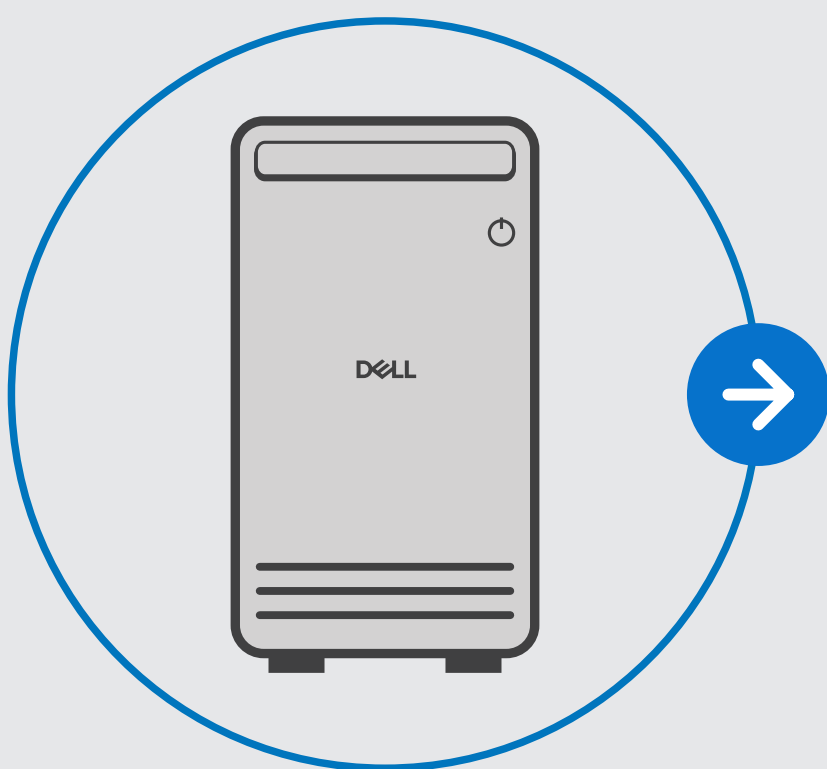

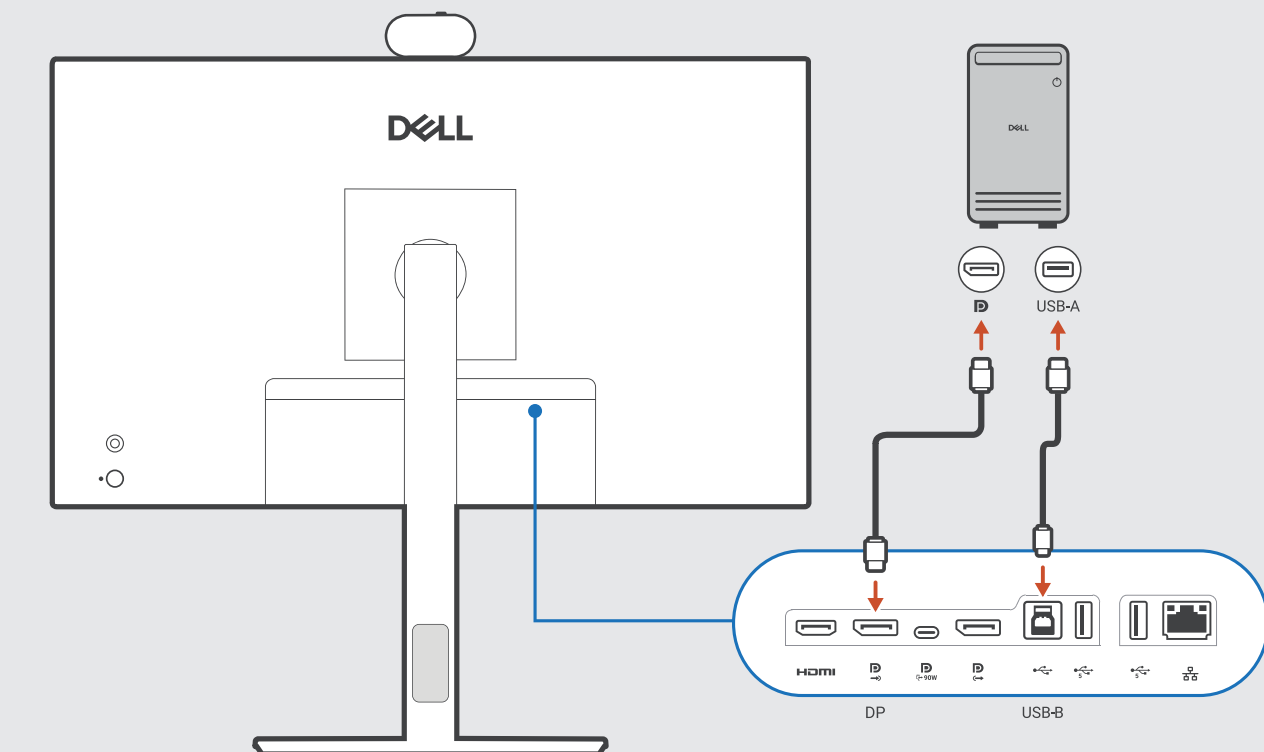


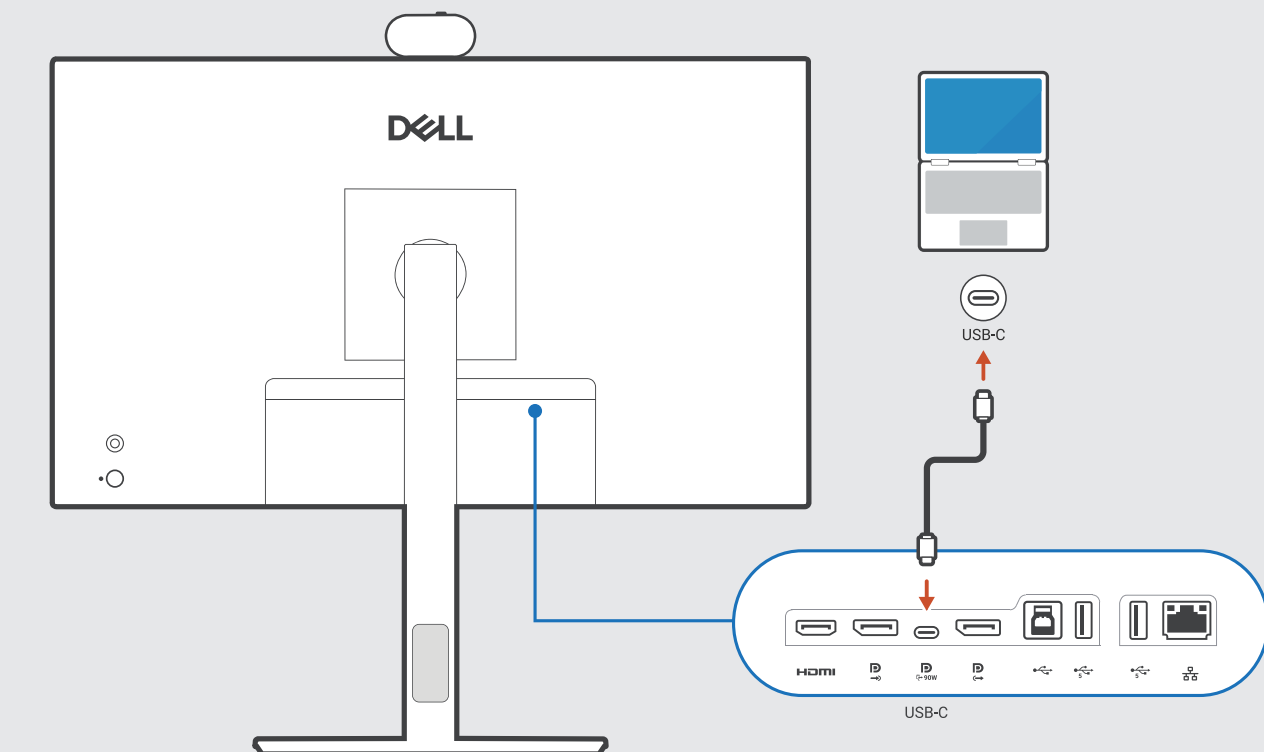

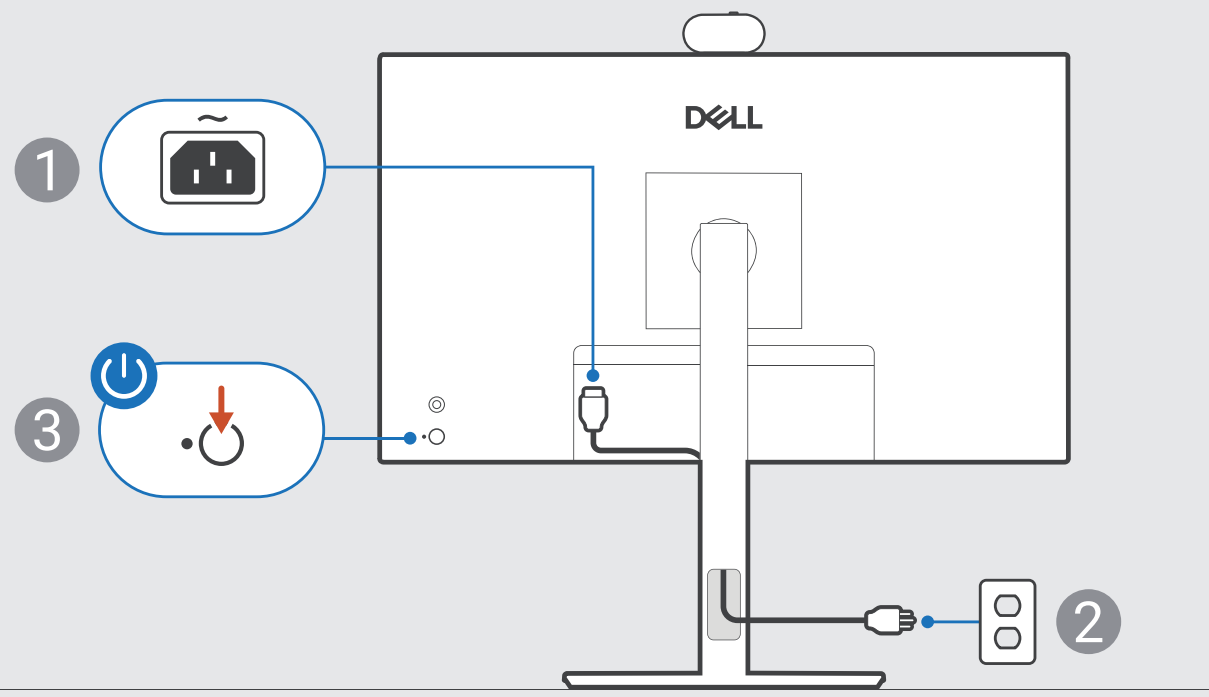


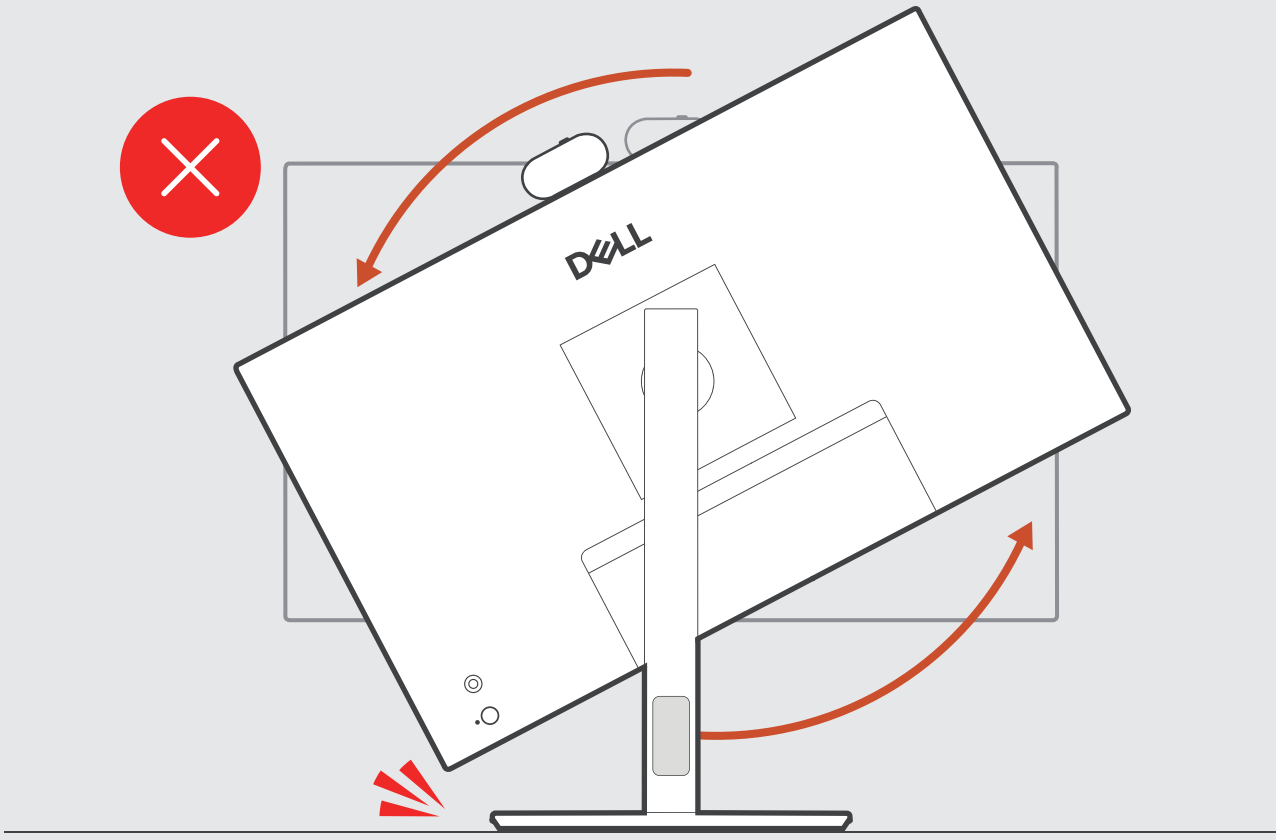



1


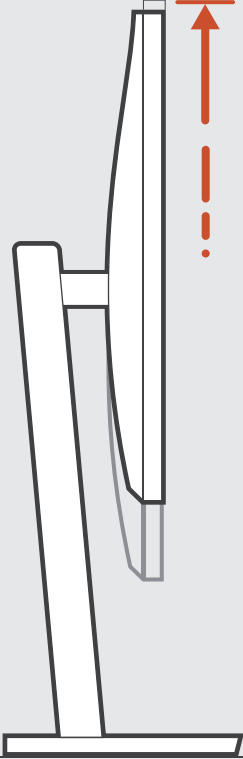




2

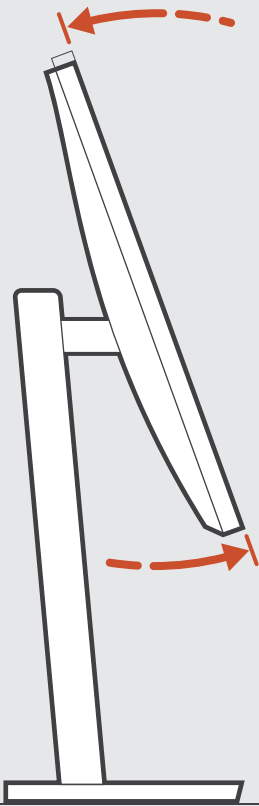


3

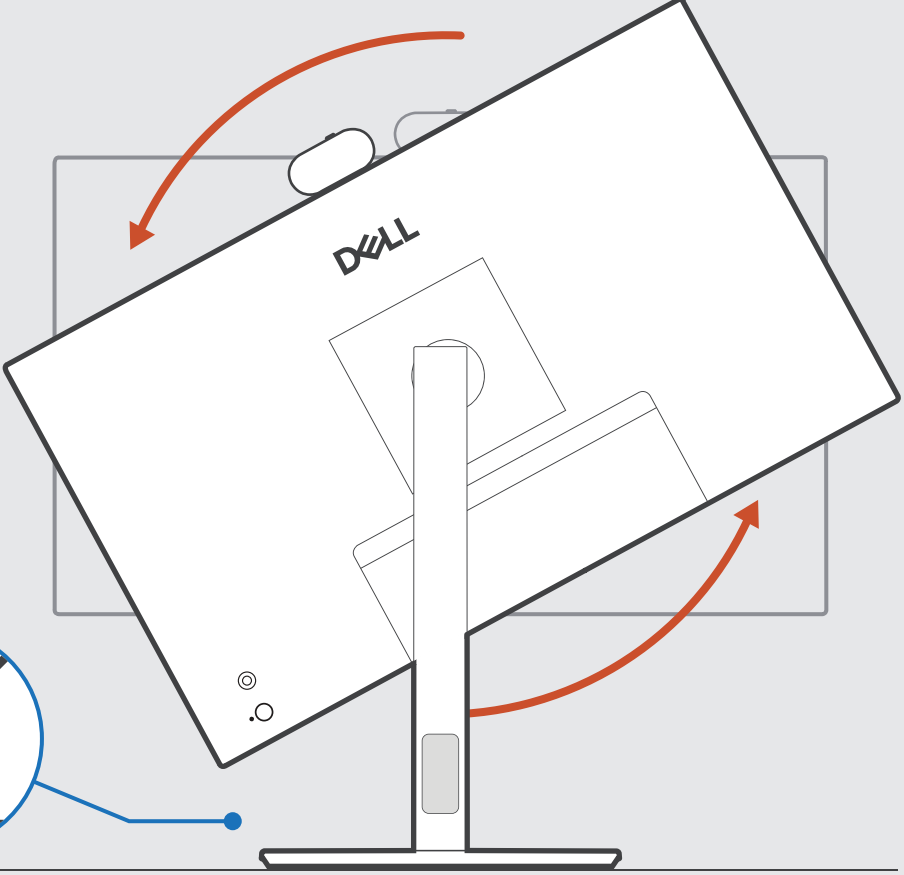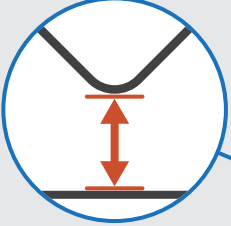


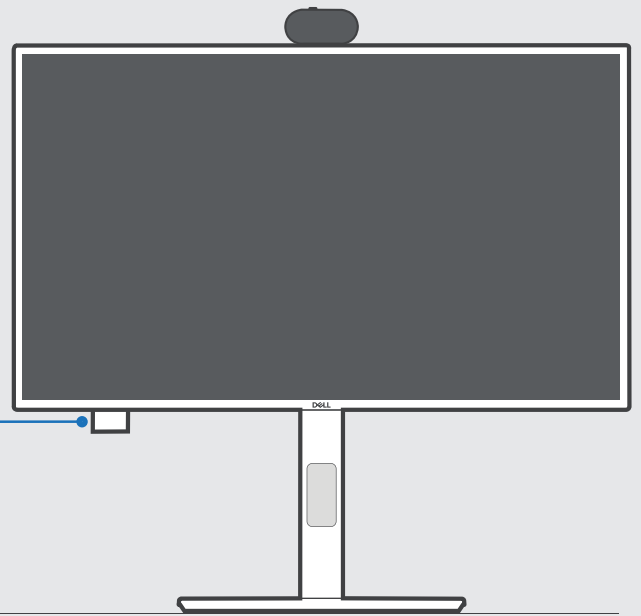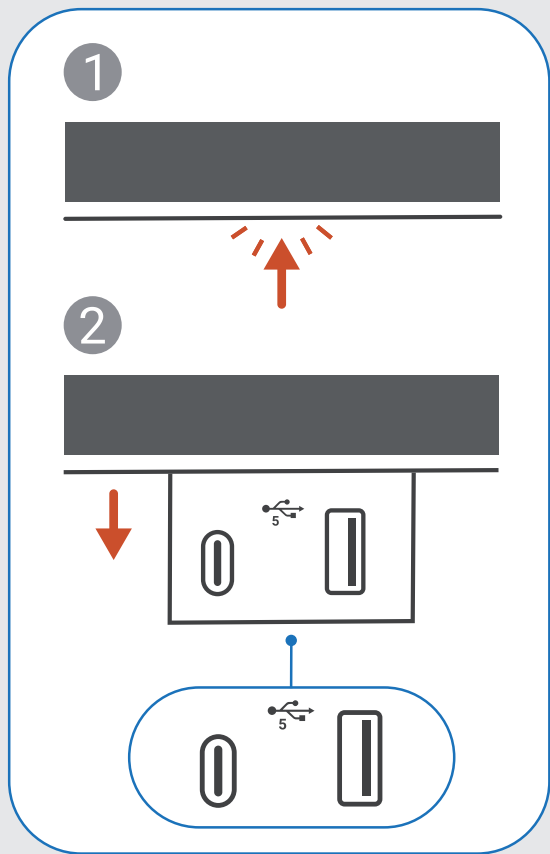

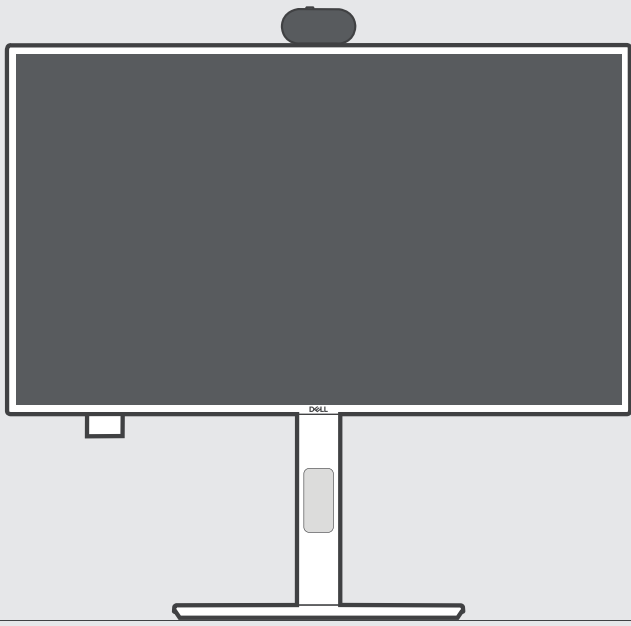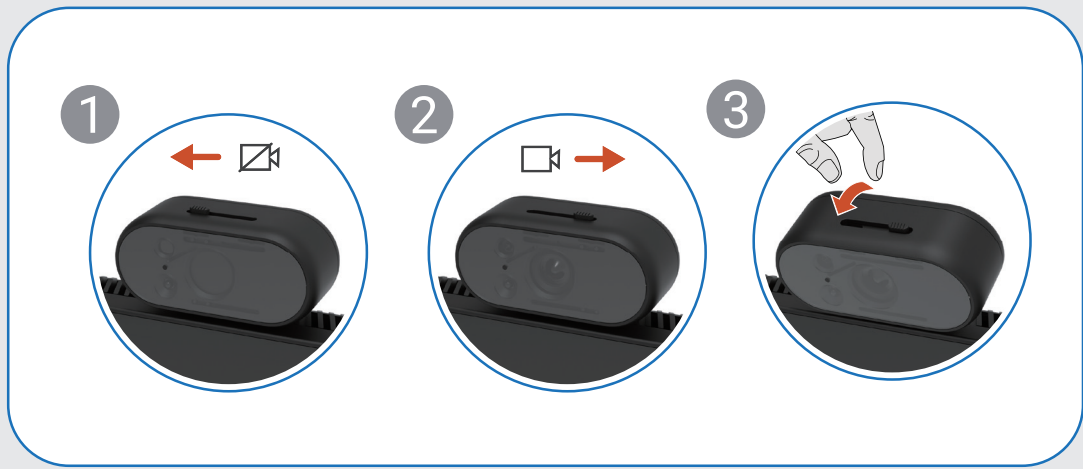  


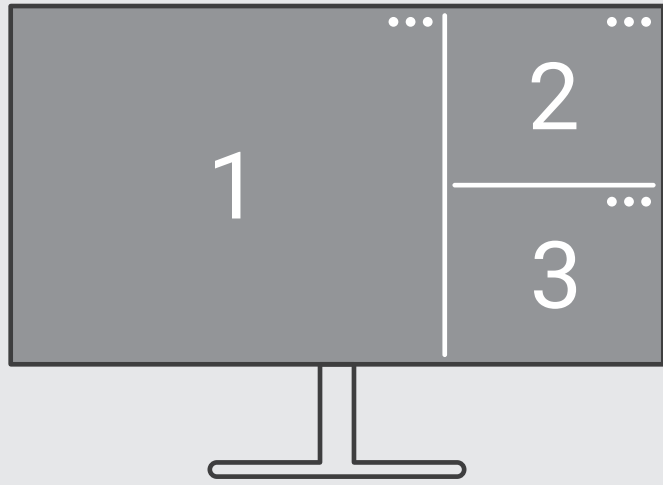


Dell Display and Peripheral Manager
Dell.com/support/ddpm

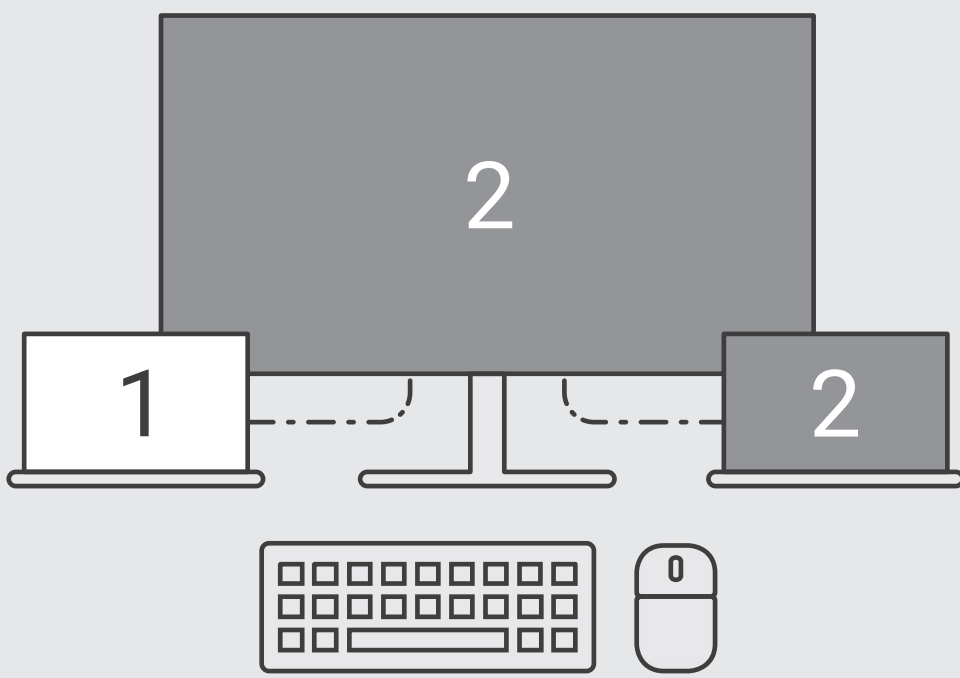

KVM

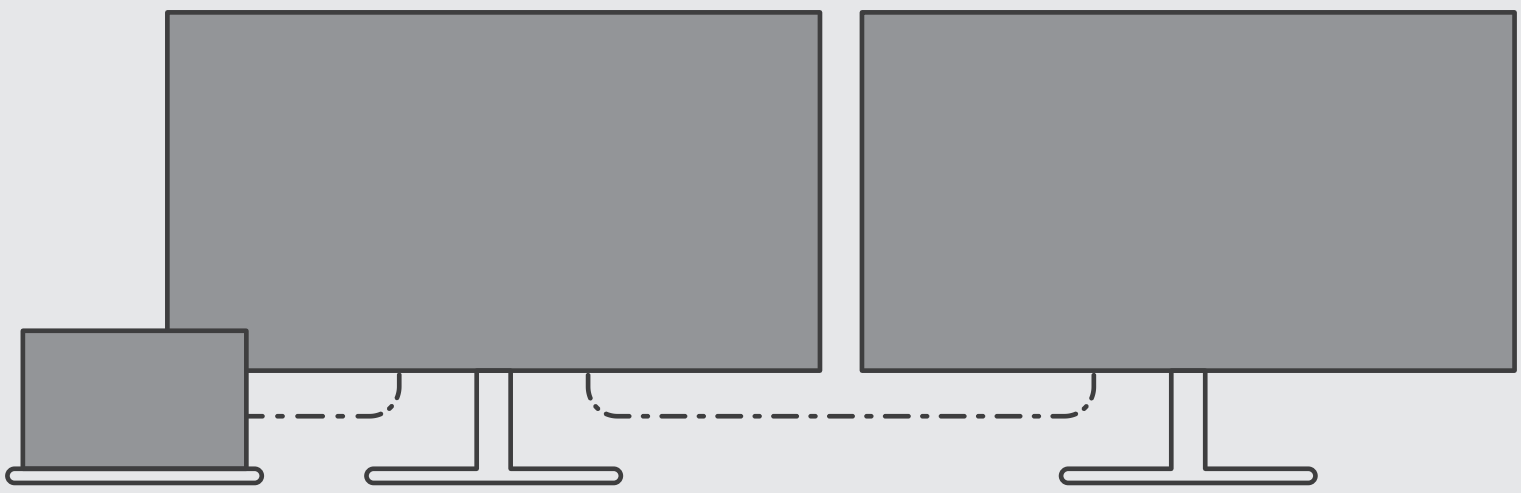

Kedjekoppling

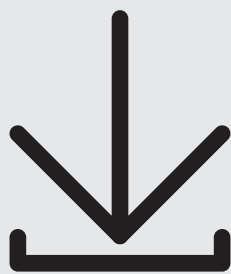

Dell.com/support/P2426HEV