



Dell Pro P 22 Bildskärm

P2226H

Dell Pro P 24 Bildskärm

P2426H

Dell Pro P 24 16:10 Bildskärm







P2426

Dell Pro P 27 Bildskärm


P2726H




Snabbstartguide





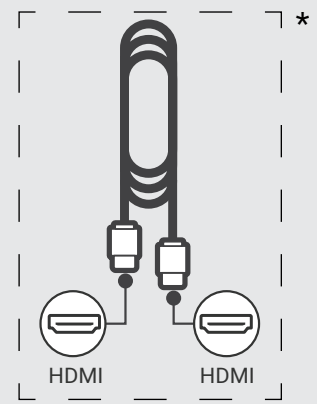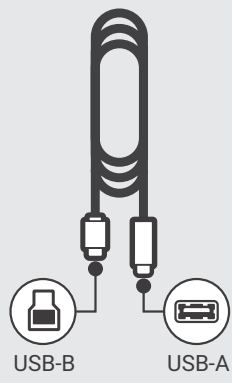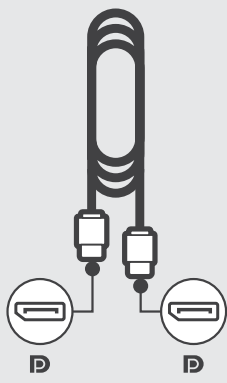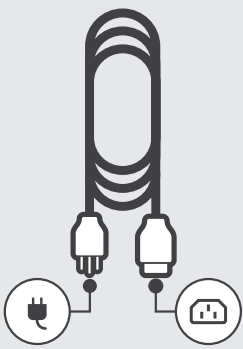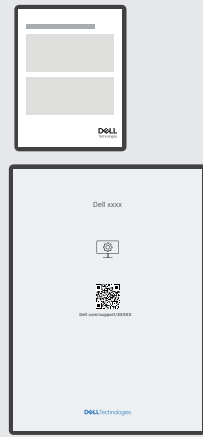
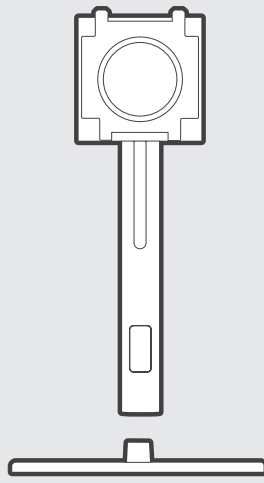




*Endast i utvalda länder

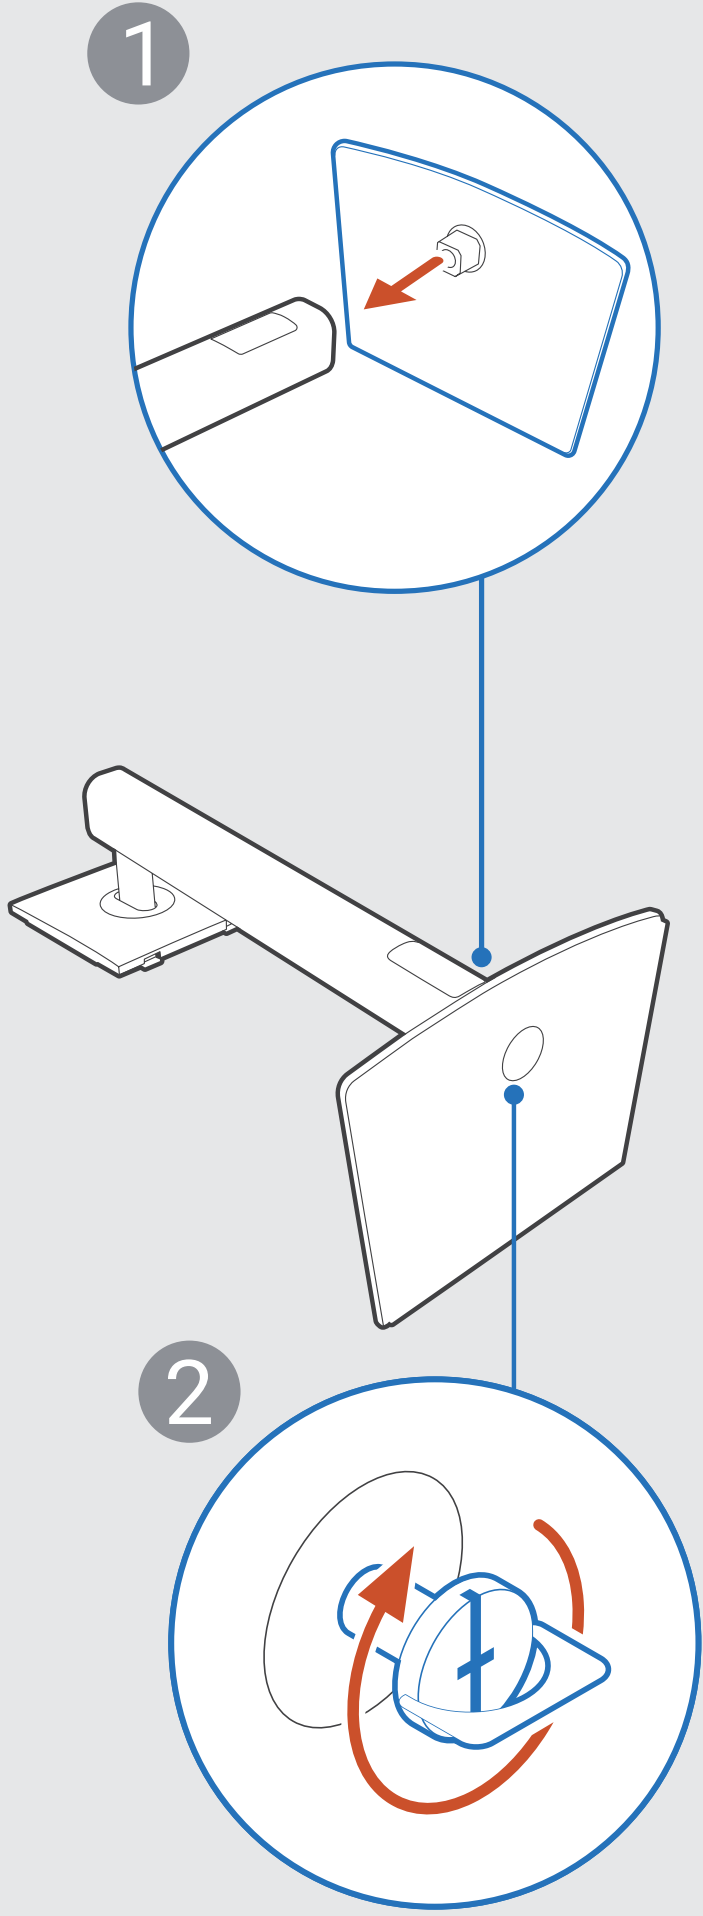


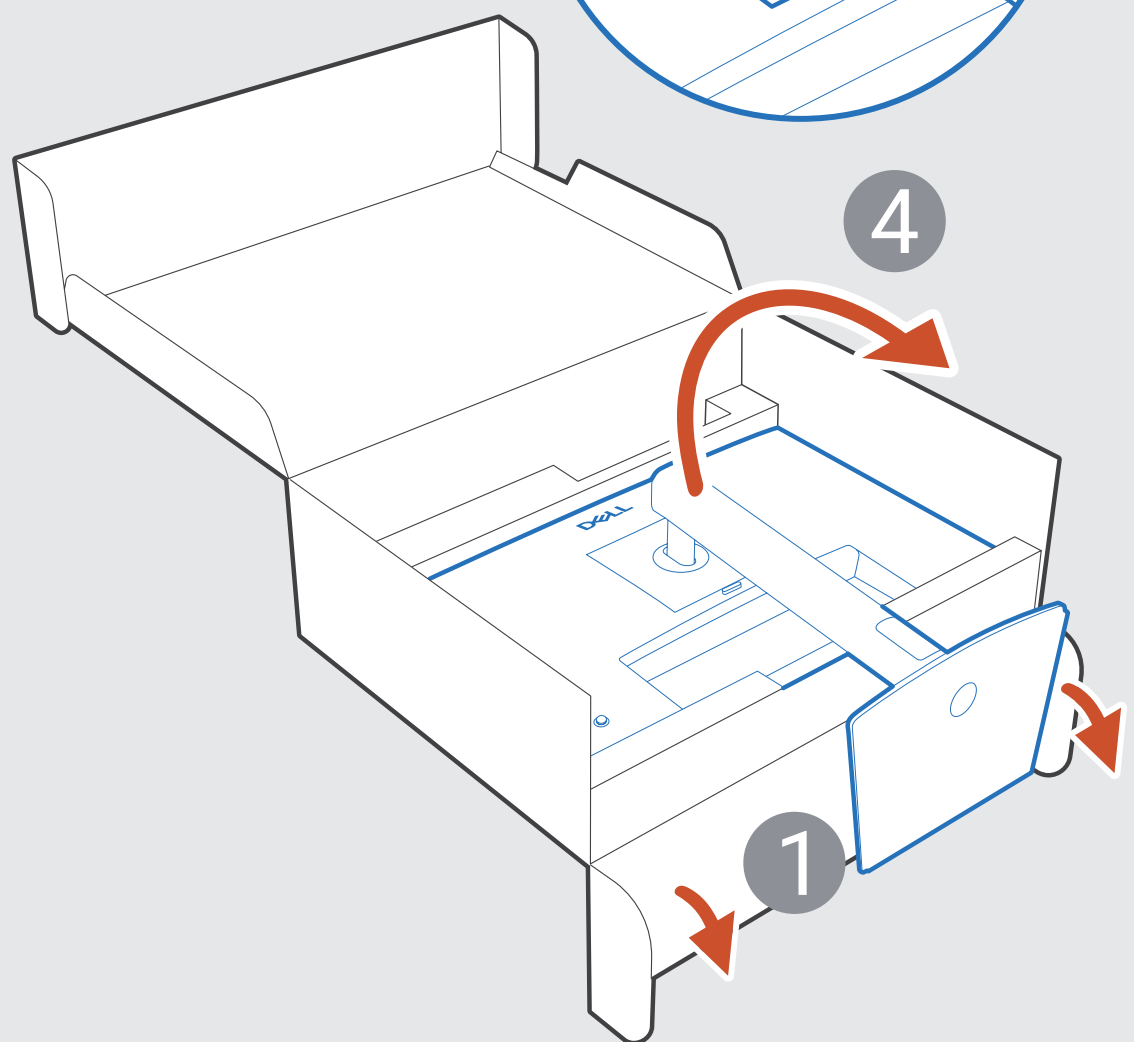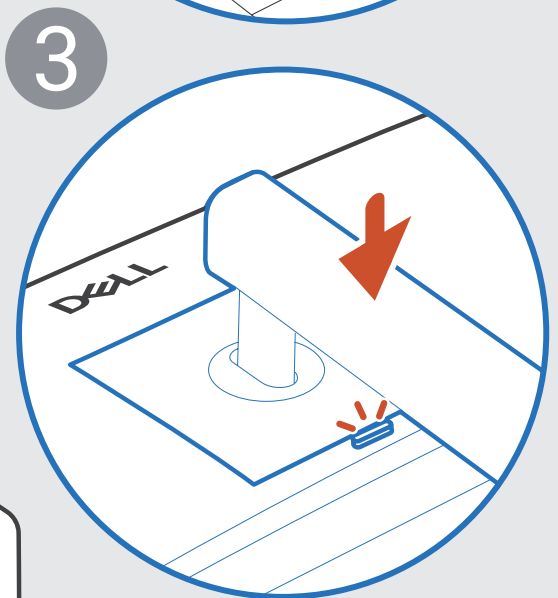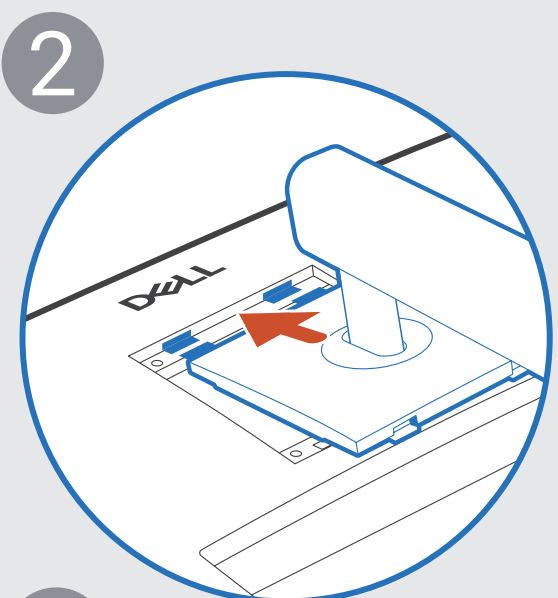


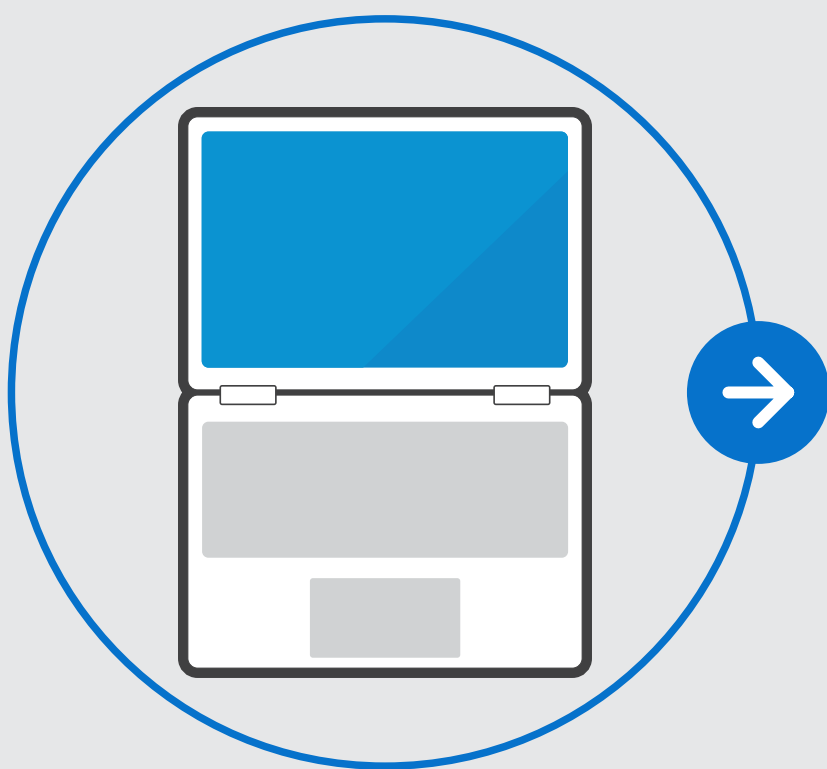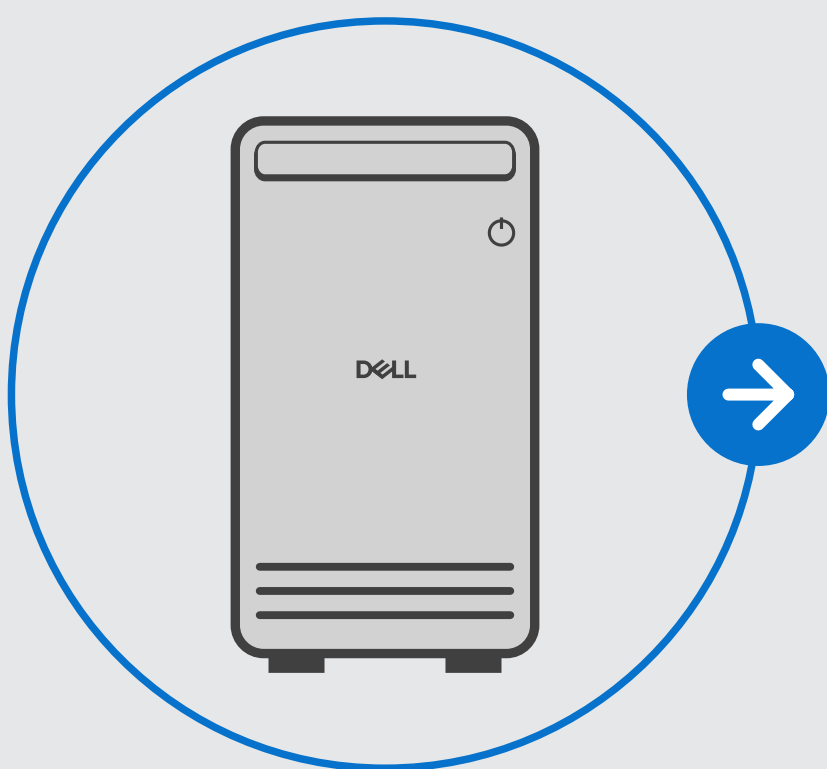

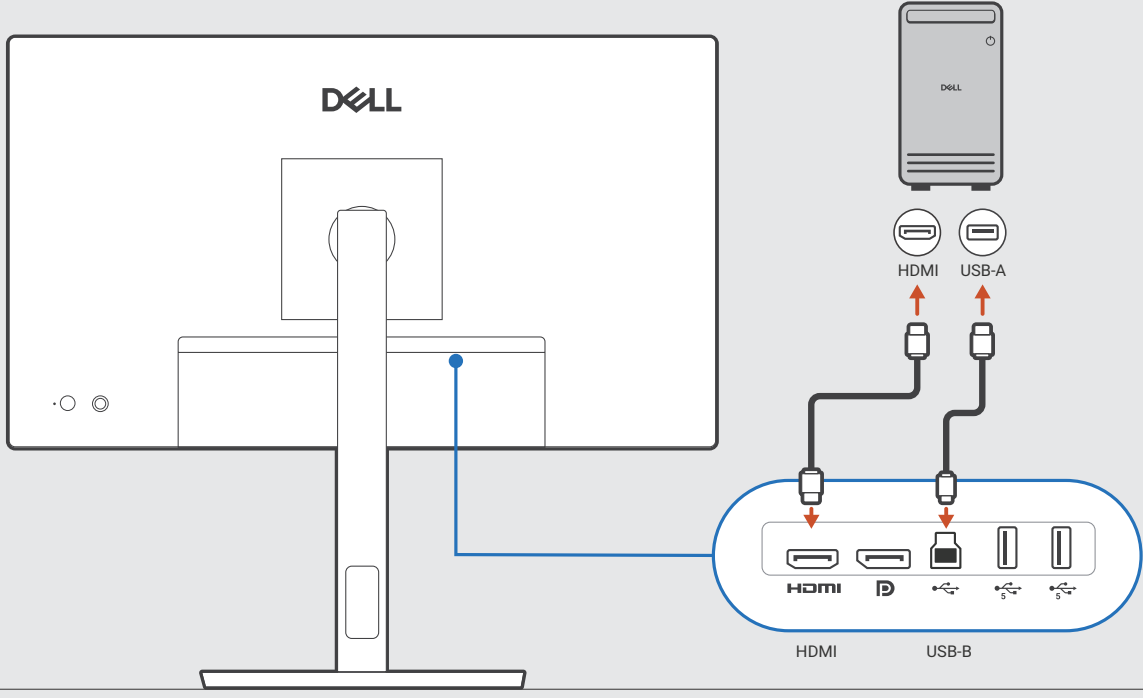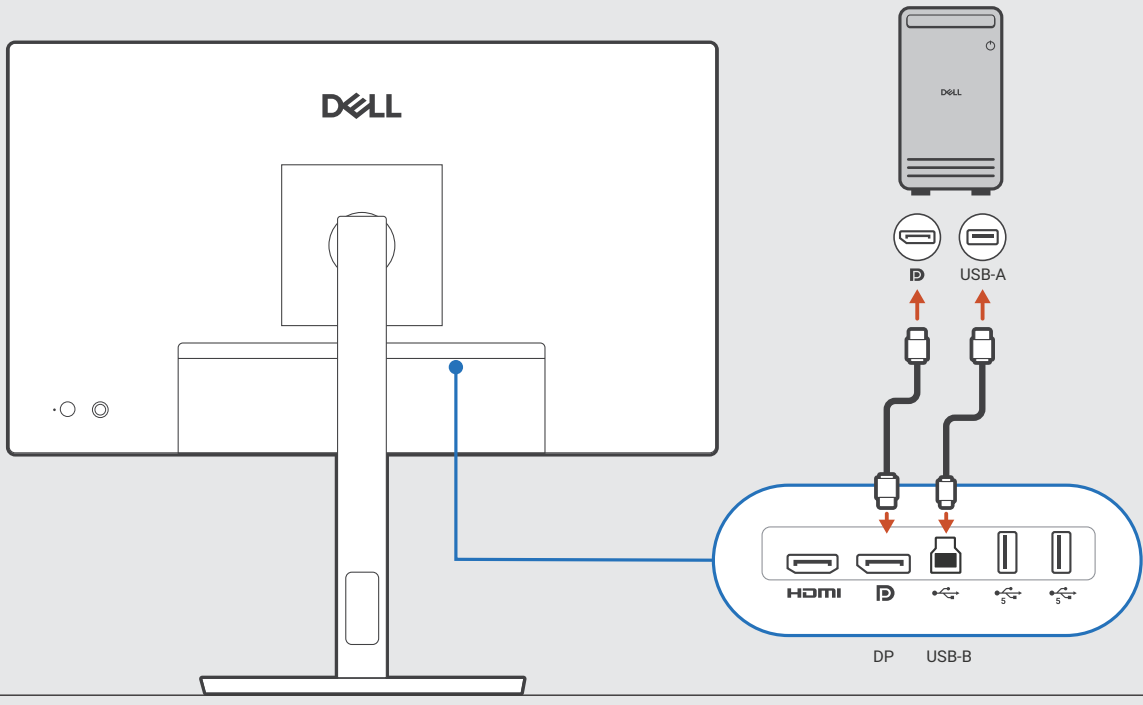


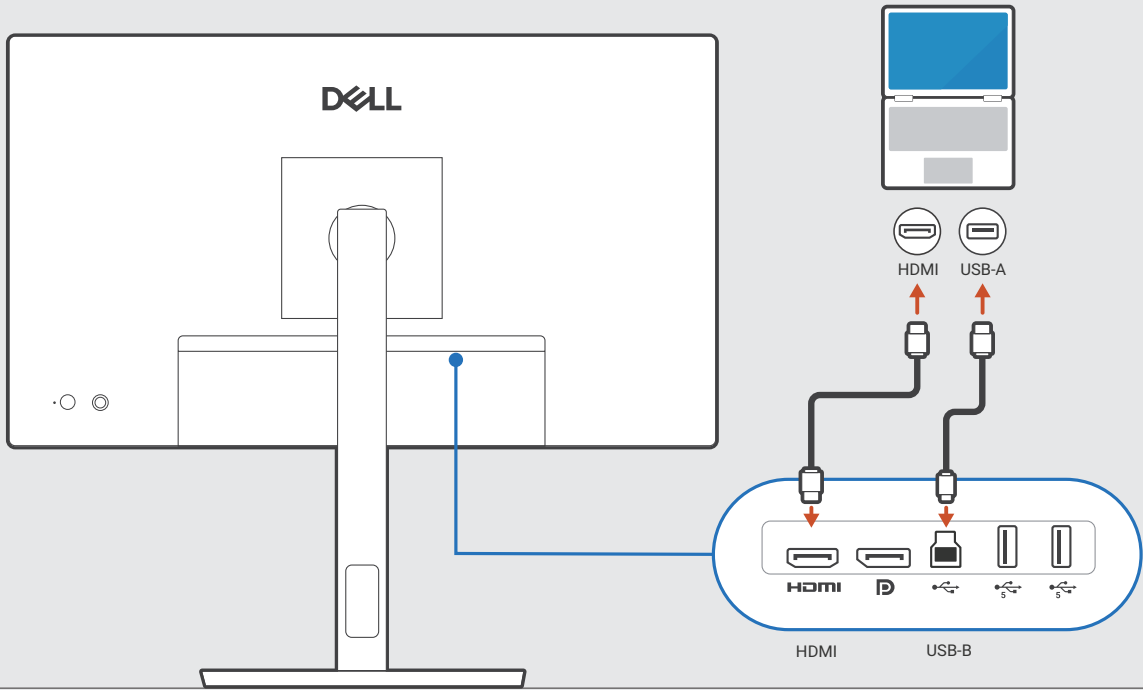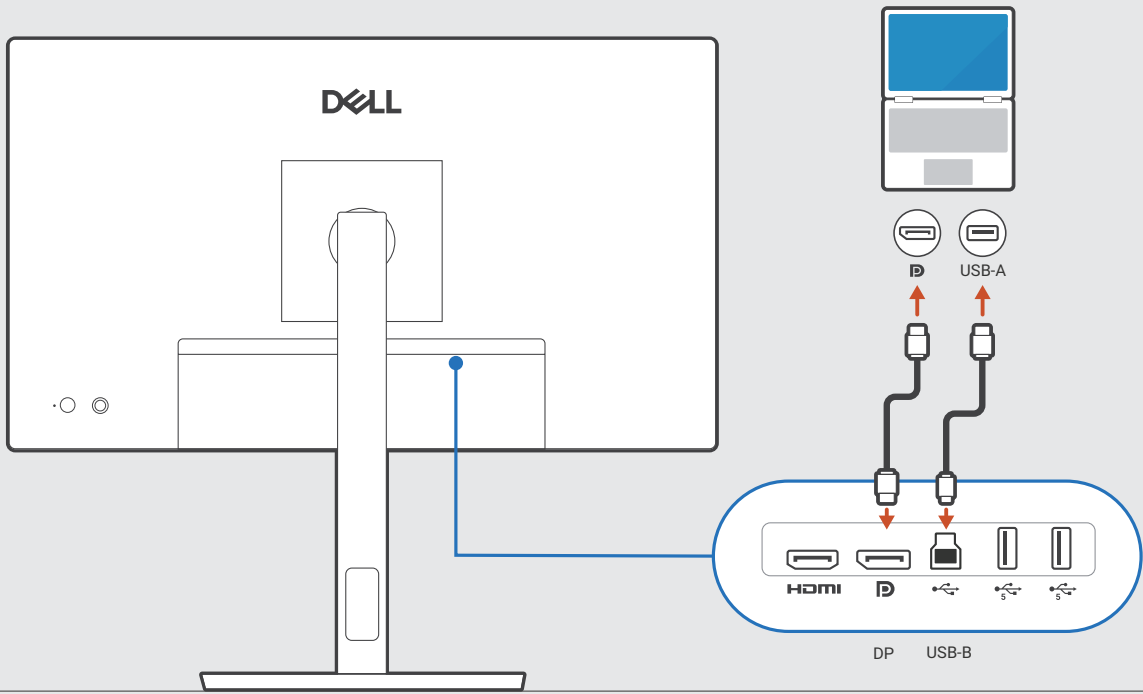

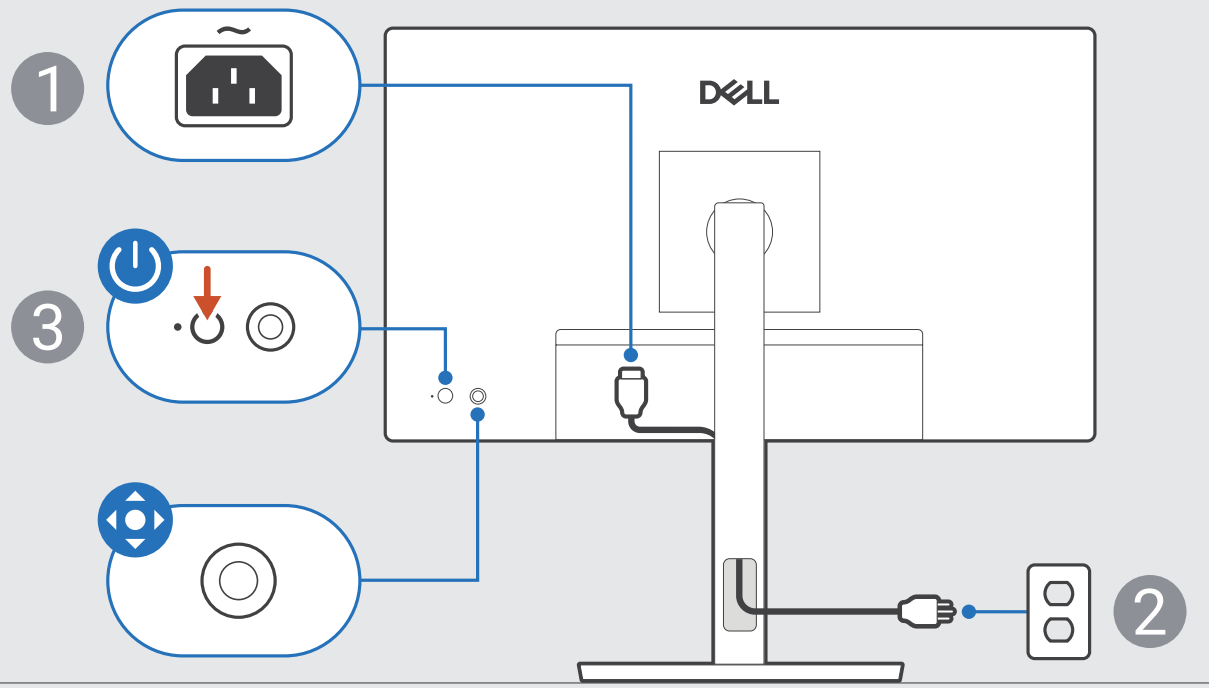


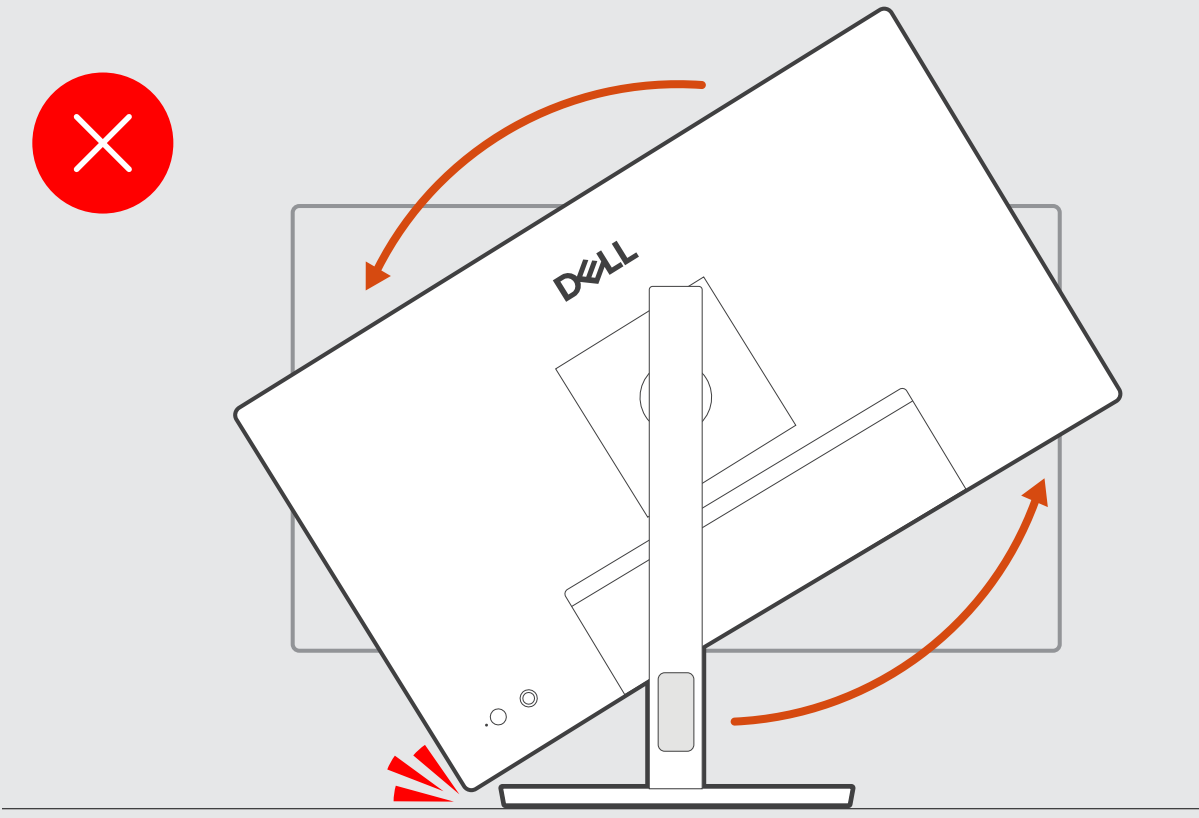


1

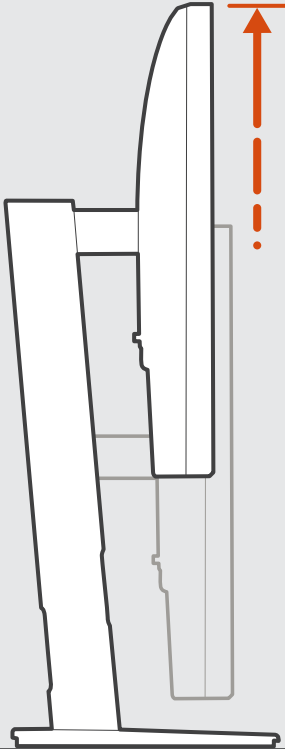


2

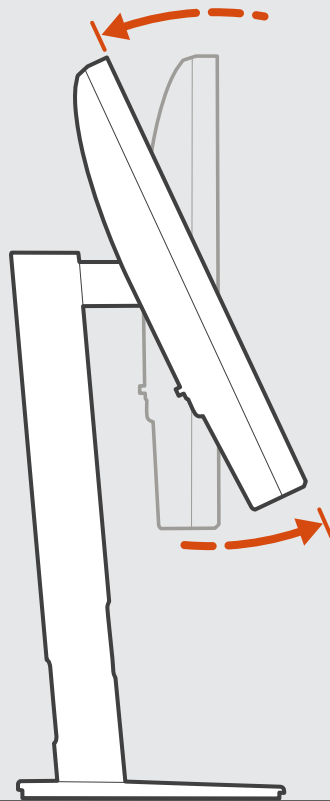


3

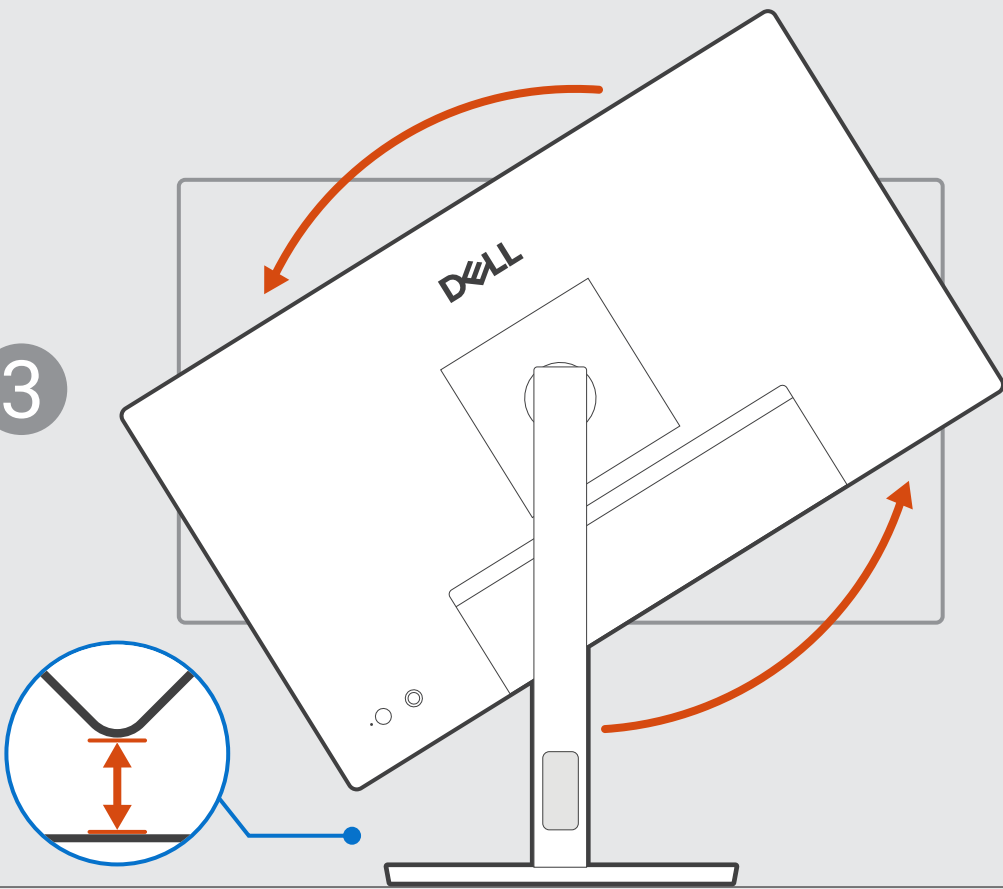

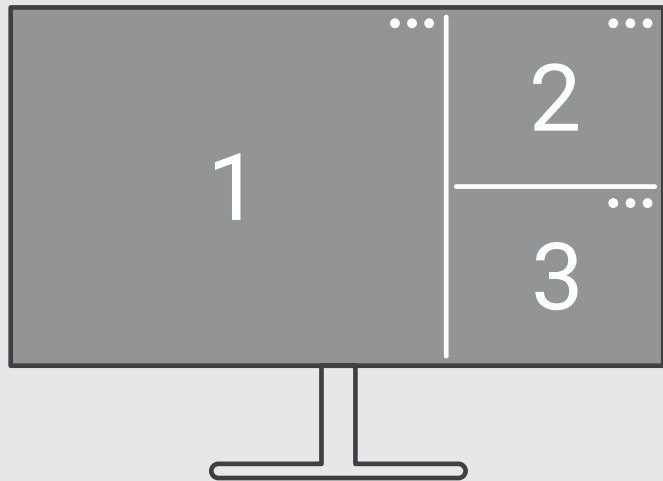

Dell Display and Peripheral Manager
Dell.com/support/ddpm

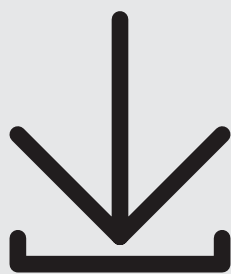

Dell.com/support/P2226H

Dell.com/support/P2426H

Dell.com/support/P2426

Dell.com/support/P2726H