










Dell Pro P 34 USB-C hubbskärm med webbkamera




P3426WEV



Snabbstartsguide




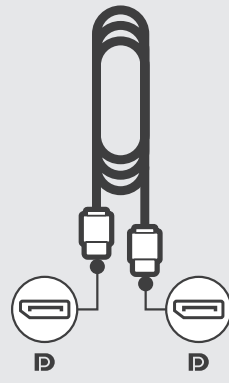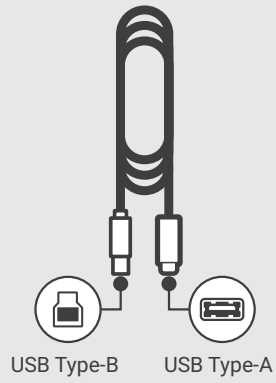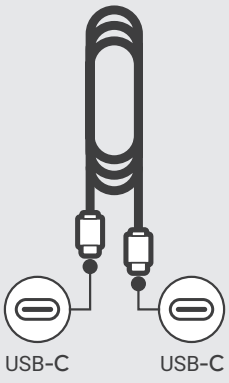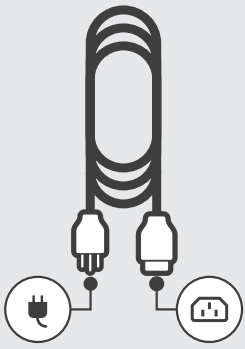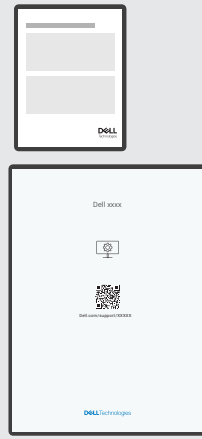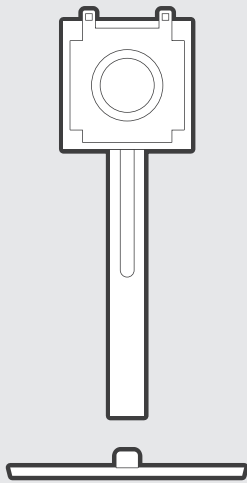


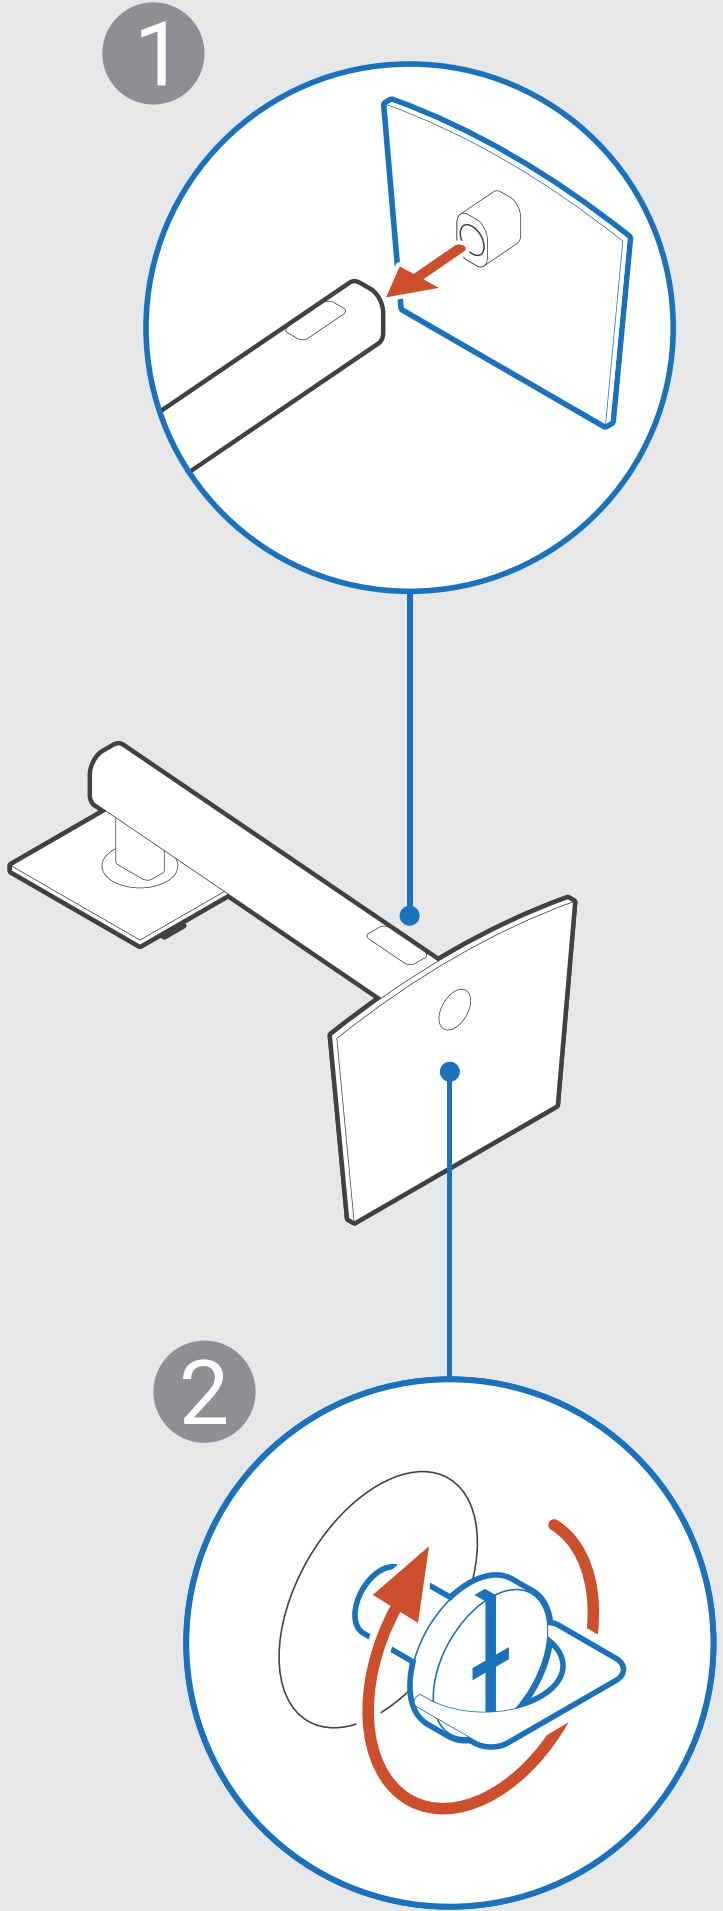


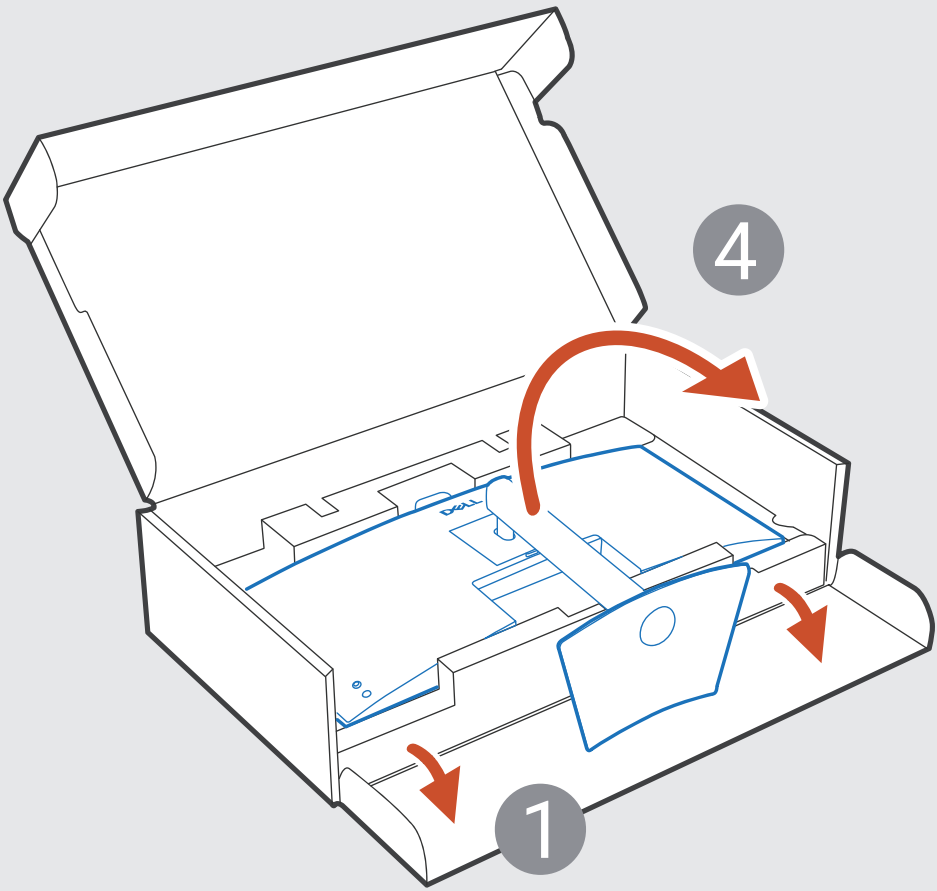
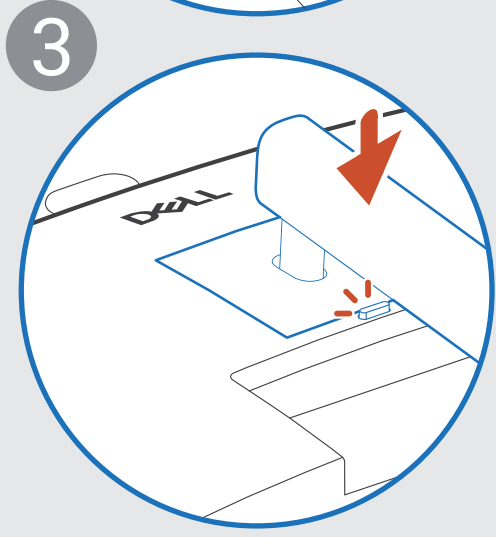
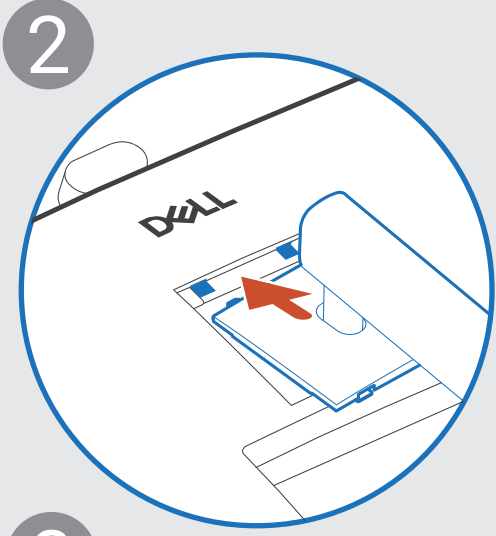



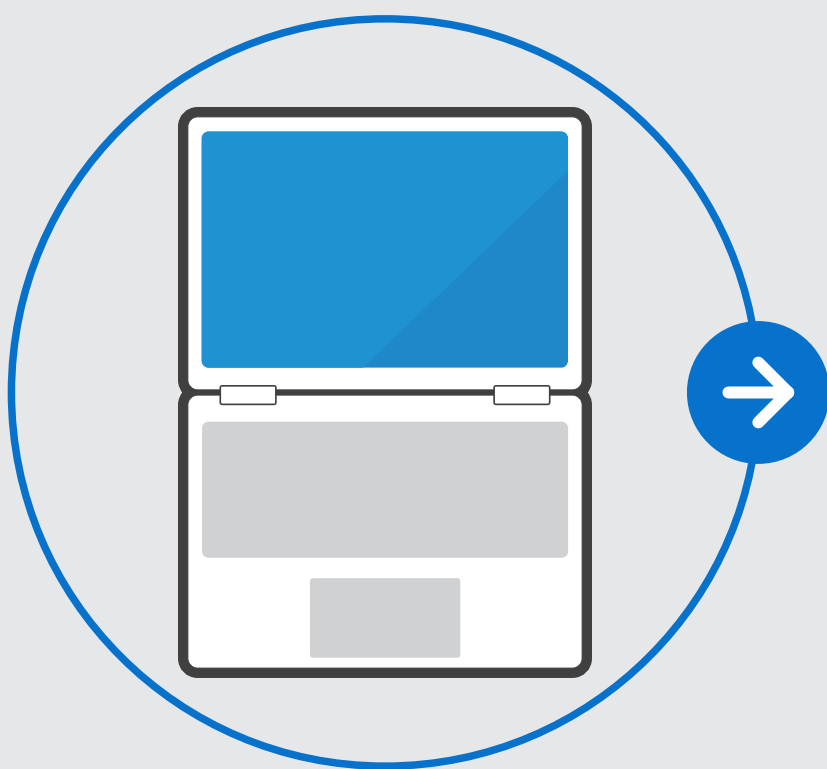
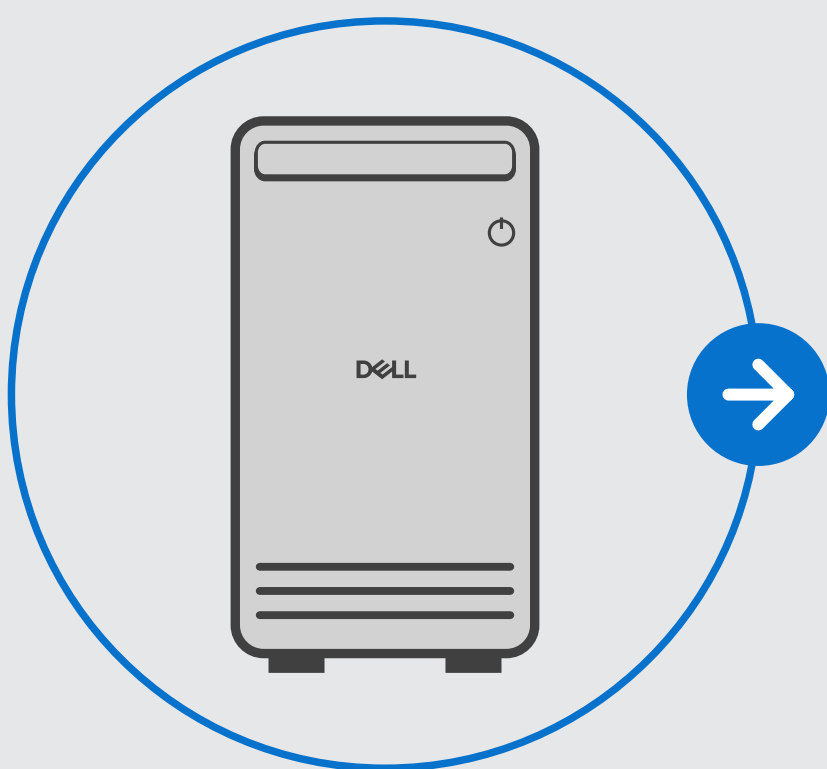


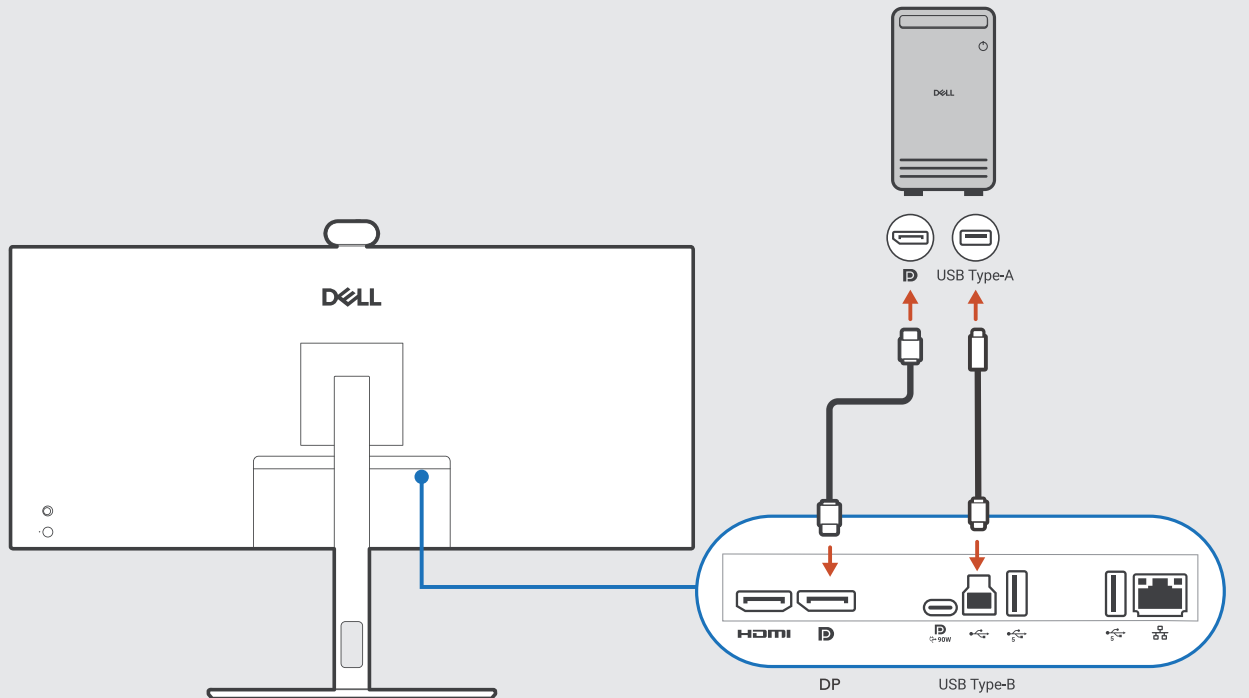


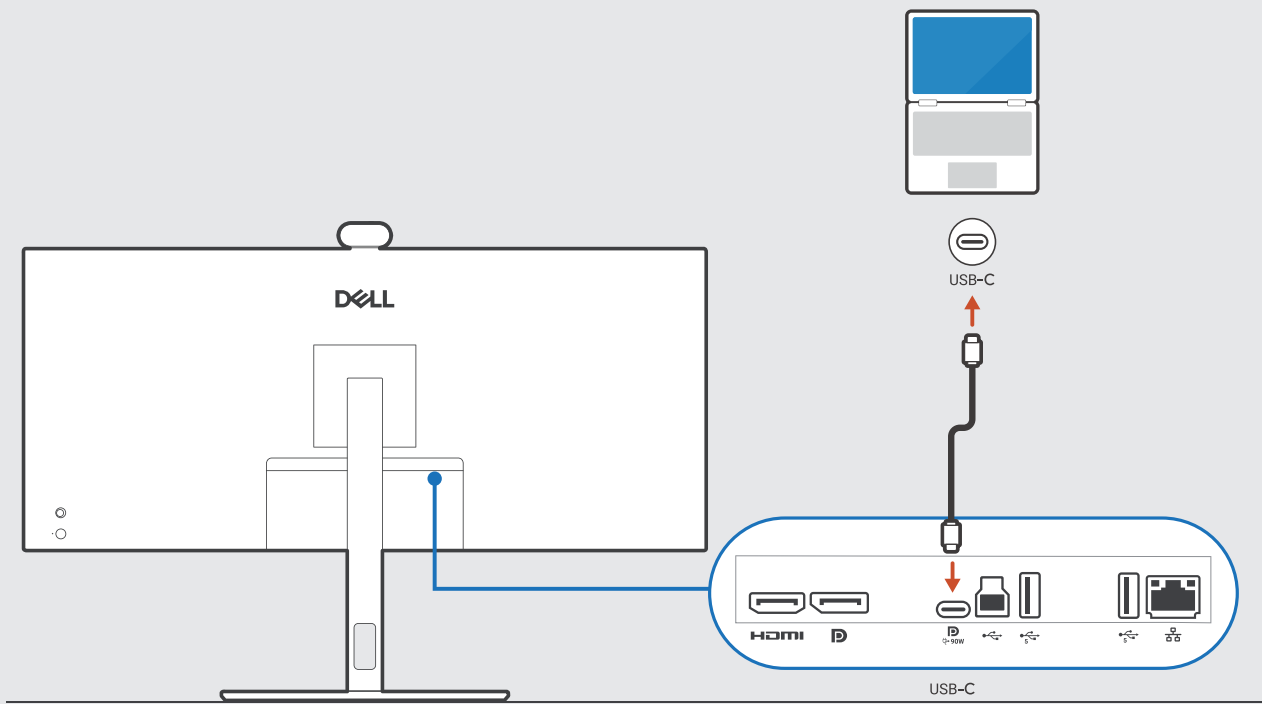

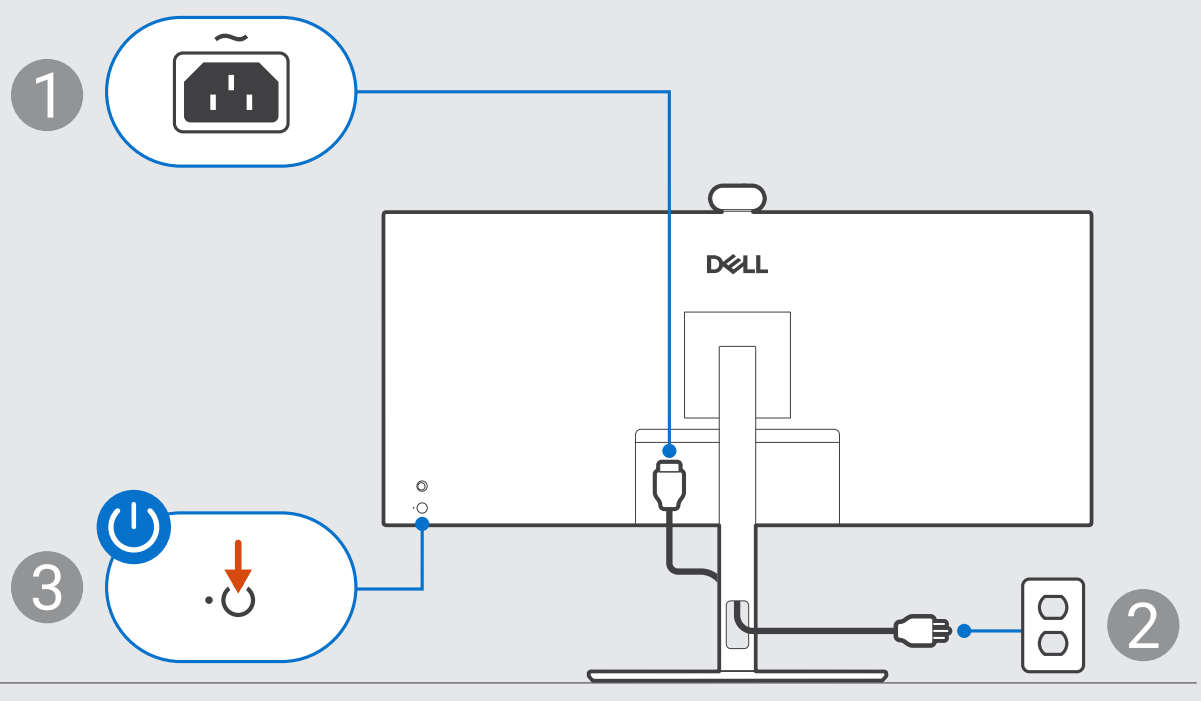


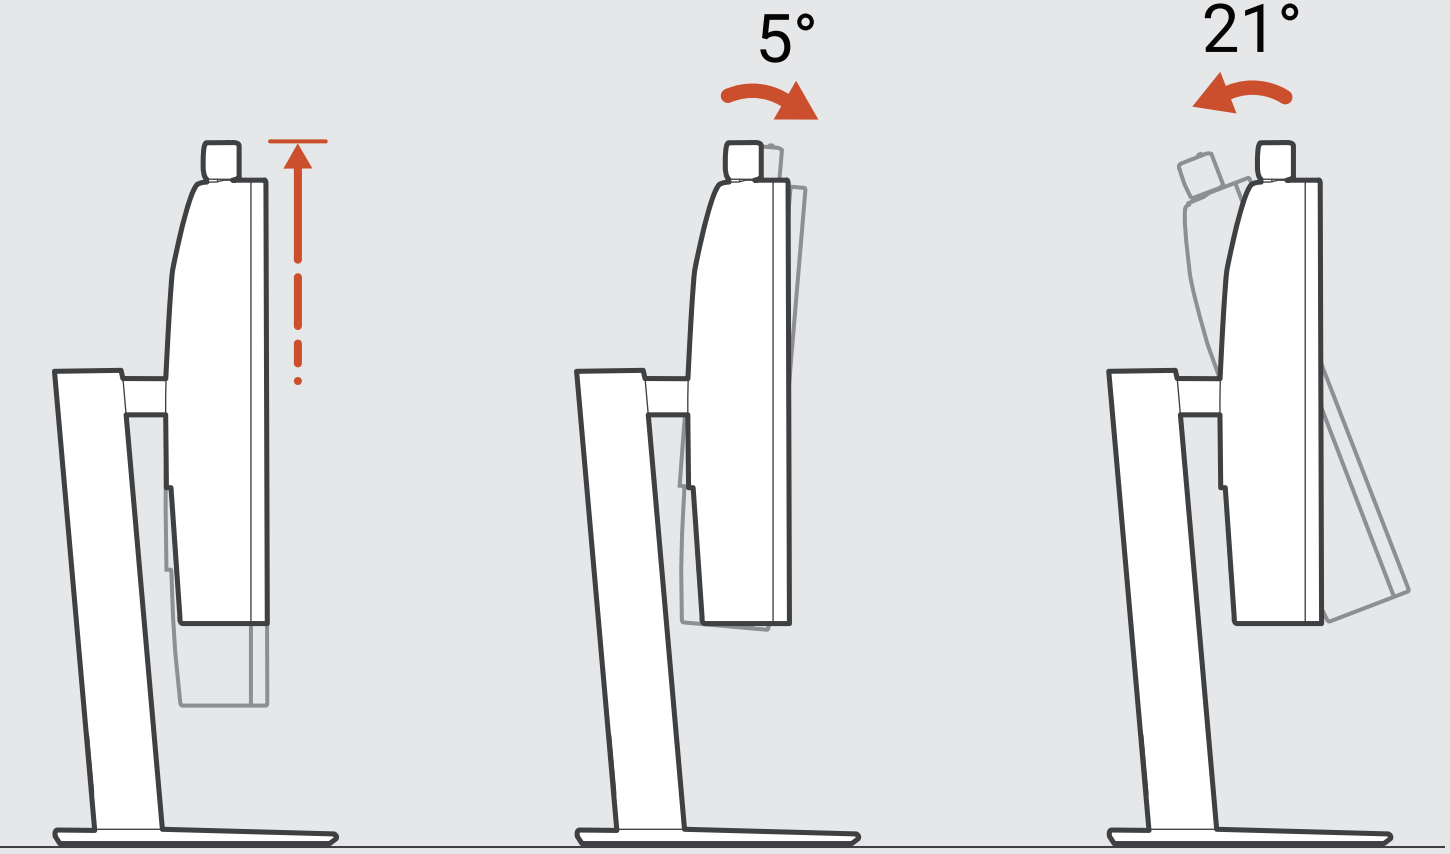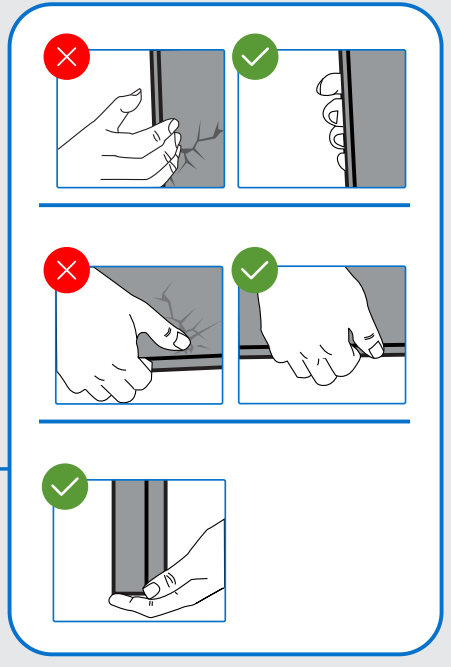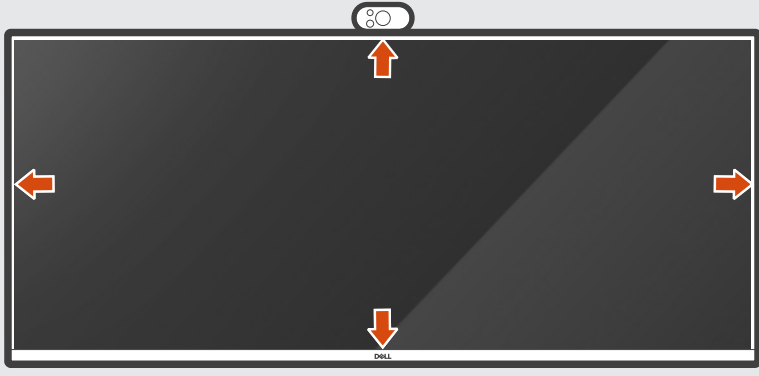

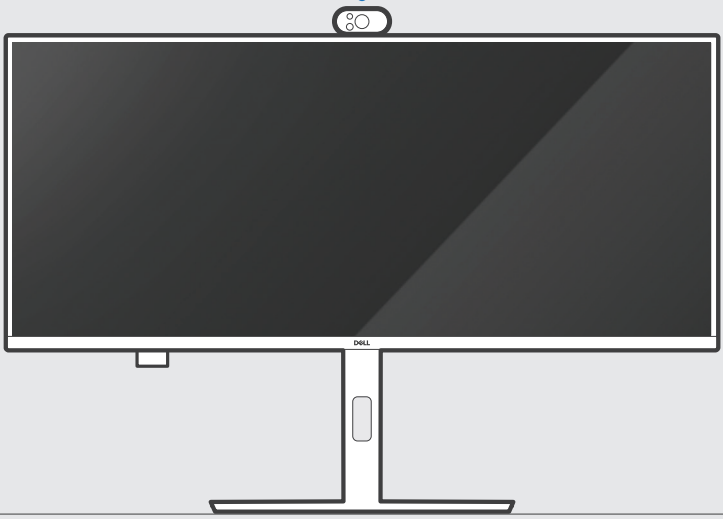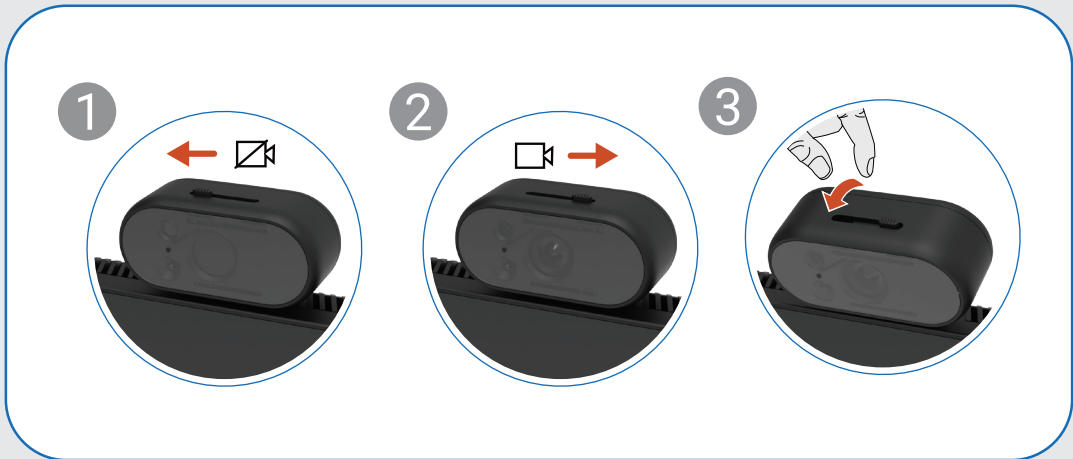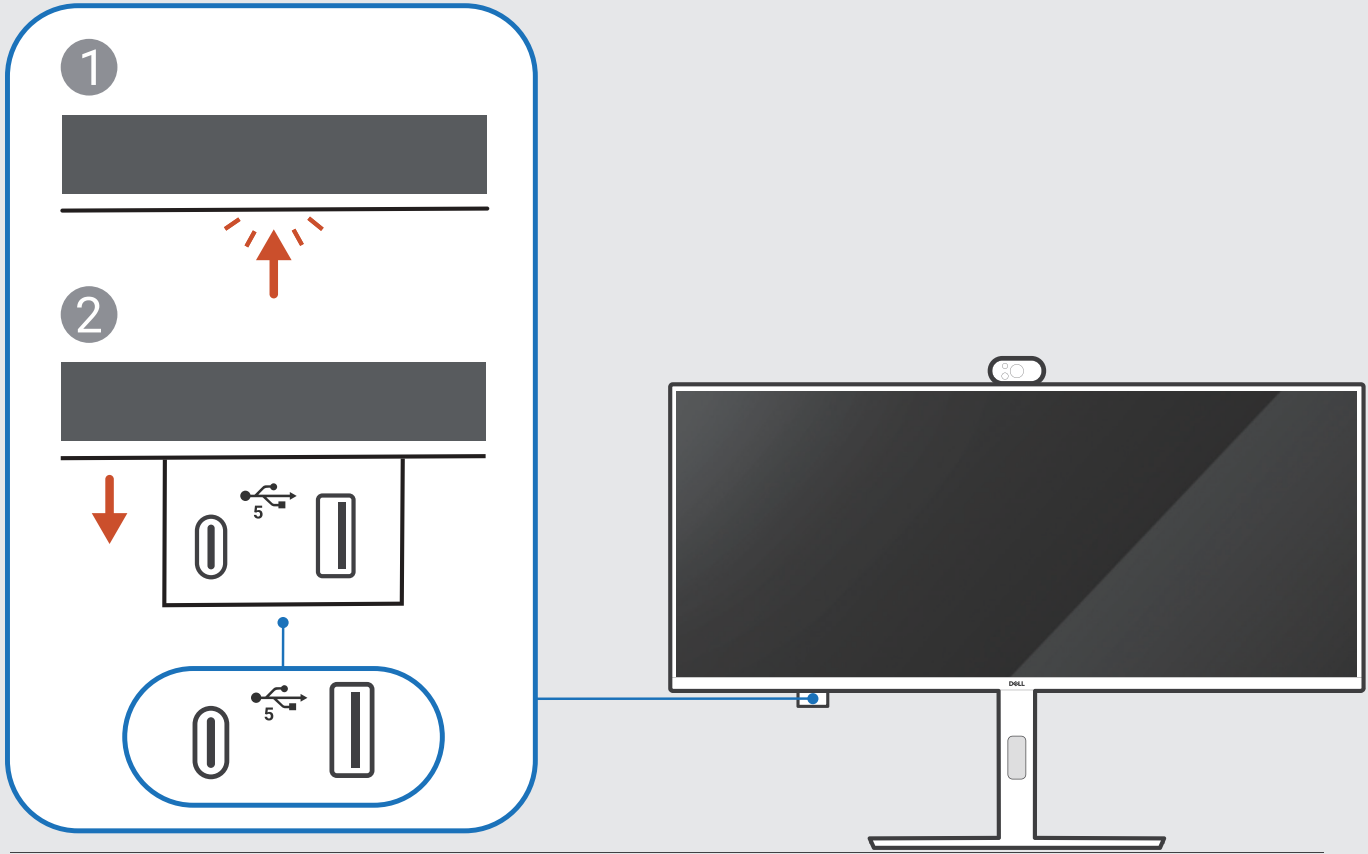


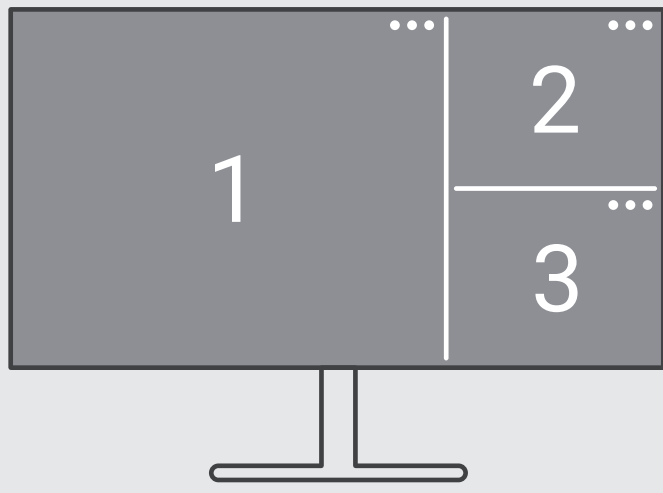

Dell Display and Peripheral Manager
Dell.com/support/ddpm

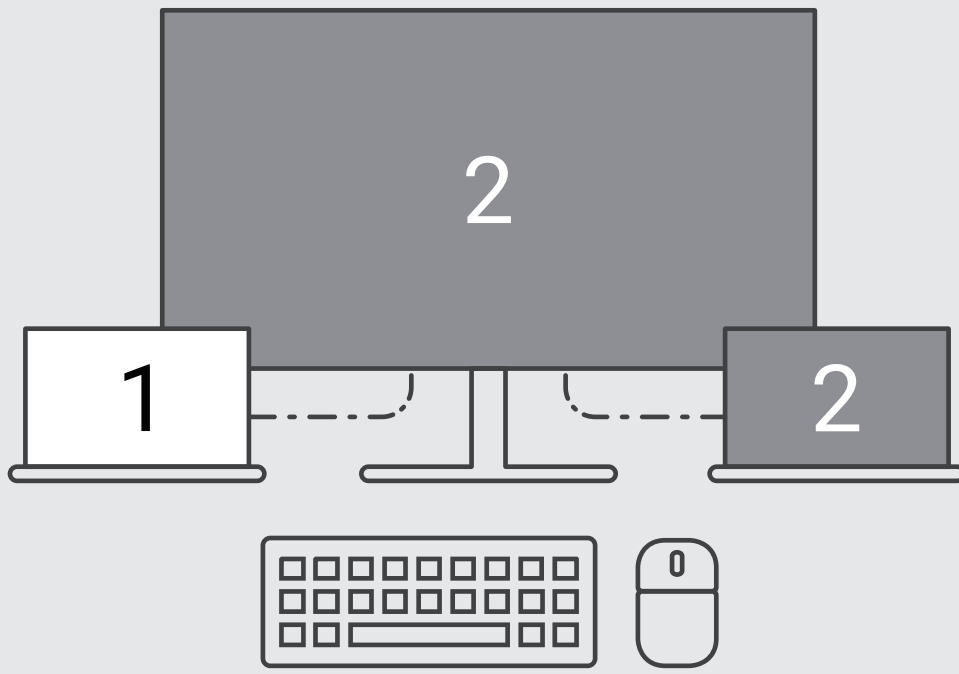

KVM

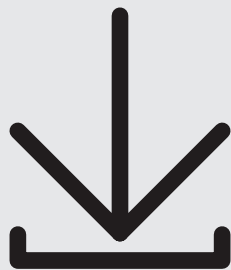

Dell.com/support/P3426WEV

