



Dell Pro P 22 Bildskärm

P2226H

Dell Pro P 24 Bildskärm

P2426H

Dell Pro P 24 16:10 Bildskärm







P2426

Dell Pro P 27 Bildskärm


P2726H


Snabbstartguide




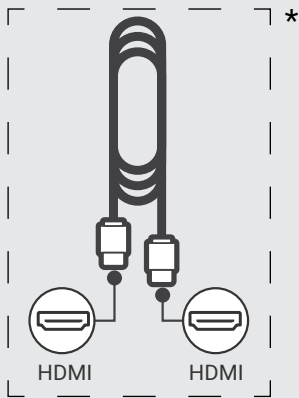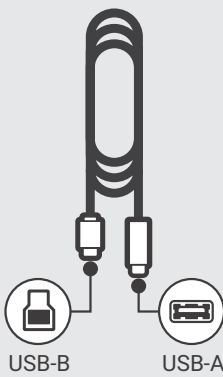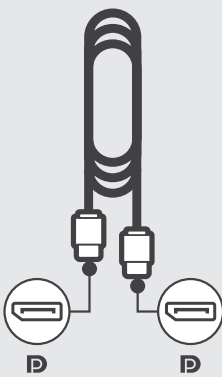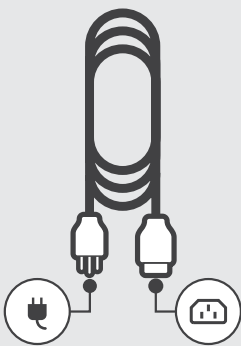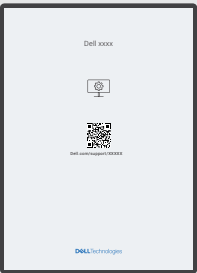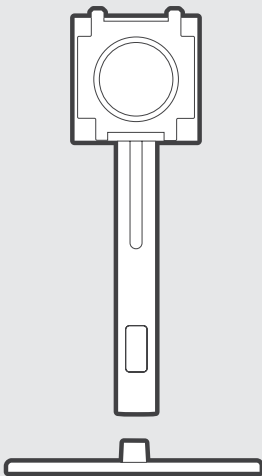




*Endast i utvalda länder

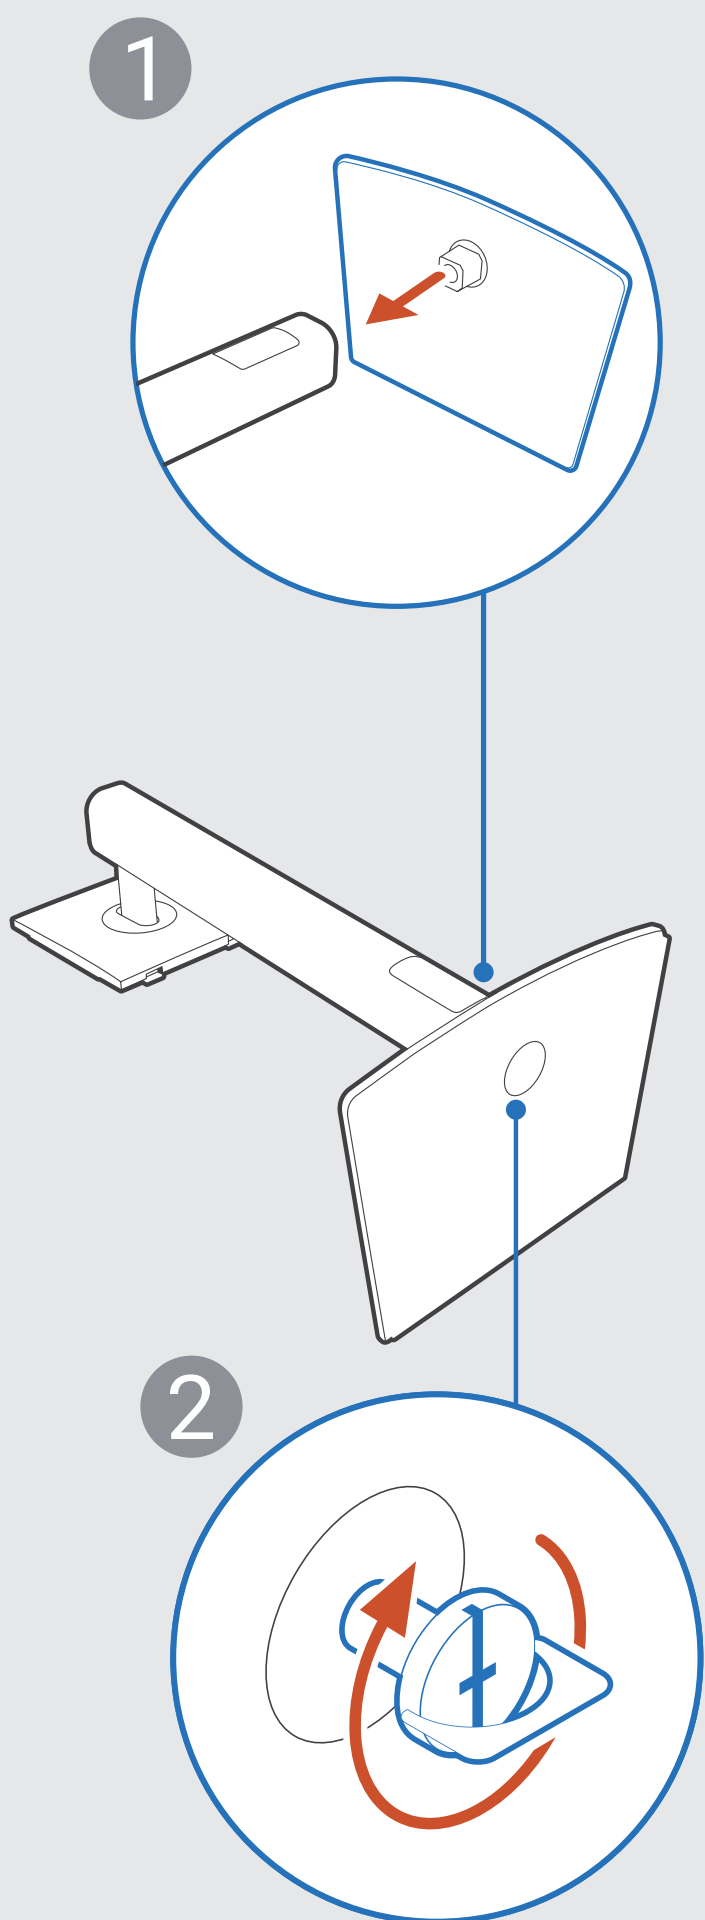


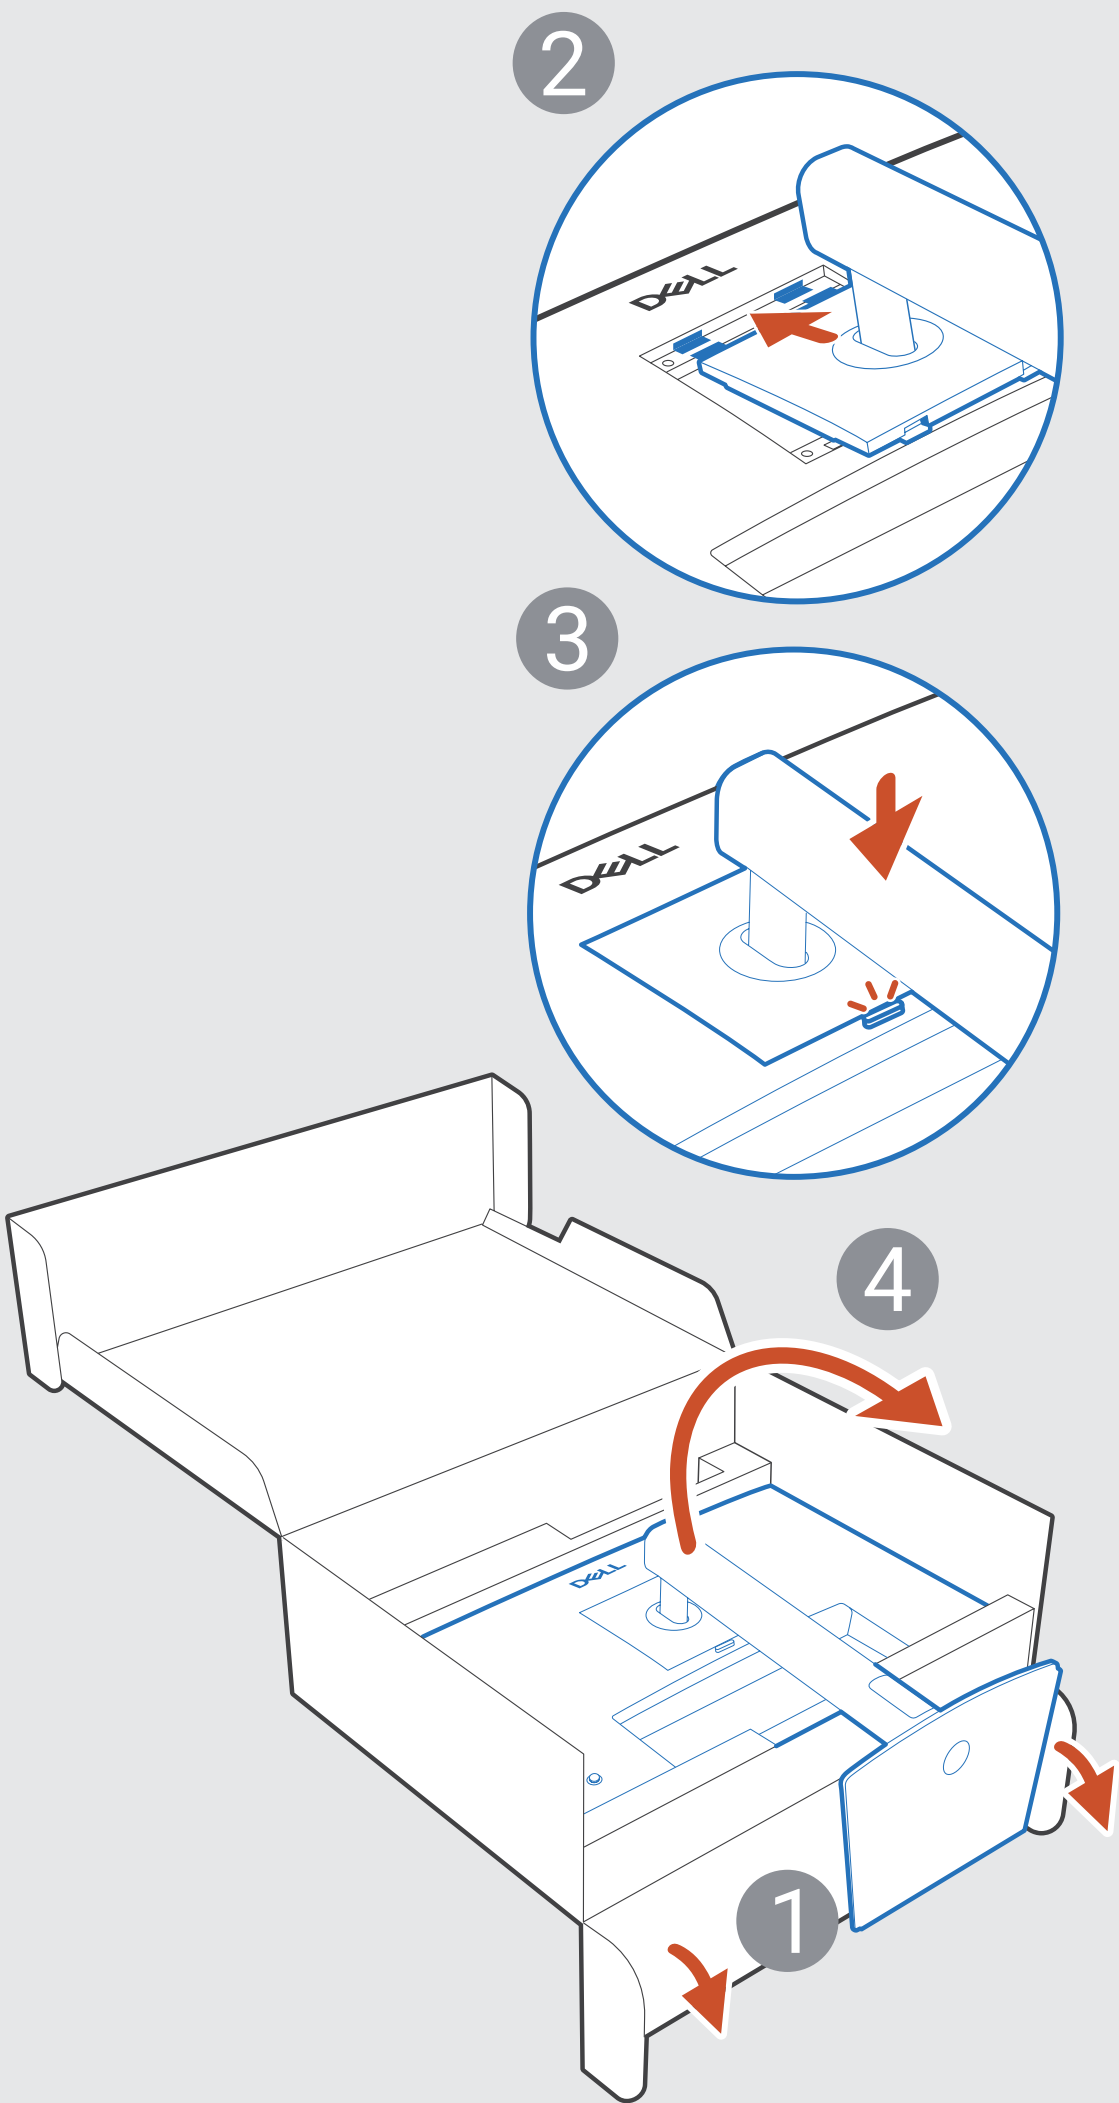


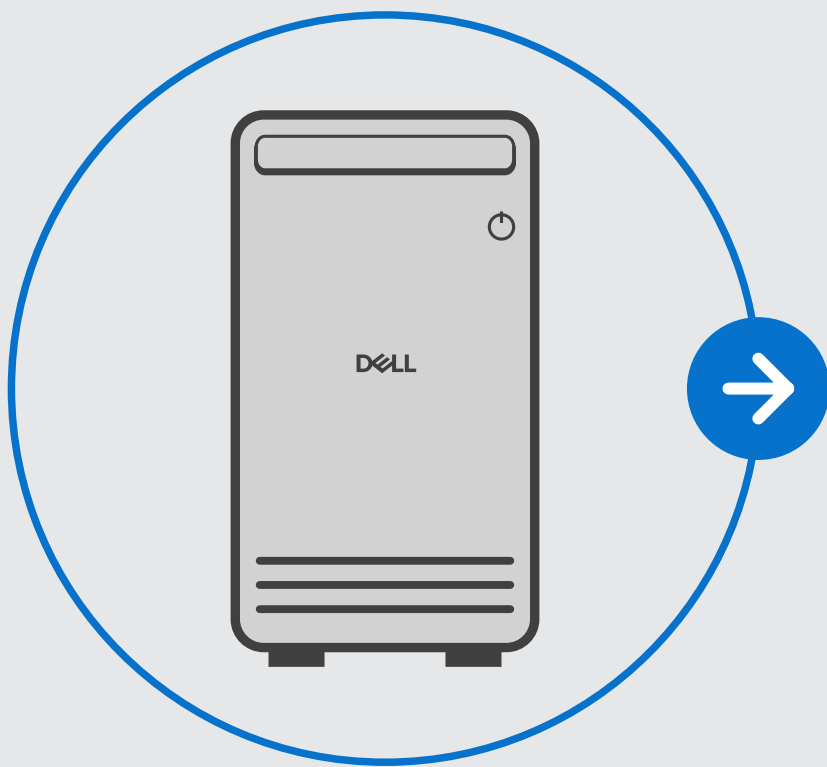

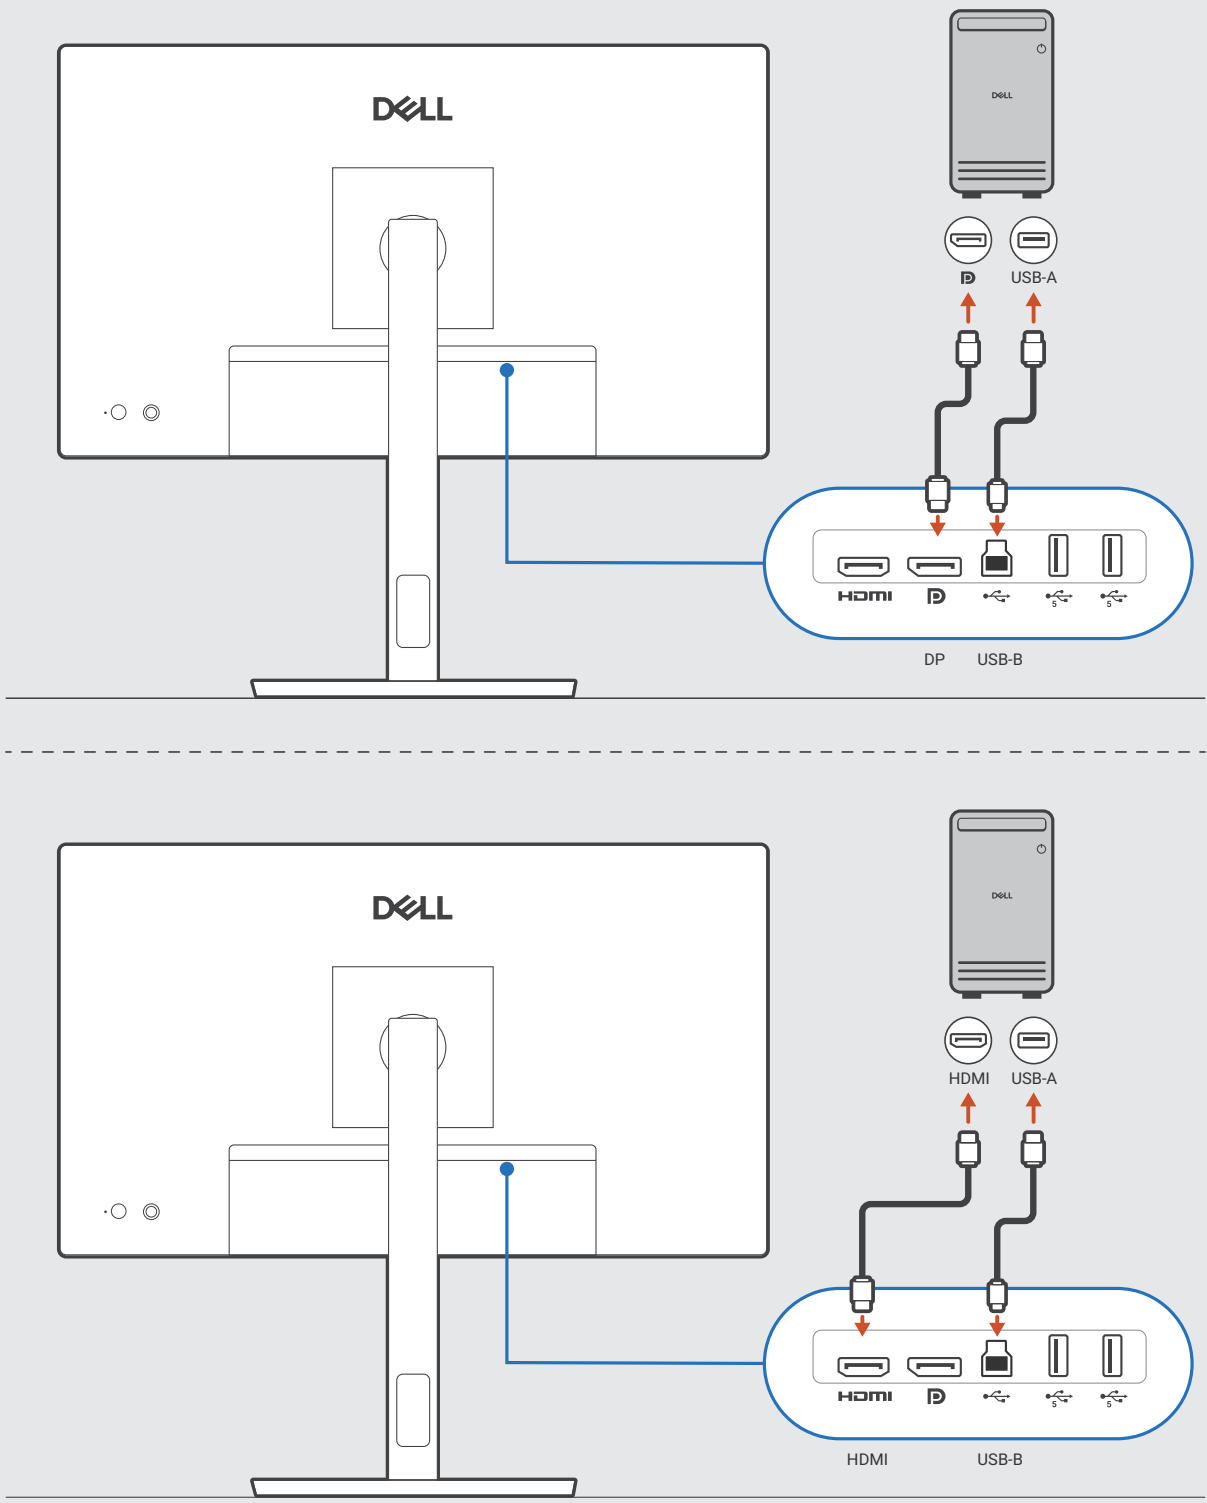


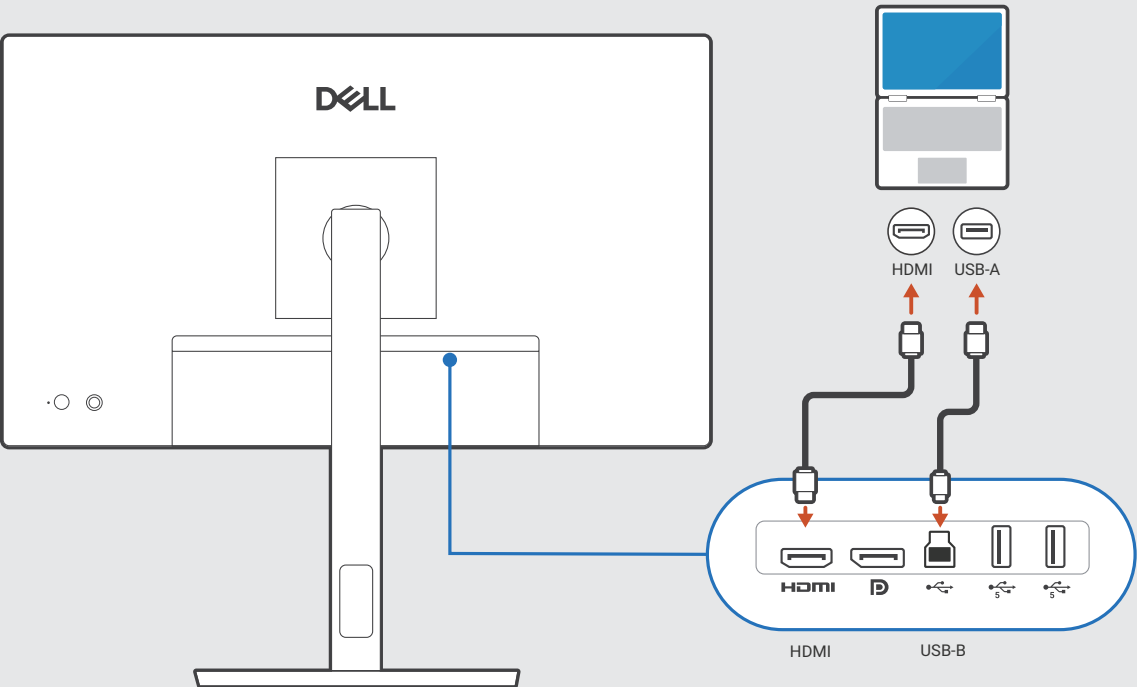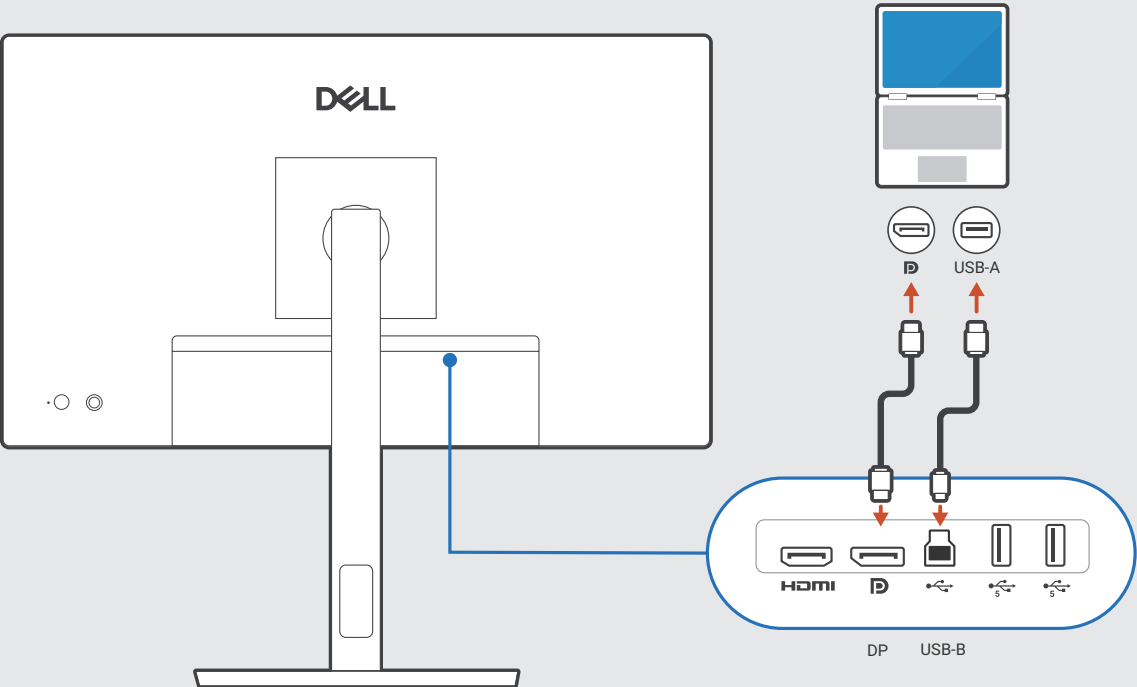

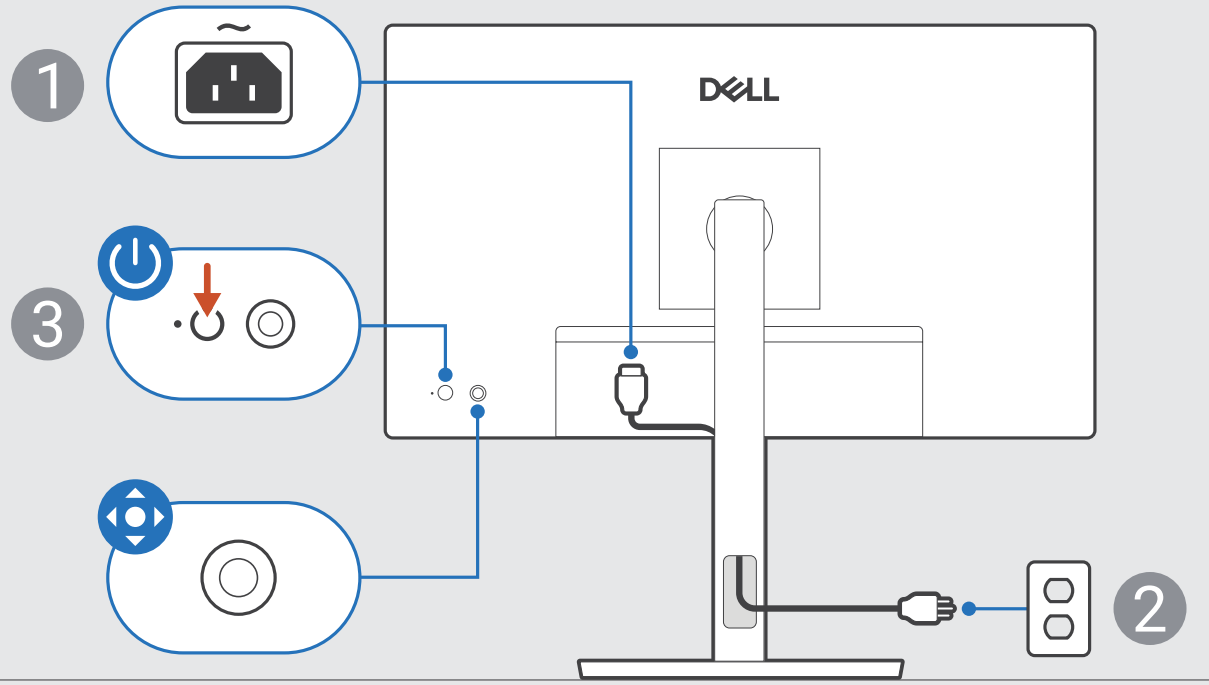


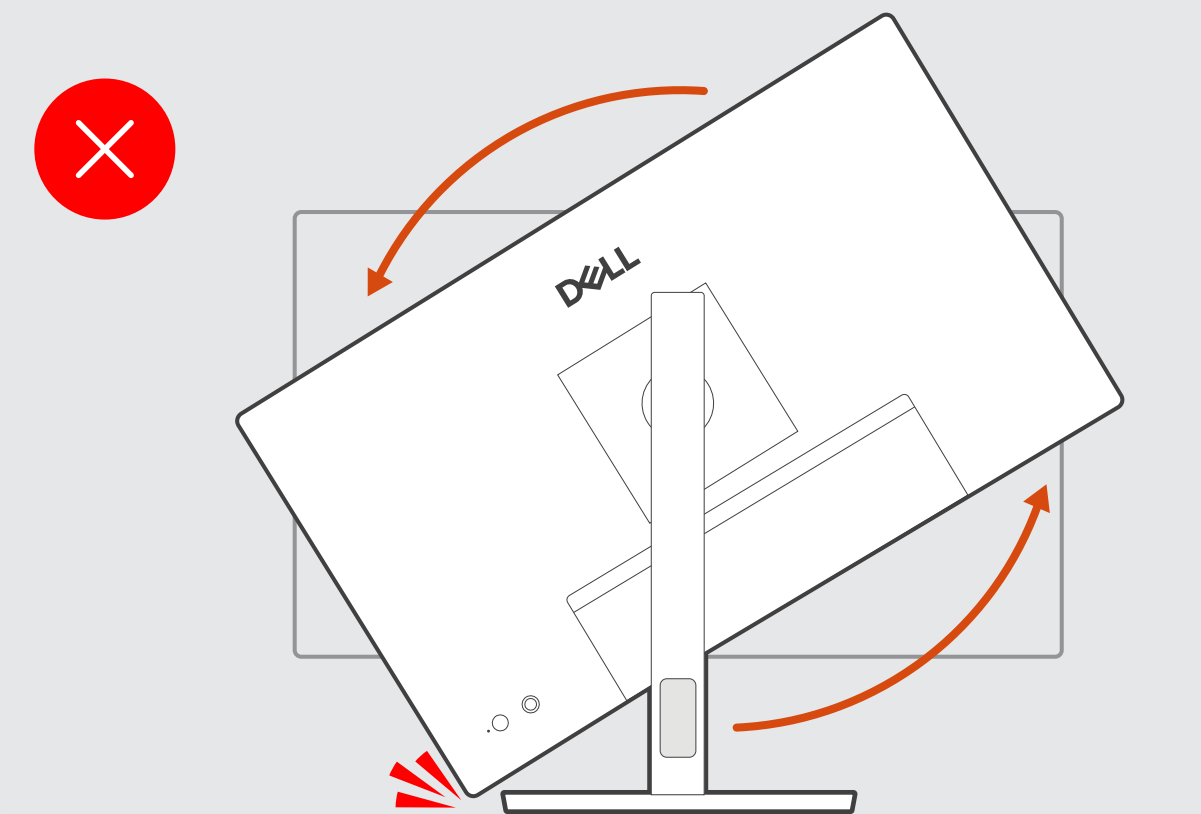



1

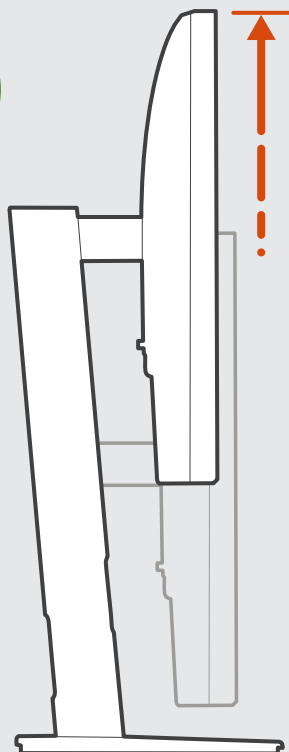


2

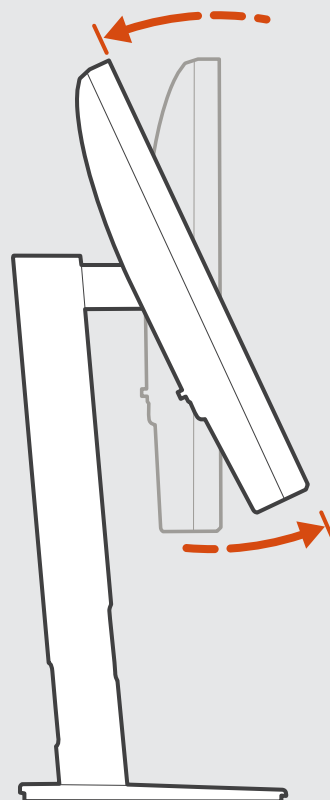


3

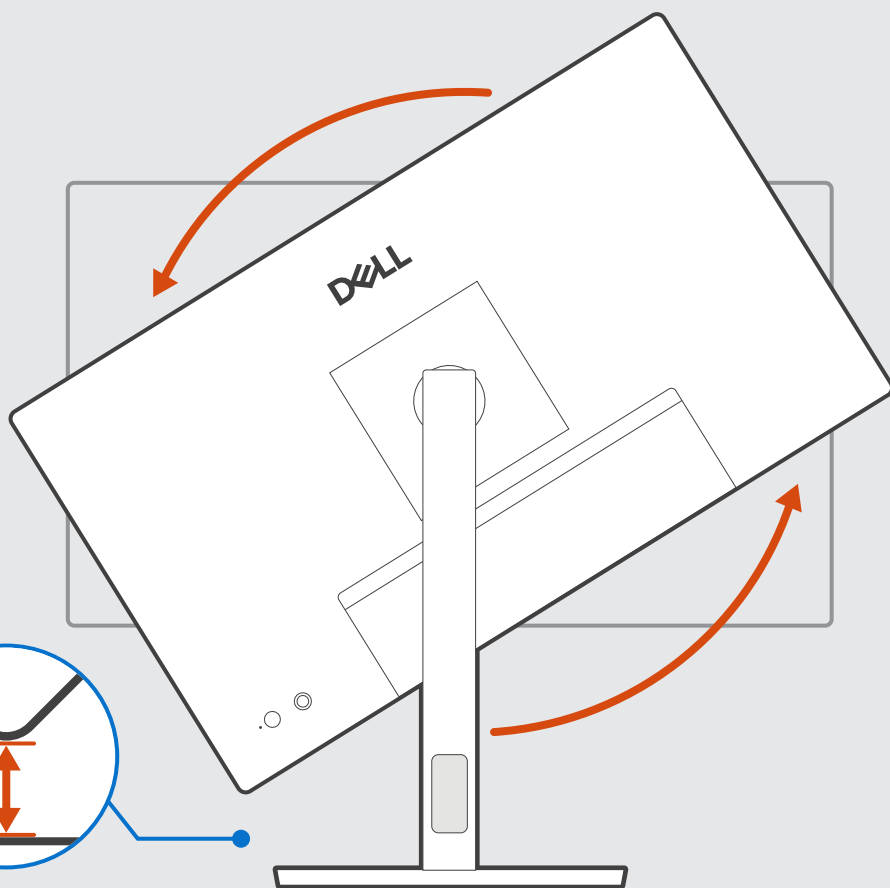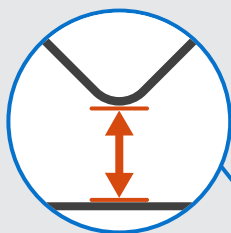

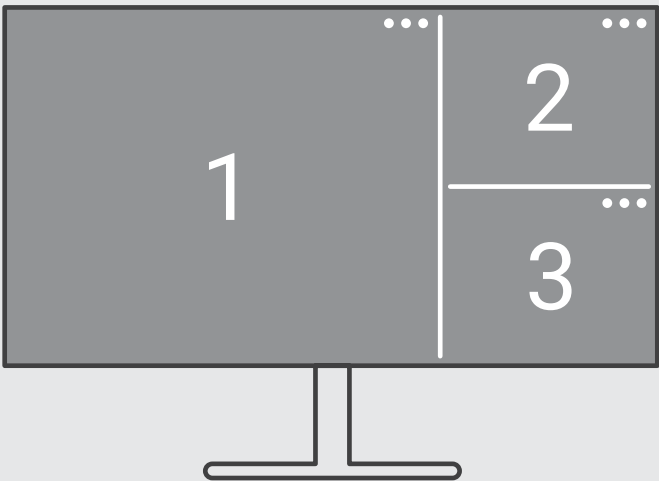

Dell Display and Peripheral Manager
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

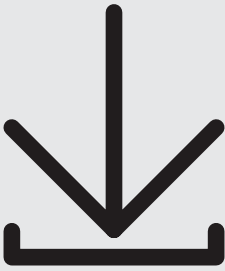

- [Dell.com/support/P2226H](https://dell.com/support/P2226H)
- [Dell.com/support/P2426H](https://dell.com/support/P2426H)
- [Dell.com/support/P2426](https://dell.com/support/P2426)
- [Dell.com/support/P2726H](https://dell.com/support/P2726H)