







Cordless Mini Circular Saw

TE-CS 18/89 Li - Solo

Item No.: 4331100

Ident No.: 11019

Bar Code: 4006825646184

The Einhell TE-CS 18/89 Li - Solo cordless mini hand-held circular saw is compact, light and user-friendly - comfortable to handle and therefore work with. As a member of the Power X-Change family, the mini hand-held circular saw can be used in combination with every PXC rechargeable battery. The battery and charger from the PXC series are not included in the scope of this delivery and are available separately. The cutting depth can be adjusted without tools. Changing the saw blade is also simplicity itself thanks to the spindle locking system. The carbide saw blade and the parallel stop ensure clean, precise cuts and the max. cutting depth is 28 mm. The high-quality saw table made of aluminium provides optimum stability.

Features & Benefits

- A member of the Power X-Change family
- Small, light and handy for comfortable operation
- Easy, tool-free adjustment of the cutting depth
- High-quality saw table made of aluminium for optimum stability
- Easy changing of the saw blade thanks to the spindle lock
- High-grade carbide blade for clean cuts
- Max. cutting depth of 28 mm thanks to the Ø89 mm saw blade
- Dust extraction adapter to keep the workplace clean
- Parallel stop for precise cuts

Technical Data

- Voltage 18 V 3500 min^-1 - rotation speed

89 mm - saw blade diameter - Cutting depth wood 28 mm

Logistic Data

- Product weight (kg) 1.72 2.53 - Gross weight (kg)

- Dimensions single packaging 435 x 137 x 153 mm

- Pieces per export carton 4 Pieces - Gross weight of export carton 10 kg

- Dimensions export carton 415 x 300 x 300 mm 3052 | 6212 | 6964 - Container quantities (20"/40"/40"HC)

















Available as special accessories



18V 30min Power X-Change

Charger Item No.: 4512011

Bar Code: 4006825587029

Einhell Accessory



Power-X-Twincharger 3 A Charger Item No.: 4512069

Bar Code: 4006825629729

Einhell Accessory



18V 4,0 Ah Power-X-Change

Battery

Item No.: 4511396

Bar Code: 4006825610376 Einhell Accessory

18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042

Bar Code: 4006825613704 Einhell Accessory



Power-X-Boostcharger 6 A Charger Item No.: 4512064 Bar Code: 4006825629019

Einhell Accessory



18V 2,0 Ah Power-X-Change Battery Item No.: 4511395

Bar Code: 4006825610369



Einhell Accessory

18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041

Bar Code: 4006825613698 **Einhell Accessory**



18V 5,2 Ah P-X-C Plus

Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory