



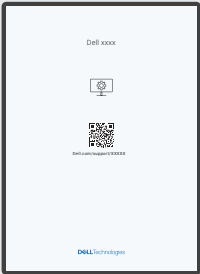
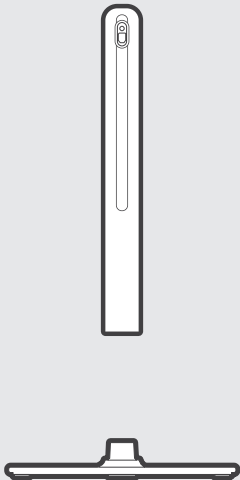


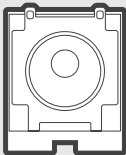

Dell 27 Plus QHD USB-C-bildskärm
S2725DC
Snabbstartsguide

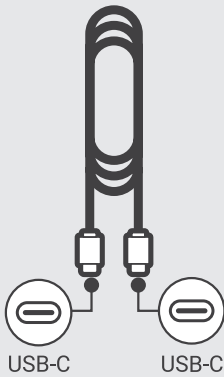


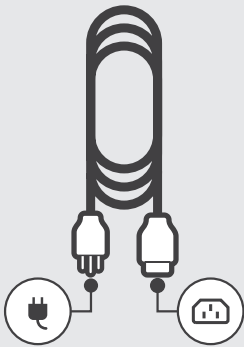


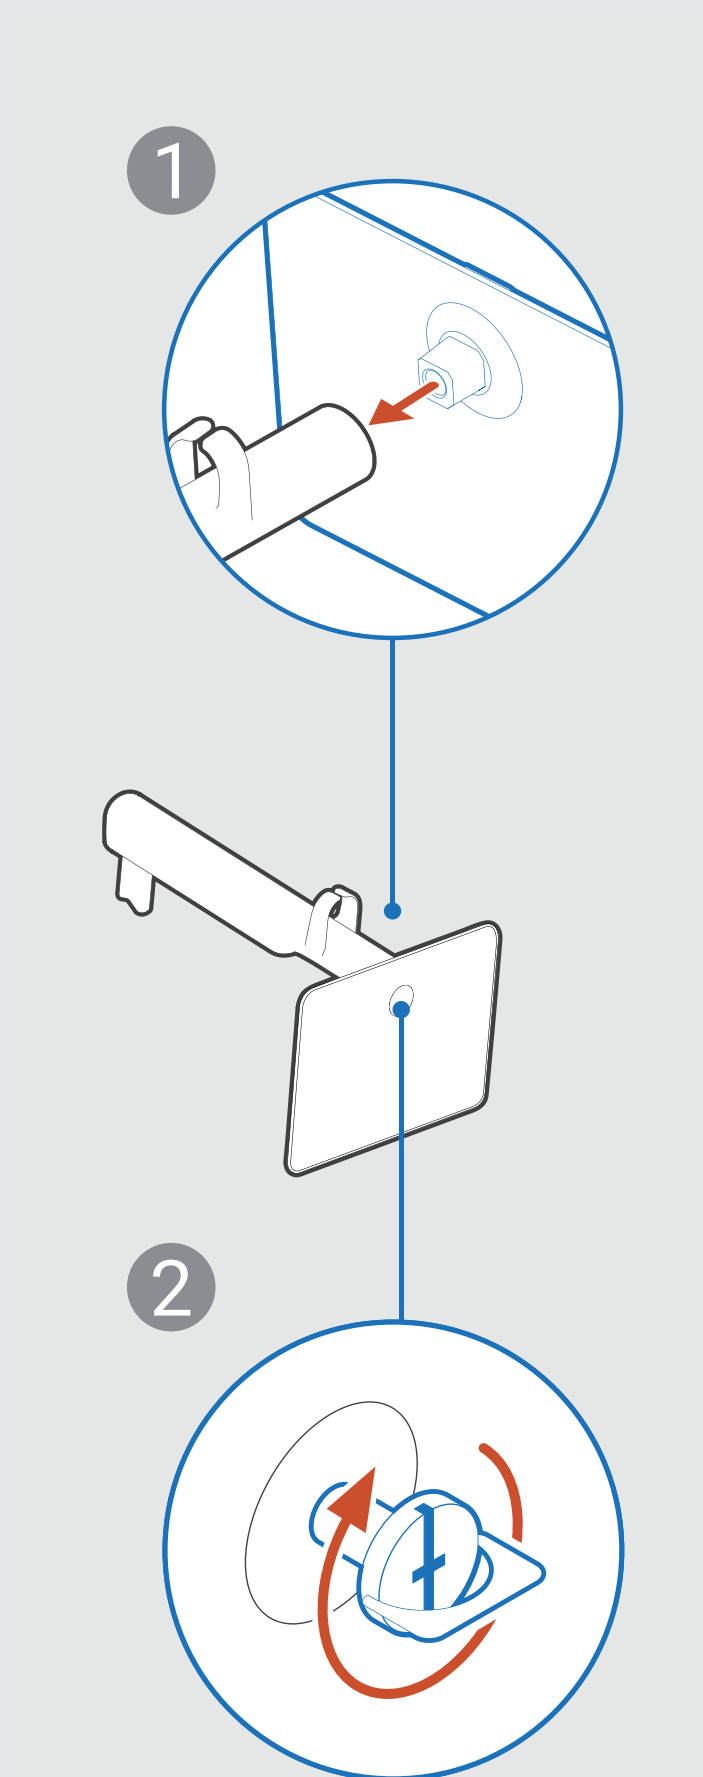







1

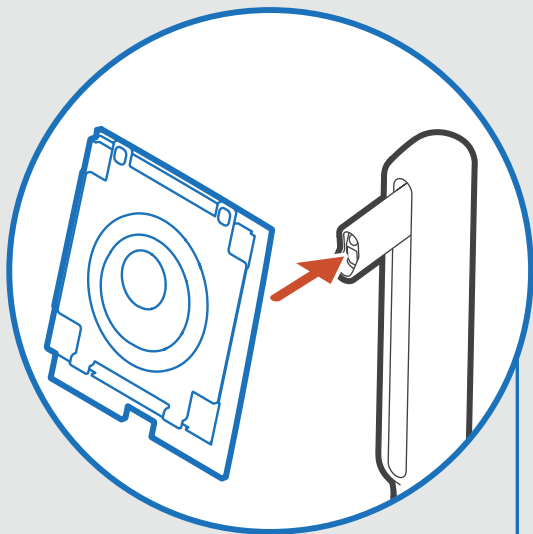



2

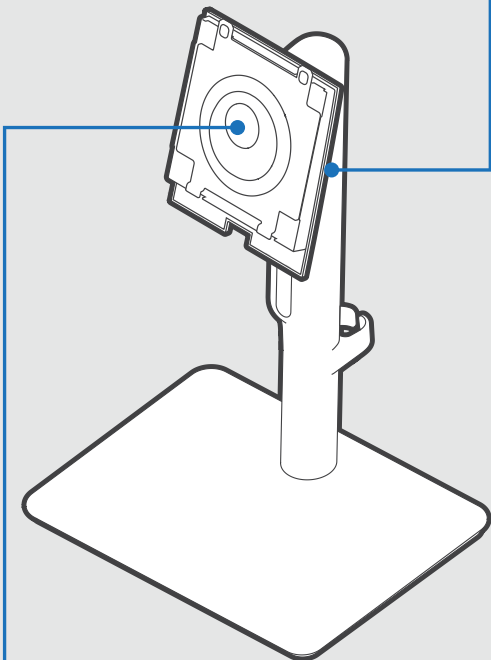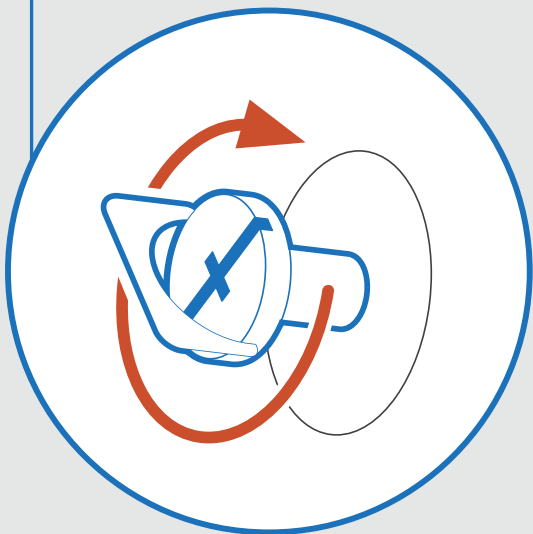


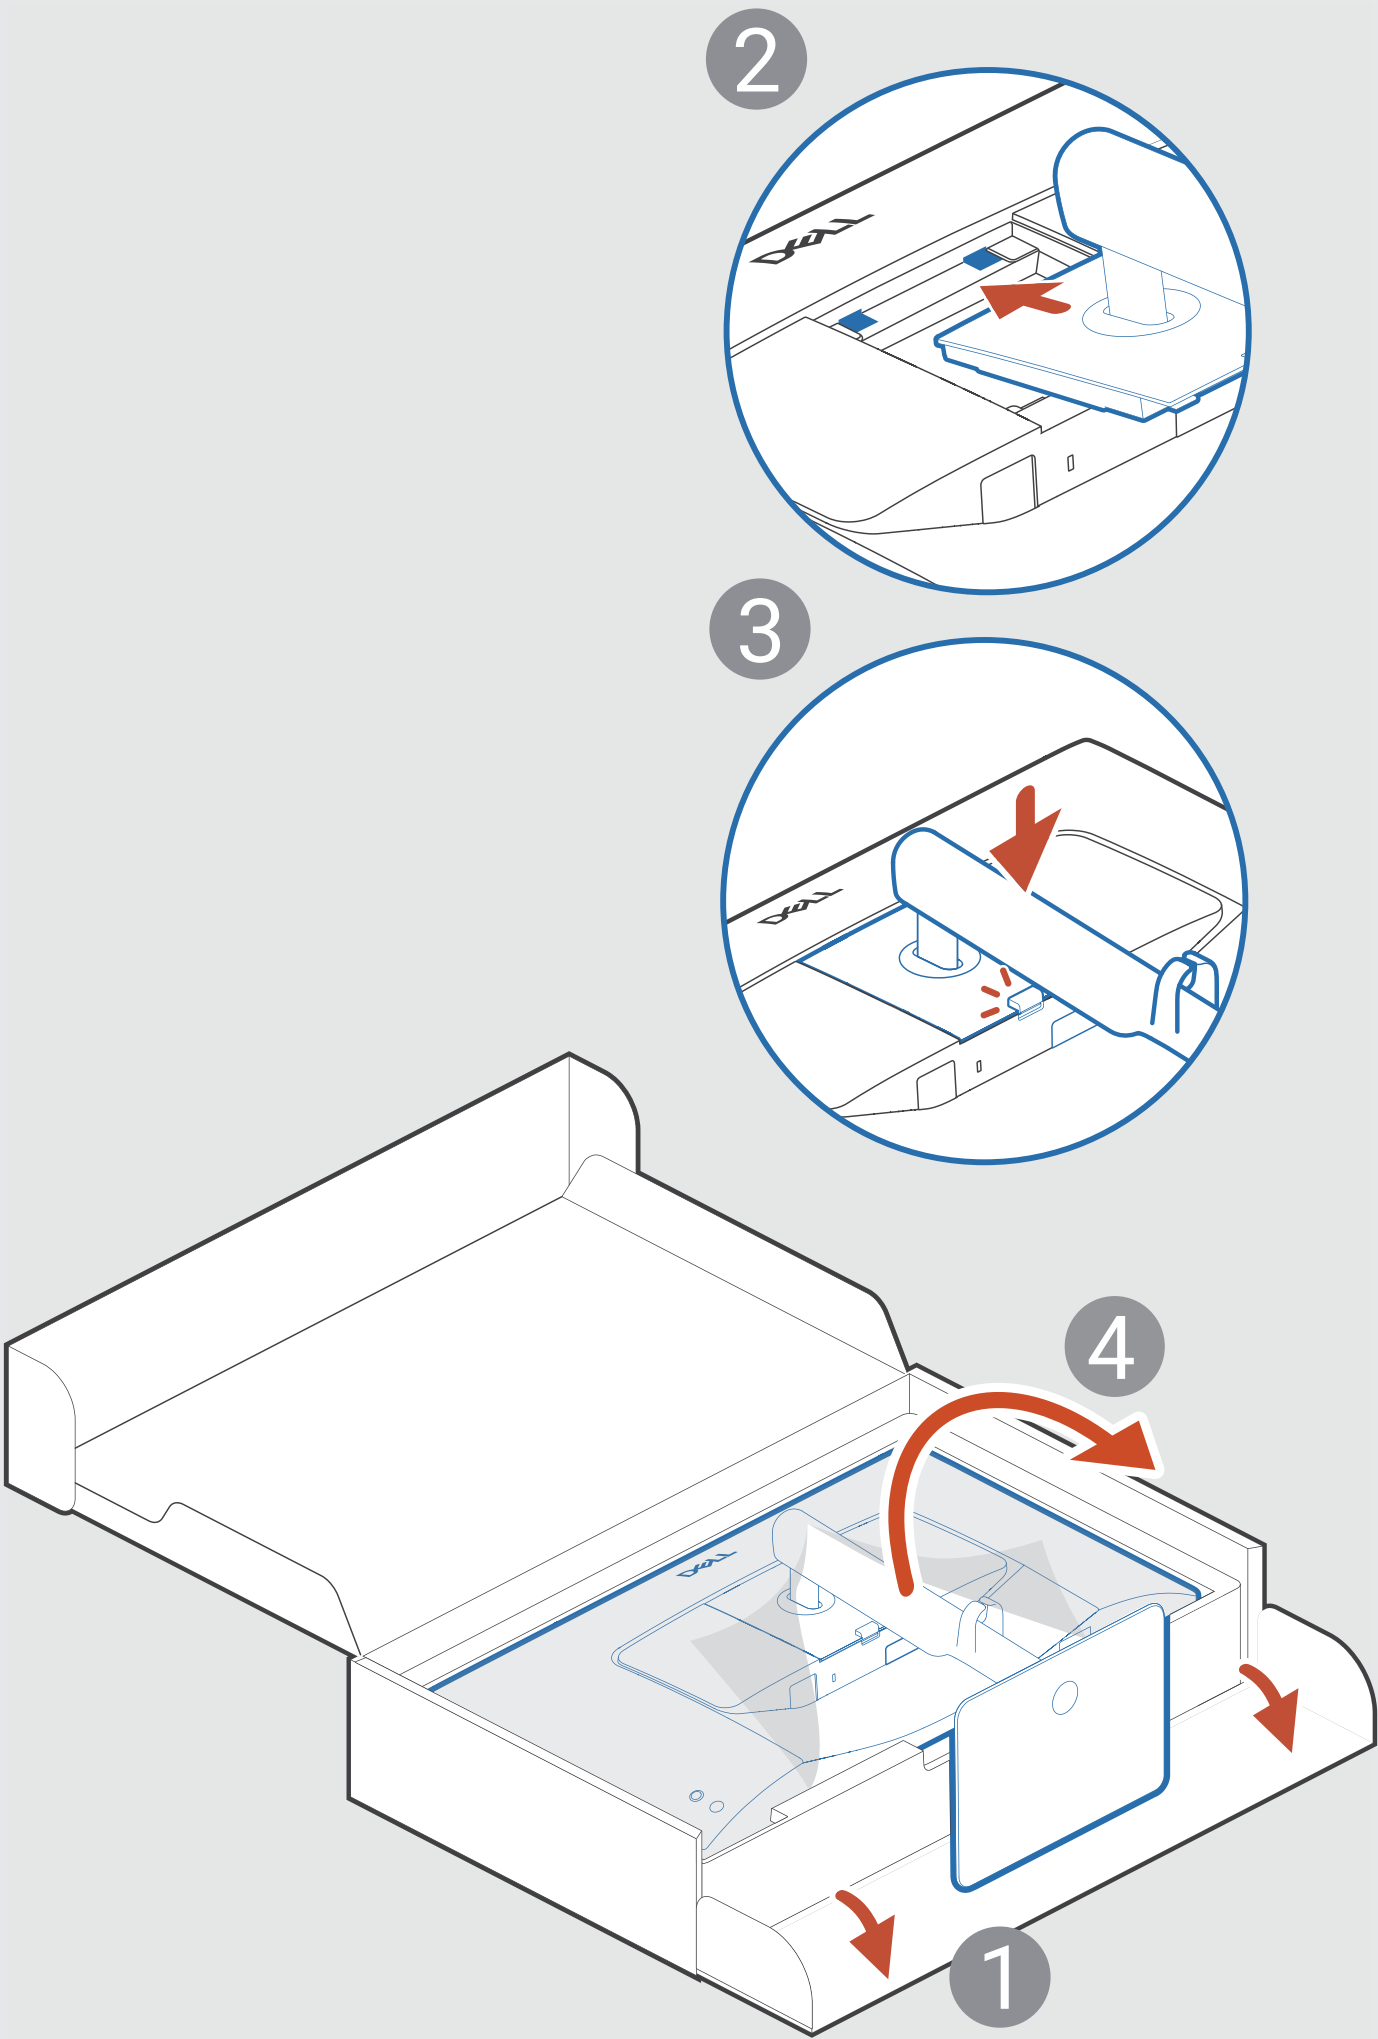



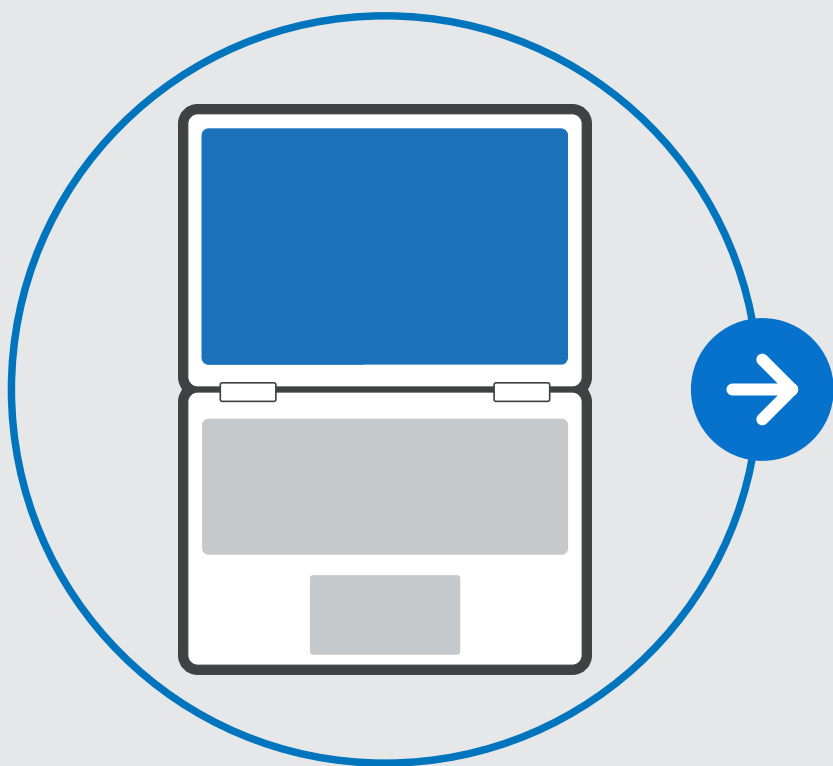
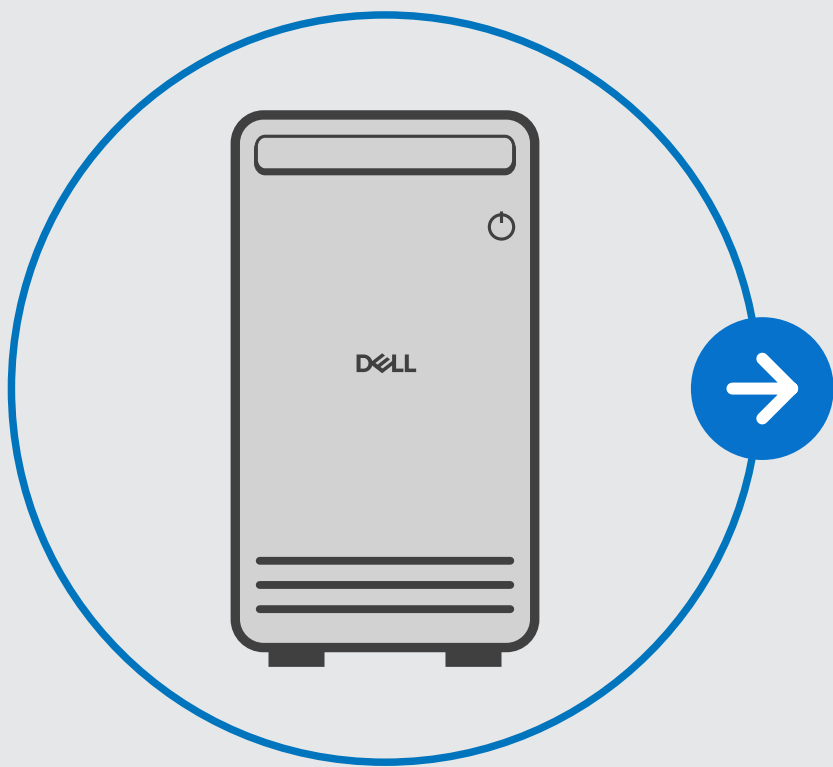


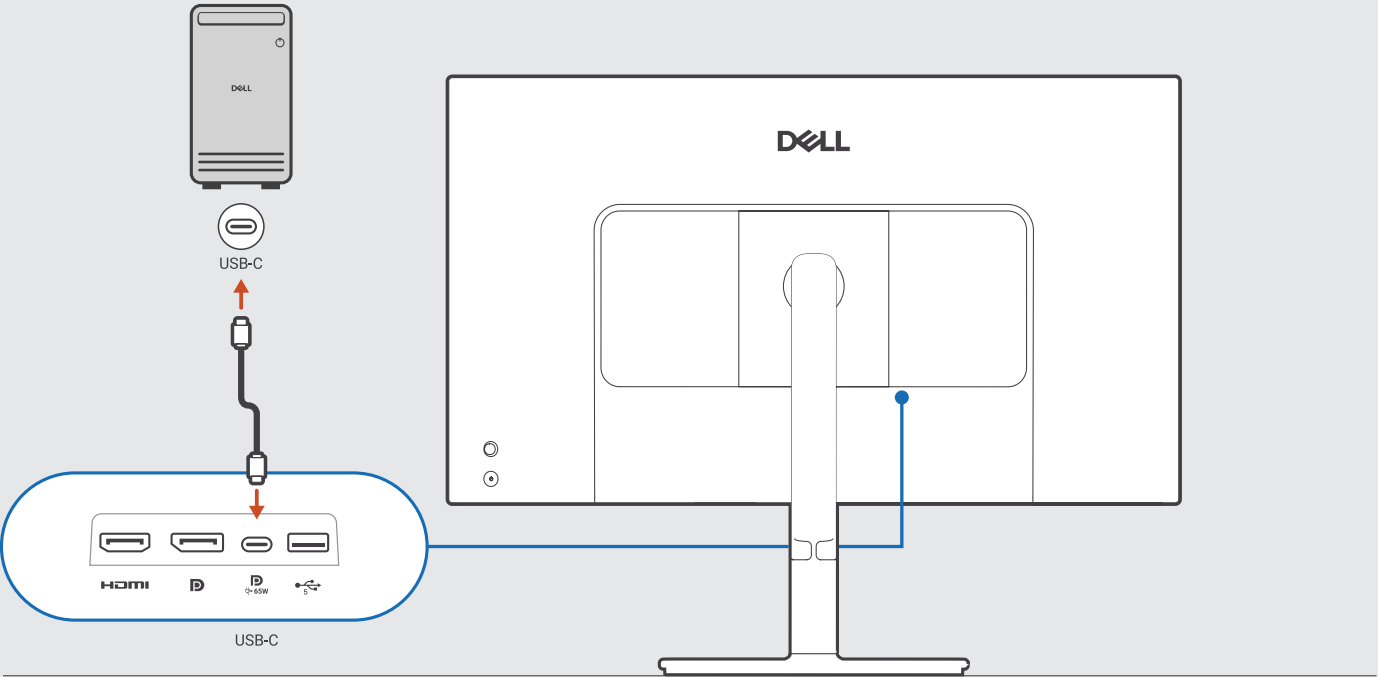


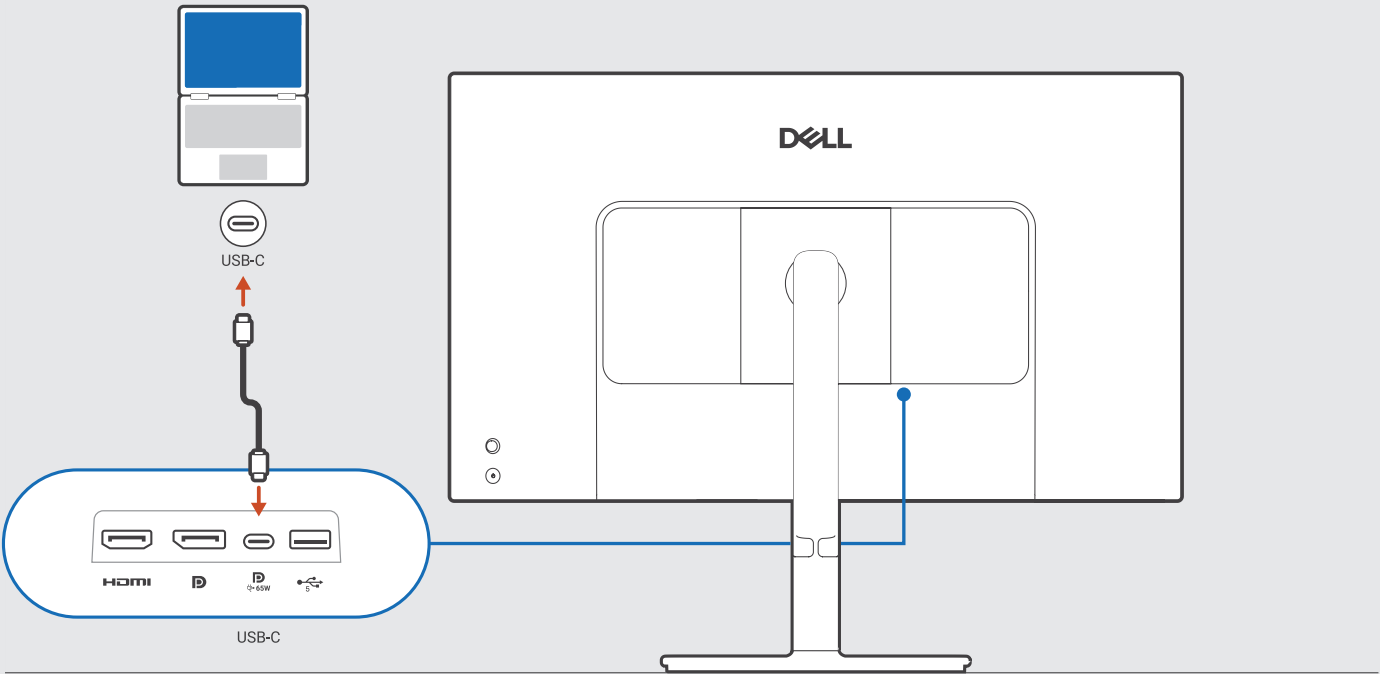

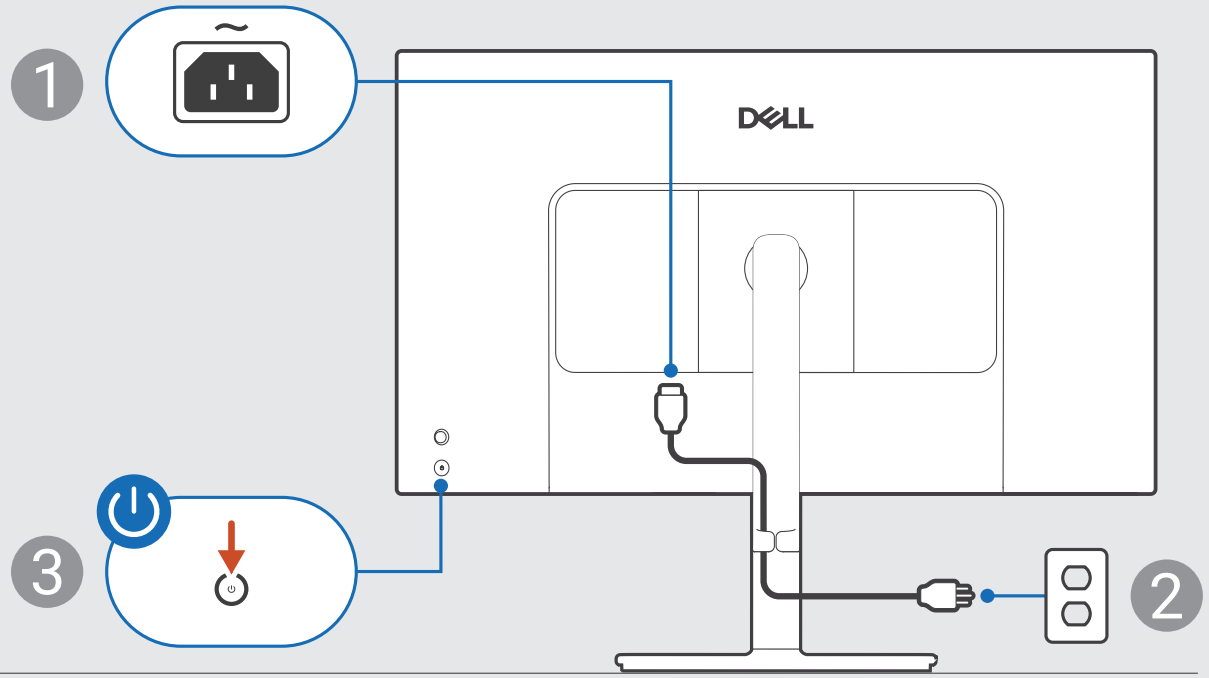


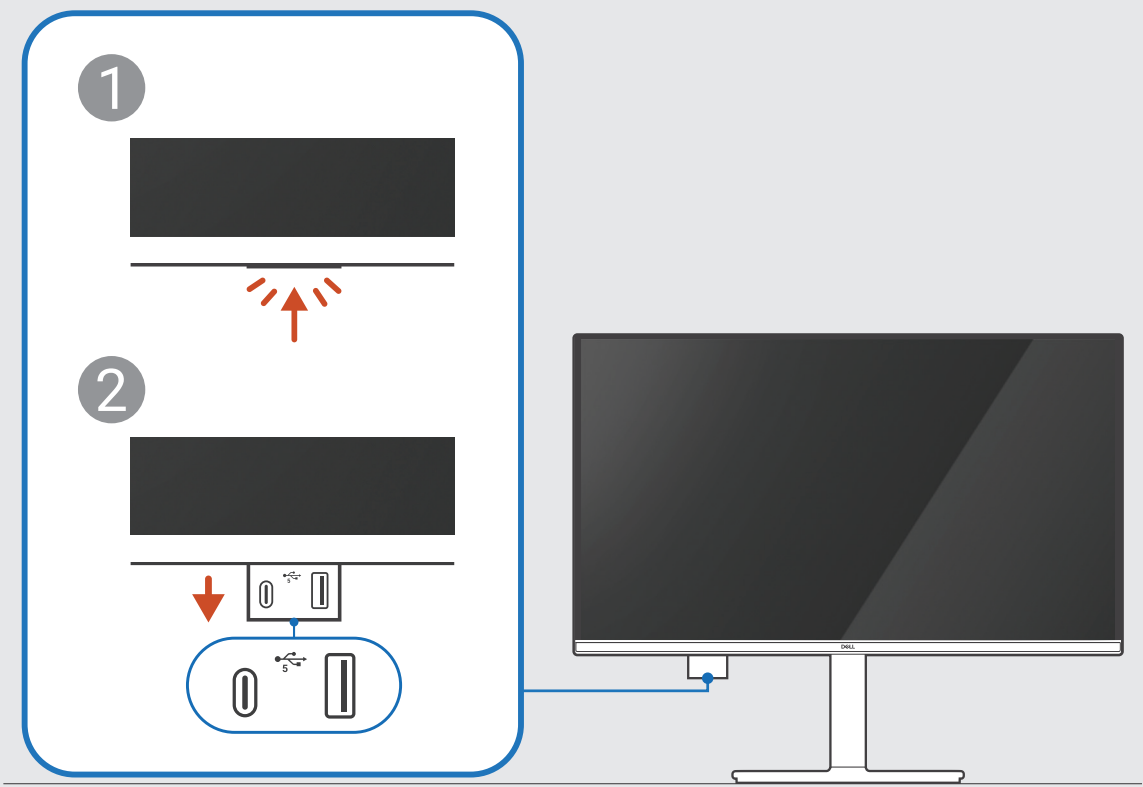

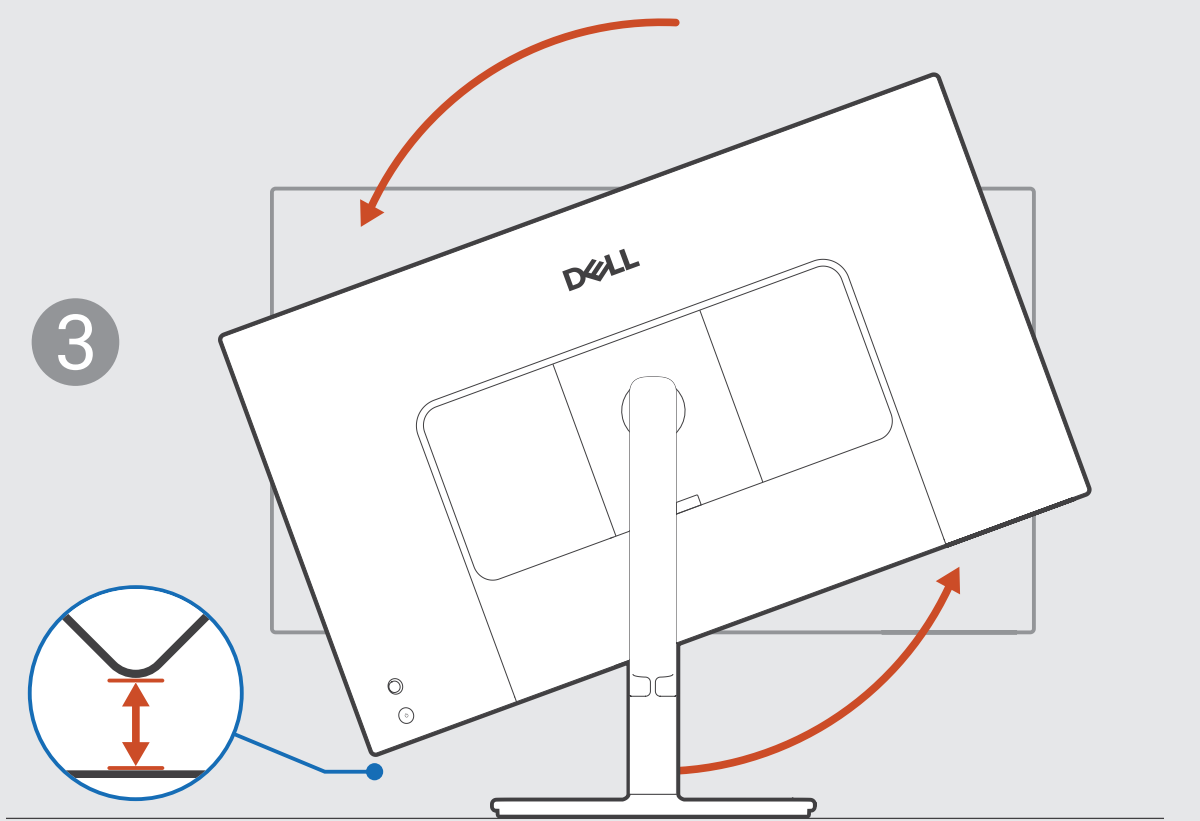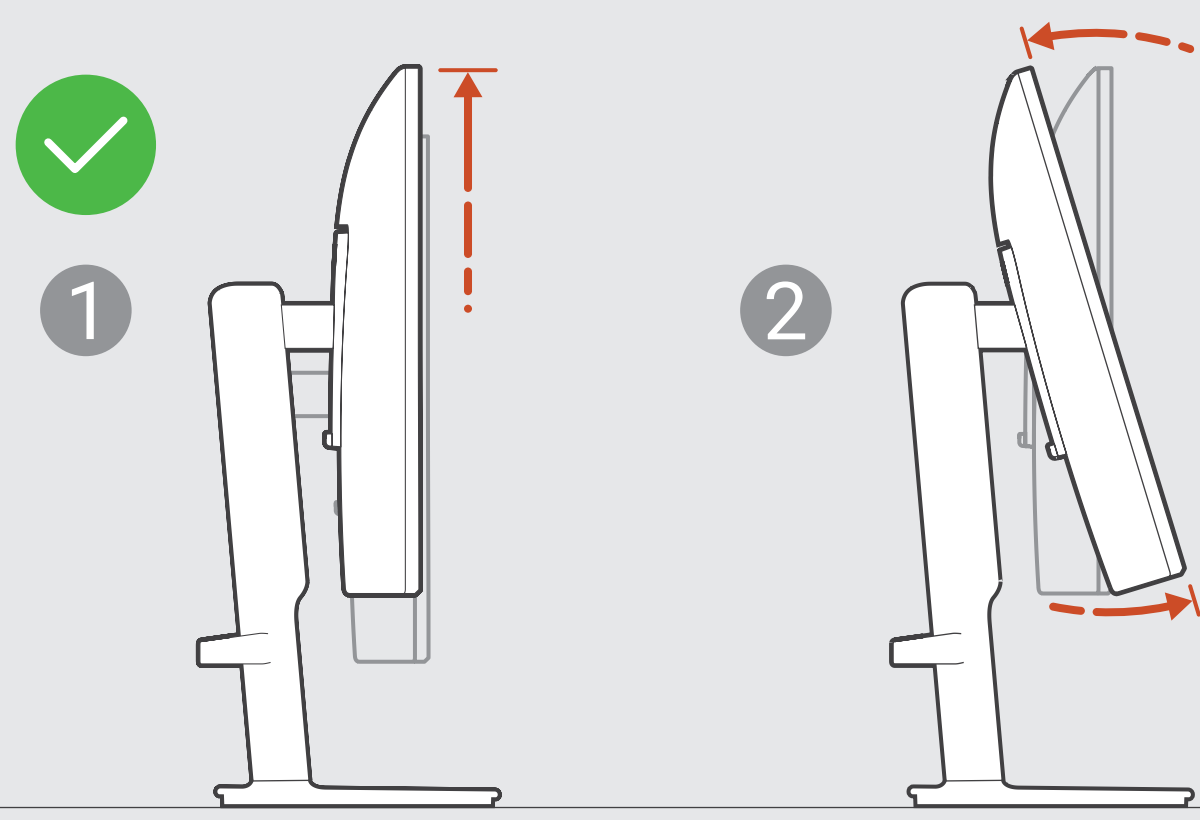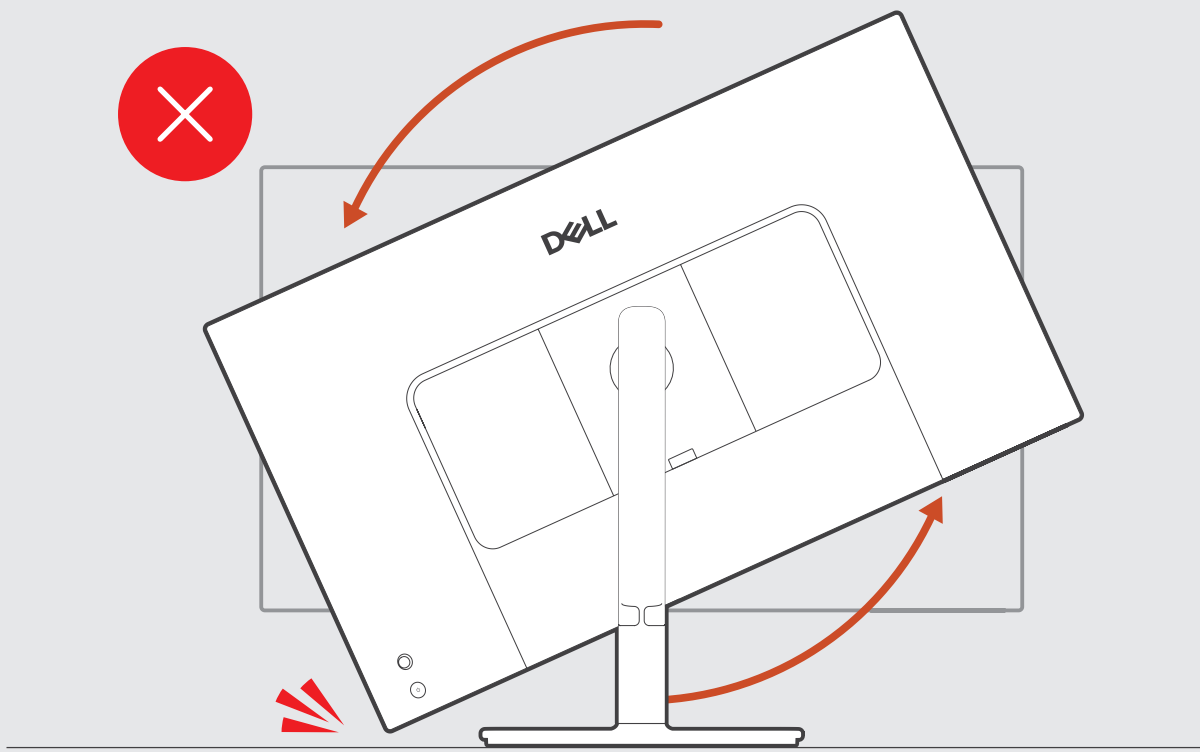

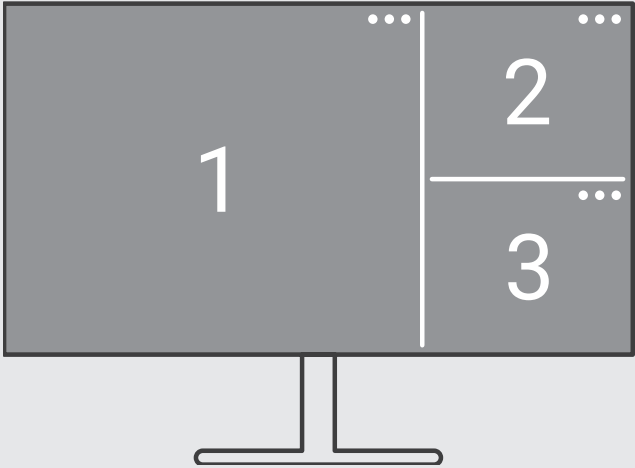

Dell Display and Peripheral Manager
Dell.com/support/ddpm

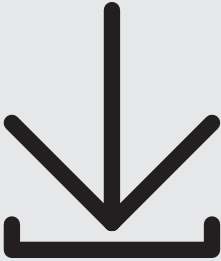

Dell.com/support/S2725DC