



Einhell

CLASSIC



Cordless Lawn Trimmer

GC-CT 18/24 Li - Solo

Item No.: 3411123

Ident No.: 11017

Bar Code: 4006825626582

With the Einhell GC-CT 18/24 Li - Solo cordless grass trimmer in the tool shed, you have a practical helper whenever the planting in your grounds, garden and edges needs trimming. The cordless grass trimmer is a member of the Power X-Change series and therefore operates without a cable or the need for a source of electricity. Thanks to the Flower Guard, flowers and ornamental plants are effectively protected from damage. With a cutting width of 24 cm and a speed of up to 8500 rpm, the blade get the job done with plenty of power. The telescopic long handle is infinitely adjustable, so it can be adapted to any user. It is supplied complete with 20 plastic blades. The battery/charger are available separately

Features & Benefits

- Power X-Change System
- Flower guard
- Telescopic long handle, infinitely adjustable
- Incl. 20 plastic blades
- User-friendly two-hand operation thanks to additional handle

Technical Data

- | | |
|--------------------------|----------|
| - Revolutions of knife | 8500 rpm |
| - Cutting width of knife | 24 cm |

Logistic Data

 
- | | |
|--------------------------------------|--------------------|
| - Product weight | 1.3 kg |
| - Gross weight single packaging | 1.82 kg |
| - Dimensions single packaging | 930 x 160 x 105 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 7 kg |
| - Dimensions export carton | 980 x 395 x 240 mm |
| - Container quantity (20"/40"/40"HC) | 1044 2160 2400 |



FLOWER GUARD



TELESCOPIC

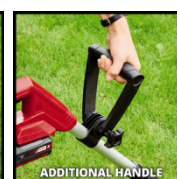

ADDITIONAL HANDLE



 
EASY HANDLING



INCL. 20 pcs BLADES



TELESCOPIC

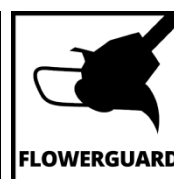

FLOWERGUARD



LOW WEIGHT
EASY HANDLING

Available as special accessories



Ersatzmesser-Set GE-CT 18 Li
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 30min Power-X-Change
PXC-Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory