

Important safety information WARNING: Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

This product is not a toy. Keep it out of reach of children.
 Please keep the product away from pets.
 Warning! This power bank is with lithium polymer battery inside.
 Do not try to open the power bank.
 Do not expose to heat, water, moisture or direct sunlight!
 Do not attempt to replace the battery yourself- you may damage the battery, which could cause overheating and injury. Repairs or service should only be performed by qualified personnel.
 Battery must be recycled or disposed of separately from household waste. Do not incinerate the battery.
 To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 Please remove the charging cable when the power bank is fully charged.
 Product operating and storage temperature is from 5 degrees Celsius to 35 degrees Celsius. Under and over this temperature might affect the function.
 Do not drop or expose to impact or shock in any way.

ENG 1



Item Overview

Package Contents Power Bank Type-C Charging Cable User Manual

ENG 2

* Battery Capacity: 10,000mAh * Type-C/Micro Input: 5 V/2A * USB-A Output 1/2: 5V/2A * With Battery Level Indicator Charging the Power Bank

Specifications

 Fully charge the power bank before using it for the first time.
 Connect the Type-C cable to the Type-C input port of the 3. Connect the other end of the cable to a USB power source.4. When all 4 LEDs are lit, the power bank is fully charged.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual. ALL RIGHTS RESERVED, COPYRIGHT

> denver ENG 3

DENVER A/S

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environ-All cities have established collection points, where electric and

electronic equipment and batteries can either be submitted

free of charge at recycling stations and other collection sites,

or be collected from the households. Addi-tional information

ENG 4

is available at the technical department of your city

Contact Main contact point: contact.hq@denver.eu Germany
Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau Phone: +49 851 379 369 40 Phone: **+45 86 22 61 00** (Push *1" for support) Monday - Thursday 09:00 - 16:30 Friday 09:00 - 14:00 Benelux
DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3-449 HE Woerden
The Netherlands
Phone: 0900-3437623
E-Mail: support.nl@denver.eu Spain/Portugal
DENVER SPAIN S.A
Ronda Augustes y Louis
16 ul. Częstochowska 140 62-800 Kalisz Phone: **62 75 38 092** E-Mail: **denver-service@letmerepair.pl** Spain Phone: +34 960 046 883 Mail: support.es@denver.eu Godziny pracy: 8 – 18 (poniedziałek – piątek)

Denver A/S
Denver A/S
Omega SA, Soeften
DK-8382 Hinnerup
Denmark
denver.eu
facebook.com/denver.eu

DENVER A/S Omega 5A, Soeften DK-8382 Hinnerup Denmark www.facebook.com/denver.eu ENG 5