

				MV	G220 (Camer	a Com	patibil	ity Cha	art (Ca	ble Co	ntrol)						
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	n Remark				
	RX100 III (RX100M3)	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	≥ HUB_V102					
	RX100 IV (RX100M4)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.30	≥ HUB_V102					
	RX100M5A	Type-C to Multi	√	√	√	×	×	×	√	×	√	2.00	≥ HUB_V102					
	RX100 VI (RX100M6)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	≥ HUB_V102	1. After connecting the coble, he gure to newer on the MVC220				
	RX100 VII (RX100M7)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	≥ HUB_V102	1. After connecting the cable, be sure to power on the MVG220 before the camera. 2. Support Optical Zoom: Please set [Zoom Setting] to				
	ZV-1	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.0	≥ HUB_V102	"ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the				
	ZV-E10	USB 2.0 to Type-C (C01)	√	√	√	×	×	×	√	×	√	1.0	≥ HUB_V107	-(3. Please set [Auto Heview] to be "Off" when shooting the timelapse video. -4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO N				
	DSC-WX500	Type-C to Multi	√	√	√	×	×	×	√ .	×	√ .	1.0	≥ HUB_V102					
	DSC-HX90	Type-C to Multi	√	√	√	×	×	×	√ .	×	√ .	1.0	≥ HUB_V102					
	DSC-RX10 III	Type-C to Multi	√	√	√ /	×	×	×	√ /	×	√	1.0	≥ HUB_V102					
	DSC-RX10 IV	Type-C to Multi	√ √	√ √	√ √	×	×	×	√ √	×	√ √	2.00	≥ HUB_V102					
	α6100	Type-C to Multi	√ √		√ √	×	×	×	V √	×	V √	1.00	≥ HUB_V102	_				
	α6300 α6400	Type-C to Multi	√ √	√ √	√ √	×	×	×	V √	×	V √	1.00	≥ HUB_V102 ≥ HUB_V102	-				
	α6500	Type-C to Multi Type-C to Multi	√ √	√	√ √	×	×	×	√ √	×	√	2.00	≥ HUB_V102 ≥ HUB_V102	-				
	α6600	Type-C to Multi	√ √	√	√	×	×	×	√ √	×	\ \ \ \ \	2.00	≥ HUB_V102	_				
	A7S	Type-C to Multi	√	√	√	×	×	×	√ √	×	\ \ \ \ \	3.20	≥ HUB_V102	_				
	α7S II	Type-C to Multi	· √	· √	· √	×	×	×	√ √	×	· √	2.00	≥ HUB_V102	-				
	A7R	Type-C to Multi	√ ·	√ √	√	×	×	×	√	×	· √	2.00	≥ HUB_V102	After connecting the cable, be sure to power on the MVG220 before the camera.				
Sony	α7R II	Type-C to Multi	√ ·	√ √	√	×	×	×	√	×	· √	4.00	≥ HUB_V102	2. Please set [Zoom Setting] to "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.				
_ 5.19	α7R III	Type-C to Multi	√	√ √	√ √	×	×	×	√ √	×	√	3.01	≥ HUB_V102	Please set [Auto Review] to be "Off" when shooting the timelapse video. Support Switch Photo/ Video Mode in P. A. S. M. AUTO.				
	α7R IV	Type-C to Multi	√	√ √	√	×	×	×	√ √	×	√ √	1.00	≥ HUB_V107	4. Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.				
	α7R M4A	Type-C to Multi	√	√ √	√	×	×	×	√ √	×	√ √	1.00	≥ HUB_V102	1				
	α7 II (A7M2)	Type-C to Multi	√	√ √	√ √	×	×	×	√ √	×	√	4.00	≥ HUB_V102	-				
	α7 III (A7M3)	Type-C to Multi	√	√ √	√	×	×	×	√ √	×	→	3.10	≥ HUB_V102	1				
	α9	Type-C to Multi	√	√ √	√	×	×	×	√ √	×	√ √	6.00	≥ HUB_V102	1				
	α9 ΙΙ	Type-C to Multi	√	√ √	√	×	×	×	√	×	√ √	3.00	≥ HUB_V102	1				
	α7 IV (A7M4)	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.00	≥ HUB_V109	1				
	A7C	USB 2.0 to Type-C (C01)	√	V	√	×	×	×	√	×	×	1.0	≥ HUB_V106	1. After connecting the cable, be sure to power on the MVG220 before the camera. 2. Please set the [Ctrl w/ Smartphone] to off. (Network) → [Ctrl w/ Smartphone] → [Off] 3.Set "USB Connecting" to "PC Remote": (Network) → [PC Remote Function] → [PC Remote]□[On] 4. Set "Still Img. Save Dest." to "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to "Off" when shooting the timelapse video. 6. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode				
	α1	Type-C to Multi	√	√	√	×	×	×	√	×	√	1.01	≥ HUB_V106	After connecting the cable, be sure to power on the MVG220 before the camera.				
		USB 2.0 to Type-C (C01)	√	√	√	×	×	×	×	×	×	1.01	≥ HUB_V107	2. Support Optical Zoom when equipped with a Motorize Lens:				
	α7S III	Type-C to Multi	√	√	√	×	×	×	√	×	×	1.01	≥ HUB_V106	Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to Off when shooting the timelapse				
		USB 2.0 to Type-C (C01)	√	√	√	×	×	×	×	×	×	1.00	≥ HUB_V109	Tvideo .				
	FX3	Type-C to Multi	√	√	√	×	×	×	√	×	×	1.00	≥ HUB_V109	4. Please set the [Ctrl w/ Smartphone] to Off. (Network) → [Ctrl w/ Smartphone] → [Off] 5. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode				
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	Remark				
	EOS M50	USB2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104	MVG220 can switch to video mode from P,A,M shooting mode, but you will need to switch to video mode from photo mode on the camera manually.				
	EOS M50 Mark II	USB2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.00	≥ HUB_V104	2. switch to "MF" mode on the lens when using electronic follow focusing.				
	EOS M6 Mark II	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104	When shooting timelapse video, please set the Canon came ra "Image Review" to Off.				
	Powershot G7 X Mark III	USB 2.0 to Type-C (C01)	V	√	×	×	×	×	×	V	×	1.0.1	≥ HUB_V104	1. Be sure camera Wi-Fi is off before connecting the cable 2. MVG220 can switch to video mode from P,A,M shooting mode, but you'll need to switch to video mode from photo on the camera manually. 3. Switch to "MF" Mode on the lens when when using elec follow focusing. 4. When shooting timelapse video, please set the Canon or a "Image Review" to Off.				
i I	EOS 200D II	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104					
	EOS 850D	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104					
	EOS 80D	USB 2.0 to Mini (B01)	√	√	×	×	×	×	×	√	×	1.0.2	≥ HUB_V104	1. Please switch photo / video mode on camera manually.				
	EOS 90D	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104	2. Switch to "MF" mode on the lens when using electronic follow focusing.				
	EOS 6D	USB 2.0 to Mini (B01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104	3. When shooting timelapse video, please set the Canon camer — "Image Review" to Off.				
	EOS 6D Mark II	USB 2.0 to Mini (B01)	√	√	×	×	×	×	×	√	×	1.0.3	≥ HUB_V104					
	EOS 5D Mark III	USB 2.0 to Mini (B01)	√	√	×	×	×	×	×	√	×	1.3.5	≥ HUB_V104					
	EOS 5D Mark IV	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.1.2	≥ HUB_V104					
Canon	EOS 5DS R	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	√	×	1.1.1	≥ HUB_V109	After connecting the cable, be sure to power on the MVG220 before the camera and wait for about 5 seconds. The camera icon on the gimbal screen will light up, indicating you've successfully connected. When the camera is in photo mode and the gimbal switches to video mode, some keys of the camera will not respond to commands.				
	EOS RP	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.3.0	≥ HUB_V104	MVG220 can switch to video mode from P,A, M shooting mode, but you'll need to switch to video mode from photo mode on the camera manually. Switch to "MF" Mode on the lens when using electronic follow focusing. Please do not use the release cable to control the video re-				
	EOS R	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.0.0	≥ HUB_V104	cording while in photo mode in RP/R5/R6 camera, as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of electronic follow focusing. 1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when using electronic follow				
	EOS R5	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.1.1	≥ HUB_V104	focusing. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera, as this often causes the camera to crash. 4. When shooting timelapse video, please set the Canon came ra "Image Review" to Off 5. Using the adapter with the EF Mount Lens will increase the delay of electronic follow focusing. 6. If connecting the camera to an external device via HDMI Cable you need to set the "HDMI Display" to be displayed on both on camera screen and on the other device, Then you can control both photo capture or video recording.				
Notes:	EOS R6	USB 2.0 to Type-C (C01)	V	√	×	×	×	×	×	√	×	1.1.1	≥ HUB_V104	1. Please toggle photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use use electronic follow focusing. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as this ofte causes the camera to crash. 4. Using the adapter with the EF Mount Lens will increase the delay of electronic follow focusing. 5. If you connect the camera to an external device via HDMI Cable, you need to set the "HDMI Display" to be displayed both on the camera screen and on the other device. Then you can controlboth photo capture or video recording.				

1. "\" Means support this function,"x"Means do not support.

2. For Sony cameras with Multi Port, Type-C to Multi release cable can be used to control the camera but not to charge. Type-C to Micro (A03) release cable can ba used to charge Sony camera but not to control it.



				MV	G220	Camer	a Com	patibil	ity Cha	art (Ca	ble Co	ntrol)		
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	Remark
	GH5S	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.2	≥ HUB V104	1. Set the USB Mode to be PC (tether) on camera. 2. Turn off the camera Wi-Fi before using the cable to control camera as Wi-Fi and USB Trigger cannot be used at the same time.
	G. 100	000 2.0 to 1,500 0 (001)	·	·		,						1.2	21105_1101	MVG220 can switch photo/ video mode in P, A, S, M shooting mode. The camera will auto focus when using control capture photo .
		Type-C to DC2.5mm	√	√	×	×	×	×	√	×	×	2.6	≥ HUB_V109	When switched to Photo mode, the camera won't respond to video-capturing commands, when switched to video mode, the camera won't respond to photo-capturing commands. 1. Set the USB Mode to be PC (tether) on camera.
Panasonic	GH5	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	2.6	≥ HUB_V109	2. Turn off the Camera WiFi before using the cable to control camera as Wi-Fi and USB Trigger cannot be used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH4	Type-C to DC2.5mm	√	√	×	×	×	×	√	×	×	2.7	≥ HUB_V104	
	G9	Type-C to DC2.5mm	√	√	×	×	×	×	√	×	×	2.00	≥ HUB_V104	Please switch photo / video mode on the camera manually.
		Type-C to DC2.5mm	√	√	×	×	×	×	√	×	×	2.00	≥ HUB_V104	
	S5	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	2.00	≥ HUB_V104	Set the USB Mode to be PC (tether) on the camera. Turn off the camera Wi-Fi before using the cable to control camera as Wi-Fi and USB Trigger cannot used at the same time. MVG220 can switch photo/ video mode in P, A, S, M shooting mode. The camera will auto focus when using control capture photo.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	Remark
	Z 7	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	×	1.00	≥ HUB_V106	
	Z7 II	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	×	1.00	≥ HUB_V106	
•	Z5	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	×	2.00	≥ HUB_V106	1. After connecting the cable, be sure to power on the
	Z6	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	×	2.00	≥ HUB_V106	MVG220 before the camera and wait for about 6 seconds for a successful connection, after camera power is on.
	Z6 II	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	×	×	1.30	≥ HUB_V109	Please switch photo / video mode on camera manually. When using the electronic focus function, you need to set the
	Zfc	USB 2.0 to Type-C (C01)	√	√	×	×	×	×	×	√	×	1.10	≥ HUB_V109	camera focus mode to AF-FS or AF-FC in video mode; in photo mode, you need to set the focus mode to non-MF. Mode." Mode."
Nikon	Z50	USB 2.0 to Micro (A01)	√	√	×	×	×	×	×	×	×	1.00	≥ HUB_V106	
	D7500	USB 2.0 to Micro (A01)	V	√	×	×	×	×	×	×	×	1.00	≥ HUB_V109	After connecting the cable, be sure to power on the MVG220 before the camera. Once camera power is on, wait for about 6 seconds for a successful connection. Please make sure the LV is on, in order to use the gimbal to control the camera. The MVG220 can start/ stop video recording only if the camera is turned on, under video mode. When using the gimbal to control the video recording, the camera monitor shows the light but not the video duration. S. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	Remark
	X-T20	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	2.01	≥ HUB_V104	Please set [MIC/REMOTE RELEASE] to [REMOTE] under the [MOVIE SETTING] menu.
	X-T30	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.00	≥ HUB_V104	After manually switching to video mode on the camera, MVG220 can control the camera to start recording.
	X-A5	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	2.00	≥ HUB_V104	
	X-A7	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	1.00	≥ HUB_V104	Please set [MIC/REMOTE RELEASE] to [REMOTE] under the [MOVIE SETTING] menu.
	X-T100	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	√	×	×	2.00	≥ HUB_V104	
Fujifilm	X-H1	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	2.01	≥ HUB_V104	
i ajiiiiffi	X-T3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	3.01	≥ HUB_V104	Make sure to connect MVG220 to the camera ø2.5mm port. Please switch on the camera's photo/ video mode manually.
	X-T4	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.00	≥ HUB_V104	value of the control of photo value manually.
	X-S10	Type-C to TRS3.5	√	√	×	×	×	×	√	×	×	1.02	≥ HUB_V104	
_		(Not included) Type-C to TRS3.5											_	1. Please set [MIC/REMOTE RELEASE] to [REMOTE] under the [MOVIE SETTING] menu.
	X-T200	(Not included)	√	√	×	×	×	×	√ .	×	×	1.00	≥ HUB_V104	2. Please switch on the camera's photo/ video mode manually.
	X-E3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	√	×	×	1.22	≥ HUB_V107	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	HUB Firmware Version	Remark
Sigma	FP	USB 2.0 to Type-C (C01)	V	√	√	×	×	×	×	×	×	1.22	≥ HUB_V109	When the connection is successful, the camera icon in the gimbal will light up. After taking a single photo, wait for the CAMERA SD light to go off before continuing to take the next photo. After the connection with the gimbal, all the keys of the camera are unavailable.

Notes:
1. "\sqrt{n} Means supports this function,"\times" Means do not support.
2. When using Type-C to TRS3.5 (T03), Type-C to TRS2.5 (T02), USB 2.0 to Mini (B01) to connect the camera and gimbal, the camera connection icon on the gimbal screen will not light up.



	MVG220 Camera Compatibility List (Wi-Fi Control)												
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO	EV Adjustment	WB	Halfway Press To Focus	_	Zoom Control (digital or optical)		Keyboard Firmware Version Remark on Gimbal
	α9	Wi-Fi	√	√	×	√	×	√	×	×	×	Ver. 6.00	sony_v104.bin
	α7 III (A7M3)	Wi-Fi	√	√	×	√	×	√	×	×	√	Ver. 3.01	sony_v104.bin
	α7R III	Wi-Fi	√	√	×	√	√	√	×	×	×	Ver. 3.0	sony_v104.bin
	α7 II (A7M2)	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 4.00	sony_v104.bin
	α7S II	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin
	α7R II	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 4.00	sony_v104.bin
	A7S	Wi-Fi	√	√	×	×	√	×	×	×	×	Ver. 1.0.2	sony_v104.bin
	A7r	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin
Comu	α7	Wi-Fi	√	х	×	×	√	×	×	×	×		sony_v104.bin
Sony	RX100 IV (RX100M4)	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.0.0	sony_v104.bin
	RX100 V (RX100M5)	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 1.0.2	sony_v104.bin
	RX100 VI (RX100M6)	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 3.10	sony_v104.bin
	α5100	Wi-Fi	√	√	√	×	√	×	×	×	√	Ver. 3.21	sony_v104.bin
	α6000	Wi-Fi	√	х	×	×	√	×	×	×	√		sony_v104.bin
	α6500	Wi-Fi	√	√	×	×	√	×	×	×	√	Ver. 2.00	sony_v104.bin
	α6400	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.00	sony_v104.bin
	α6300	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 2.00	sony_v104.bin
	α6100	Wi-Fi	√	√	×	√	√	√	×	×	√	Ver. 1.00	sony_v106.bin
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	Keyboard Firmware Version Remark on Gimbal
	EOS M50	Wi-Fi	√	√	√	×	×	×	×	×	×	Ver. 1.0.0	canon_v104.bin
	EOS R	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v104.bin
	EOS M6 Mark II	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v105.bin
	EOS RP	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.3.0	canon_v105.bin
	EOS 200D II	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin
	EOS 90D	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.0	canon_v106.bin
	Powershot G7 X Mark III	Wi-Fi	√	√	√	√	×	×	×	×	×	Ver. 1.0.1	canon_v105.bin
Canon	EOS 80D	Wi-Fi	√	√	×	√	√	√	×	√	×	Ver. 1.0.2	canon_v106.bin
	EOS 6D Mark II	Wi-Fi	√	√	×	√	√	√	×	√	×		canon_v106.bin Connecting Step: Camera: WIFI Setup-Camera Control API-Connecting
	EOS 6D	Wi-Fi	√	×	×	√	√	√	×	×	×	Ver. 1.1.7	canon_v106.bin
	EOS 200D	Wi-Fi	√	√	√	√	√	√	×	×	×		canon_v106.bin
	EOS 5D Mark IV	Wi-Fi	√	√	√	√	√	√	×	×	×	Ver. 1.1.2	canon_v106.bin
	EOS 70D	Wi-Fi	√	×	×	√	√	×	×	×	×	Ver. 1.1.1	canon_v106.bin
	EOS 77D	Wi-Fi	√	√	√	√	√	×	×	×	×	Ver. 1.0.2	canon_v106.bin
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Electronic Follow Focus	Zoom Control (digital or optical)	Camera Version	Keyboard Firmware Version on Gimbal
	DMC-GH4GK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 2.7	panasonic_v104.bin
	DC-GF9XGK	Wi-Fi	√	√	√	√	√	√	×	√	√		panasonic_v104.bin
	DC-GF9KGK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.1.1	panasonic_v104.bin
	DC-GF10KGK	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.0.0	panasonic_v104.bin
Panasonic	DC CHECCK K	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.0.2	panasonic_v104.bin
	DC-GH5SGK-K	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.0.0	panasonic_v104.bin
	DC-GX9KGK-K	Wi-Fi	√	√	√	√	√	√	×	√	×		panasonic_v104.bin
	DMC-GX85GK (M)	Wi-Fi	√	√	√	√	×	√	×	√	×	Ver. 1.2	panasonic_v104.bin
	DMC-GX85GK (S-A-P)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 1.2	panasonic_v104.bin
	DC-GH5 (M-S-A-P)	Wi-Fi	√	√	√	√	√	√	×	√	×	Ver. 2.3	panasonic_v104.bin

Note: "√" Means supports this function, "×" Means do not support



			MVG220 Lens Com	patibility List			
and	Camera Model	Camera Size	Camera Size	Lens size & weight	Mounting status	Balance Horizon	ntal Adjustmen Long En
			E 10–18mm F4 OSS	Ф70mm*63.5mm 225g	Camera + Lens	√	√
			2 10 10 111111 1 0 0 0	+76 55.5 <u>22.59</u>	Camera & Lens & Follow Focus (MVGFF)	√	√ √
			FE 12-24mm F4 G	Ф87mm*117mm 565g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√	√
			FE 16-35mm F2.8 GM	Ф89mm*122mm 680g	Camera + Lens	√	√
			1 2 10 00 2.0 dill		Camera & Lens & Follow Focus (MVGFF)		√ √
			FE16-35mm f/4 ZA OSS	Ф78mm*99mm 518g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)		√
			FE 24-70 F2.8 GM	Ф87.6mm*136mm 886g	Camera + Lens	×	×
			1 L 24-70 1 2.0 GW	Ψ07.0πm 100mm 000g	Camera & Lens & Follow Focus (MVGFF)	×	×
			Zeiss E 16-70 F4 OSS	Ф66.6mm*75mm 308g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			E PZ 18–105mm F4 G OSS	Ф78mm*110mm 427g	Camera + Lens	√	√
			21210 1001111111 1 0 000		Camera & Lens & Follow Focus (MVGFF)	√	√
			E PZ 18-200mm F3.5-6.3 OSS LE	Ф93.2mm*99mm 649g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	×	×
	α9 α7 III (A7M3)	α9 126.9×95.6×63.0mm 588g α7M3 126.9×95.6×73.7mm 565g	FE 4/24-105 G OSS	Ф83.4mm*113.3mm 663g	Camera + Lens	√	√
	α7R III α7S II	α7R3 126.9×95.6×62.7mm 572g α7S2 126.9×95.7×60.3mm 584g			Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ ./	√ √
	α7R II α7 II (Α7M2)	α7R2 126.9×95.7×60.3mm 582g α7M2 126.9×95.7×59.7mm 556g	FE 28-70mm f/3.5-5.6 OSS	Φ72.5mm*83mm 295g	Camera & Lens & Follow Focus (MVGFF)	√	√
	ar ii (Arme)	47WZ 120.0x00.7x00.71IIII 000g	FE 28mm F2	Ф64mm*60mm 200g	Camera + Lens	√	√
			T L ZOMMT Z	Ф04ПIП 00ПIП 2009	Camera & Lens & Follow Focus (MVGFF)	√	√
			Zeiss FE 35mm F2.8 ZA	Ф61.5mm*36.5mm 120g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{1}{\sqrt{1}} \frac{1}{\sqr	√ √
			Sigma 30mm f/1 4 DC DN	Φ64 8mm*73 2mm 065~	Camera + Lens		√
			Sigma 30mm f/1.4 DC DN	Φ64.8mm*73.3mm 265g	Camera & Lens & Follow Focus (MVGFF)		√ /
			Sigma 35mm f1.4 DG HSM Art	Φ77mm*94mm 665g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)		√ √
			EE 55mm E4 0	Φ64mm*74mm 004 m	Camera + Lens		√
			FE 55mm F1.8	Ф64mm*71mm 281g	Camera & Lens & Follow Focus (MVGFF)		√
			FE 50mm F2.8 MACRO	Φ71mm*71mm 236g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)		√ √
			55.55		Camera + Lens		√
			FE 85mm F1.4 GM	Ф89.5mm*107.5mm 820g	Camera & Lens & Follow Focus (MVGFF)		√
			Vario-Tessar FE 24-70mm F4 ZA OSS	Φ73mm*94.5mm 426g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	-	√ √
-					Camera + Lens		√
	α7R IV	α7R IV 128.9×96.4×77.5mm 665g	SAMYANG 1.5/35mm	Φ77*137.5mm 720g	Camera & Lens & Follow Focus (MVGFF)	√	√
	α7S III	α7S III 129.0×97.0×81.0mm 699g	FE 24-70 F2.8 GM	Ф87.6mm*136mm 886g	Camera + Lens		×
-					Camera & Lens & Follow Focus (MVGFF)		×
	α7 IV (A7M4)	a7M4 129×97×81mm 699g	Sony E PZ 18-105mm f/4.0 G OSS	Φ78mm*110mm 427g	Camera + Lens	√	√
	FX3	FX3 77.8×129.7×84.5mm 640g	TAMRON 28-75mm f/2.8 Di III RXD	Ф117.6mm*75.8mm 550g	Camera + Lens		×
y					Camera & Lens & Follow Focus (MVGFF) Camera + Lens		× √
			E 10–18mm F4 OSS	Φ70mm*63.5mm 225g	Camera & Lens & Follow Focus (MVGFF)	-	√
			FE 12-24mm F4 G	Ф87mm*117mm 565g	Camera + Lens	-	√ /
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	-	√ √
			FE 16-35mm F2.8 GM	Ф89mm*122mm 680g	Camera & Lens & Follow Focus (MVGFF)	√	√
			FE16-35mm f/4 ZA OSS	Ф78mm*99mm 518g	Camera + Lens	-	√
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens		√ ×
			FE 24-70 F2.8 GM	Ф87.6mm*136mm 886g	Camera & Lens & Follow Focus (MVGFF)	×	×
			Vario-Tessar FE 24-70mm F4 ZA OSS	Ф73mm*94.5mm 426g	Camera + Lens	-	√
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	-	√
			Zeiss E 16-70 F4 OSS	Ф66.6mm*75mm 308g	Camera & Lens & Follow Focus (MVGFF)	-	√
			E PZ 18-105mm F4 G OSS	Ф78mm*110mm 427g	Camera + Lens	-	√
					Camera & Lens & Follow Focus (MVGFF)		√
	α5100 α6000		E PZ 18-200mm F3.5-6.3 OSS LE	Ф93.2mm*99mm 649g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)		×
- 1	α6100	α6300 120×66.9×48.8mm 361g	FE 4/24-105 G OSS	Ф83.4mm*113.3mm 663g	Camera + Lens	√	√
	a6300					,	√
	α6300 α6400 α6500	α6400 120×67.0×60.0mm 359g α6500 120×66.9×53.3mm 410g	1 L 4/24-103 G 033	400.4mm 110.5mm 000g	Camera & Lens & Follow Focus (MVGFF)	-	
		α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS	Φ72.5mm*83mm 295g	Camera + Lens	√	√
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS	Ф72.5mm*83mm 295g	· · ·	√ √	
	α6400 α6500	α6400 120×67.0×60.0mm 359g			Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √ √ √	√ √ √
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS	Ф72.5mm*83mm 295g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens	\frac{}{} \frac{}{} \frac{}{}	√ √
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens	\frac{}{} \frac{}{} \frac{}{}	√ √ √
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2	Ф72.5mm*83mm 295g Ф64mm*60mm 200g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{}	\ \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{}
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens	\frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{}	\frac{}{}
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{}	\ \frac{}{} \frac{}{} \frac{}{} \frac{}{} \frac{}{}
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{\sqrt{\sqrt{\sqrt{\chi}}}{\sqrt{\sqrt{\chi}}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \sqr	\frac{\sqrt{\sqrt{\sqrt{\colored}}}{\sqrt{\sqrt{\colored}}} \frac{\sqrt{\sqrt{\colored}}}{\sqrt{\sqrt{\colored}}} \frac{\sqrt{\sqrt{\colored}}{\sqrt{\colored}} \frac{\sqrt{\colored}}{\sqrt{\colored}} \frac\
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens	\frac{\sqrt{\sqrt{\sqrt{\chi}}}{\sqrt{\sqrt{\chi}}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \sqr	\frac{1}{\sqrt{1}}
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{\sqrt{\sqrt{\sqrt{\chi}}}{\sqrt{\sqrt{\chi}}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \sqr	\frac{\sqrt{\sqrt{\sqrt{\colored}}}{\sqrt{\sqrt{\colored}}} \frac{\sqrt{\sqrt{\colored}}}{\sqrt{\sqrt{\colored}}} \frac{\sqrt{\sqrt{\colored}}{\sqrt{\colored}} \frac{\sqrt{\colored}}{\sqrt{\colored}} \frac\
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{\sqrt{\sqrt{\sqrt{\sqrt{\chi}}}}{\sqrt{\sqrt{\chi}}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \fr	\frac{1}{\sqrt{1}}
	α6400 α6500	α6400 120×67.0×60.0mm 359g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens	\frac{1}{\sqrt{1}} \frac{1}{\sqr	\frac{1}{\sqrt{1}}
	α6400 α6500 α6600	a6400 120×67.0×60.0mm 359g a6500 120×66.9×53.3mm 410g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO FE 28-70mm f/3.5-5.6 OSS	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g Φ72.5mm*83mm 295g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{1}{\sqrt{1}} \frac{1}{\sqr	\frac{1}{\sqrt{1}}
	α6400 α6500 α6600 RX100 IV (RX100M4) RX100 V (RX100M5) RX100 V (RX100M6)	RX100 IV 101.6×58.1×41.0 mm 298g RX100 V 101.6×58.1×41.0 mm 298g RX100 V 101.6×58.1×41.0 mm 299g RX100 V 101.6×58.1×41.0 mm 299g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO FE 28-70mm f/3.5-5.6 OSS	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g Φ72.5mm*83mm 295g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens	\frac{\sqrt{\sqrt{\sqrt{\chi}}}{\sqrt{\chi}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \frac{\sqrt{\chi}	\frac{1}{\sqrt{1}}
	α6400 α6500 α6600 RX100 IV (RX100M4) RX100 V (RX100M5) RX100 VI (RX100M6) RX100 VII (RX100M7)	RX100 IV 101.6×58.1×41.0 mm 298g RX100 V 101.6×58.1×41.0 mm 299g RX100 V 101.6×58.1×42.8mm 301g RX100 VI 101.6×58.0×42.8mm 370g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO FE 28-70mm f/3.5-5.6 OSS FE 85mm F1.4 GM	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g Φ72.5mm*83mm 295g Φ89.5mm*107.5mm 820g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{1}{\sqrt{1}} \frac{1}{\sqr	\frac{1}{\sqrt{1}}
	α6400 α6500 α6600 RX100 IV (RX100M4) RX100 V (RX100M5) RX100 V (RX100M6)	RX100 IV 101.6×58.1×41.0 mm 298g RX100 V 101.6×58.1×41.0 mm 298g RX100 V 101.6×58.1×41.0 mm 299g RX100 V 101.6×58.1×41.0 mm 299g	FE 28-70mm f/3.5-5.6 OSS FE 28mm F2 Zeiss FE 35mm F2.8 ZA Sigma 30mm f/1.4 DC DN Sigma 35mm f1.4 DG HSM Art FE 55mm F1.8 FE 50mm F2.8 MACRO FE 28-70mm f/3.5-5.6 OSS FE 85mm F1.4 GM	Φ72.5mm*83mm 295g Φ64mm*60mm 200g Φ61.5mm*36.5mm 120g Φ64.8mm*73.3mm 265g Φ77mm*94mm 665g Φ64mm*71mm 281g Φ71mm*71mm 236g Φ72.5mm*83mm 295g	Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera + Lens Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	\frac{\sqrt{\sqrt{\sqrt{\chi}}}{\sqrt{\chi}} \frac{\sqrt{\chi}}{\sqrt{\chi}} \frac{\sqrt{\chi}	\frac{1}{\sqrt{1}}



			MVG220 Lens Com	patibility List			
Brand	Camera Model	Camera Size	Camera Size	Lens size & weight	Mounting status		ntal Adjustment
					Camera + Lens	Short End √	Long End √
			LEICA DG SUMMILUX 15mm f/1.7 ASPH	Φ46mm*15mm 115g	Camera & Lens & Follow Focus (MVGFF)	×	×
			LEICA DG SUMMILUX 25mm f/1.4 ASPH	Ф77.7mm*75mm 510g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			LEICA DG MACRO 45mm f/2.8 OIS	Ф63mm*62.5mm 225g	Camera + Lens	√	√
				+35 52.5 22.5g	Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ √	√ √
Panasonic	DC-GH5SGK-K DC-GH5	GH5S 138.5×98.1×87.4mm 660g GH5 138.5×98.1×87.4mm 725g	LEICA DG Vario-Elmarit 8-18mm f/2.8-4.0 ASPH	Ф73.4mm*88mm 315g	Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
ranasonic	DC-G9GK-K DMC-GH4GK	G9 136.9×97.3×91.6mm 658g GH4 93.4×83.9×132.9mm 560g	LEICA DG Vario-Elmarit 12-60 f/2.8-4 Power OIS	Ф68mm*86mm 320g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			LUMIX G X Vario 12-35mm f/2.8 II ASPH	Ф68mm*74mm 305g	Camera + Lens	√ √	√ √
			POWER OIS (H-HS12035GK I generation)	Ψοδημη 74ημη 303g	Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ √	√ √
			M.ZUIKO DIGITAL ED 12mm f/2.0	Φ56mm*43mm 130g	Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			LUMIX G 14-140mm f/4-5.8 OIS	Ф70mm*84mm 460g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
						· · · · · · · · · · · · · · · · · · ·	ntal Adjustment
Brand	Camera Model	Camera Size	Camera Size	Lens size & weight	Mounting status	Short End	Long End
			NIKKOR Z 35mm f/1.8	Ф73mm*86mm 370g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			19.140mm t/2.5.5.60 ED VD	ф79mm*07mm 400a	Camera + Lens	√ √	√ √
	Z 6	Z6 134×100.5×67.5mm 675g	18-140mm f/3.5-5.6G ED VR	Ф78mm*97mm 490g	Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
	Z6 II Z7	Z6 II 134×100.5×69.5mm 615g Z7 134×100.5×67.5mm 675g	NIKKOR Z 50mm f/1.8 S	Φ76*86.5mm 415g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√	V √
Nikon			NIKKOR Z 24-70mm f/4 S	Ф77.5*88.5 500g	Camera + Lens	√ ′	√ /
			NW4/00 7		Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ √	√ √
			NIKKOR Z 14-30mm f/4 S Φ85mm*89mm 485g		Camera & Lens & Follow Focus (MVGFF)	√	√
	Zfc	Zfc 134.5×93.54×3.5mm 445g	NIKKOR Z DX 16-50mm f/3.5-6.3 VR	Φ70mm*32mm 135g	Camera + Lens	\checkmark	√
	D7500	D7500 135.5×104×72.5mm 720g	18-140mm f/3.5-5.6G ED VR	Ф78mm*97mm 490g	Camera + Lens	√ ′	√
					Camera & Lens & Follow Focus (MVGFF)	√ Balance Horizo	ntal Adjustment
Brand	Camera Model	Camera Size	Camera Size	Lens size & weight	Mounting status	Short End	Long End
			RF 35mm F1.8 MACRO IS STM	Ф74.4mm*62.8mm 305g	Camera + Lens	√	√ /
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ √	√ √
	EOS R EOS RP	EOS R 135.8×98.3×84.4mm 660g EOS RP 132.5×85×70mm 485g	EF-S 18-200mm f/3.5-5.6 IS	Ф78.6mm*102mm 595g	Camera & Lens & Follow Focus (MVGFF)	×	×
			EF 50mm f/1.4 DG HSM Art	Ф85mm*100mm 815g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ 	√ √
			EF 17-40mm f/4L USM	Ф83.5mm*96.8mm 475g	Camera + Lens	√	√
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ 	√ √
			RF 50mm F1.2L USM	Ф89.8mm*108mm 950g	Camera & Lens & Follow Focus (MVGFF)	√	√
			RF 28-70mm F2L USM	Ф103.8mm*139.8mm 1430g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	×	×
			RF 24-105mm F4L IS USM	Ф83.5mm*107.3mm 670g	Camera + Lens	√	√
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	× √	× √
	EOS 80D	EOS 80D 139×105.2×78.5mm 730g	EF-S 18-200mm f/3.5-5.6 IS	Ф78.6mm*102mm 595g	Camera & Lens & Follow Focus (MVGFF)	√	√
	EOS 6D Mark II	6D Mark II 144×110.5×74.8mm 765g	EF 24-70mm f/4L IS USM	Ф83.4mm*93mm 600g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			16-35mm f/2.8L II USM	Ф88.5mm*111.6mm 635g	Camera + Lens	√	√
		500 00 4445 440 5 74 0 0 0 750			Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√	√ √
	EOS 6D	EOS 6D 144.5×110.5×71.2mm 750g	EF-S 18-200mm f/3.5-5.6 IS	Ф78.6mm*102mm 595g	Camera & Lens & Follow Focus (MVGFF)	×	×
Canon			EF 24-105mm f/4L IS USM	Ф83.5mm*107mm 670g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ ×	√ ×
	EOS 200D	EOS 200D 122.4×92.6×69.8mm 456g	EF-S18-55mm f/4-5.6 IS STM	Ф66.5mm*61.8mm 215g	Camera + Lens	^	^
		ED Mark IV 450 7 1110 1 75 7			Camera & Lens & Follow Focus (MVGFF) Camera + Lens	×	× √
	EOS 5D Mark IV	5D Mark IV 150.7×116.4×75.9mm 890g	EF 24-105mm f/4L IS USM	Ф83.5mm*107mm 670g	Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			EF 24-105mm f/4L IS USM	Ф83.5mm*107mm 670g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
			EF 24-105 mm f/4L IS II USM	Ф88.5mm *127.5mm 795g	Camera + Lens	×	×
	EOS 5D Mark III	5D MarkIII 152×116.4×76.4mm 950g	2. 27 TOO HIRT IT TO IT OOM	-55.5mm 727.5mm 750g	Camera & Lens & Follow Focus (MVGFF) Camera + Lens	×	×
			EF 24-70mm f/2.8L II USM	Ф88.5mm*113mm 805g	Camera & Lens & Follow Focus (MVGFF)	×	×
			16-35mm f/2.8L II USM	Ф88.5mm*111.6mm 635g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
		EOS 5DS R 1152*116.4* 76.4mm 755g	EF 24-105mm f/4L IS USM	Ф83.5mm*107mm 670g	Camera + Lens	√ √	√ √
	FOS 5DS P		LI ZT-103HIHI I/4L IO UOIVI	400.oniii 107iiiii 670g	Camera & Lens & Follow Focus (MVGFF)	√	√ ,
	EOS 5DS R	200 020 11 1102 110.4 70.411111 700g				4/	*/
-	EOS 5DS R	EOS 70D 139×104.3×78.5mm 755g	16-35mm f/2.8L II USM	Ф88.5mm*111.6mm 635g	Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √	√ √
		-	16-35mm f/2.8L II USM EF 24-70mm f/4L IS USM	Ф88.5mm*111.6mm 635g Ф83.4mm*93mm 600g	Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√ √	√ √
_	EOS 70D	EOS 70D 139×104.3×78.5mm 755g EOS 77D 131×99.9×76.2mm 540g	EF 24-70mm f/4L IS USM	Ф83.4mm*93mm 600g	Camera & Lens & Follow Focus (MVGFF)	√	√
-	EOS 70D	EOS 70D 139×104.3×78.5mm 755g		-	Camera & Lens & Follow Focus (MVGFF) Camera + Lens Camera & Lens & Follow Focus (MVGFF)	√ √ √	√ √ √

Note: "\" Means supports this function, "\x" Means do not support



			MVG220 Lens Com	npatibility List			
Duand	Camera Model	Camera Size	Camera Size	Lama sina 9 waishb	Manustine status	Balance Horizo	ntal Adjustment
Brand	Camera woder	Camera Size	Camera Size	Lens size & weight	Mounting status	Short End	Long End
			VE 10mm 111 4 D WD	\$70 mm \$70 mm = 0.75 m	Camera + Lens	√	√
			XF 16mm 1:1.4 R WR	Φ73mm*73mm 375g	Camera & Lens & Follow Focus (MVGFF)	√	√
			XF 23mm 1:1.4 R	Ф72mm*63mm 300g	Camera + Lens	√	√
			XI 25IIIII 1.1.411	Ψ7211111 0311111 300g	Camera & Lens & Follow Focus (MVGFF)	√	√
			XF 35mm 1:1.4	Ф65mm*54.9mm 187g	Camera + Lens	√	√
					Camera & Lens & Follow Focus (MVGFF)		√
	X-T2	X-T2 133×92×49mm 457g	XF 10-24mm f/4.0 R OIS	Ф78mm*87mm 410g	Camera + Lens		√
	X-T3	X-T3 132.5×92.8×58.8mm 539g			Camera & Lens & Follow Focus (MVGFF)		√
			XF 16-55mm 1□2.8 R LM WR	Ф83.3mm x 106.0mm 655g	Camera + Lens	<u> </u>	√
					Camera & Lens & Follow Focus (MVGFF)		√
			XF 18-55mm 1:2.8-4 R OIS	Ф65mm*70.4mm 310g	Camera + Lens		√
					Camera & Lens & Follow Focus (MVGFF)		√
			XF 18-135mm f/3.5-5.6 R LM OIS WR	Ф76mm*98mm 490g	Camera + Lens	Short End √ √ √ √ √ √ √ √ √ √ √ √	√
					Camera & Lens & Follow Focus (MVGFF)	<u> </u>	√ ,
			XF 16mm 1:1.4 R WR	Ф73mm*73mm 375g	Camera + Lens		√
					Camera & Lens & Follow Focus (MVGFF)	<u> </u>	√
			XF 23mm 1:1.4 R	Ф72mm*63mm 300g	Camera + Lens		√ ,
					Camera & Lens & Follow Focus (MVGFF)		√
		X-H1 139.8×97.3×85.5mm 673g	XF 35mm 1:1.4	Ф65mm*54.9mm 187g	Camera + Lens	·	√ /
					Camera & Lens & Follow Focus (MVGFF)	<u> </u>	√
	X-H1		XF 10-24mm f/4.0 R OIS	Ф78mm*87mm 410g	Camera + Lens		√
					Camera & Lens & Follow Focus (MVGFF)		√ √
			XF 16-55mm 1□2.8 R LM WR	Ф83.3mm x 106.0mm 655g	Camera + Lens	· · · · · · · · · · · · · · · · · · ·	√ √
Fujifilm					Camera & Lens & Follow Focus (MVGFF)	·	\ \ \ \ \ \
			XF 18-55mm 1:2.8-4 R OIS	Ф65mm*70.4mm 310g	Camera + Lens	·	\ \ \ \ \
					Camera & Lens & Follow Focus (MVGFF) Camera + Lens	√	V √
			XF 18-135mm f/3.5-5.6 R LM OIS WR	Φ76mm*98mm 490g	Camera & Lens & Follow Focus (MVGFF)		√ √
					Camera + Lens		√
			XF 16mm 1:1.4 R WR	Φ73mm*73mm 375g	Camera & Lens & Follow Focus (MVGFF)		√
					Camera + Lens		√
			XF 23mm 1:1.4 R	Ф72mm*63mm 300g	Camera & Lens & Follow Focus (MVGFF)	·	√
					Camera + Lens	\(\frac{1}{\sqrt{2}} \) \(\frac{1}{\sqrt{2}	√
			XF 35mm 1:1.4	Ф65mm*54.9mm 187g	Camera & Lens & Follow Focus (MVGFF)		· √
					Camera + Lens		· √
			XF 10-24mm f/4.0 R OIS	Ф78mm*87mm 410g	Camera & Lens & Follow Focus (MVGFF)		√
	X-T20	X-T20 118.4×82.8×41.4mm 383g			Camera + Lens		√
	X-120 X-T30	X-120 118.4×82.8×41.4mm 383g X-T30 118.4×82.8×46.8mm 383g	XC 16-50mm f/3.5-5.6 OIS	Ф62.6mm*65.2mm 195g	Camera & Lens & Follow Focus (MVGFF)		√
					Camera + Lens		√
			XF 16-55mm 1□2.8 R LM WR	Ф83.3mm x 106.0mm 655g	Camera & Lens & Follow Focus (MVGFF)	×	×
					Camera + Lens	√	√
			XF 18-55mm 1:2.8-4 R OIS	Ф65mm*70.4mm 310g	Camera & Lens & Follow Focus (MVGFF)	√	√
					Camera + Lens	√	√
			XF 18-135mm f/3.5-5.6 R LM OIS WR	Φ76mm*98mm 490g	Camera & Lens & Follow Focus (MVGFF)	×	×
			VO 45 45 10 5 5 5 0 0 5 5	400 C	Camera + Lens	√	√
			XC 15-45mm 1:3.5-5.6 OIS PZ	Ф62.6mm*65.2mm 135g	Camera & Lens & Follow Focus (MVGFF)	√	√
	V 50	V F0 404 0110 7170 5	VE10 FF F20 1	#0F====================================	Camera + Lens	√	√
	X-E3	X-E3 121.3*42.7*73.9mm 337g	XF18-55mm F2.8-4 R LM OI	Ф65mm*70.4mm 310g	Camera & Lens & Follow Focus (MVGFF)	√	√
						Balance Horizo	ntal Adjustment
Brand	Camera Model	Camera Size	Camera Size	Lens size & weight	Mounting status	Short End	Long End
					Camera + Lens		×
Sigma	SIGMA FP	FP 112.6×69.9×45.3mm 370g	pansonic LUMIX S PRO 50mm F1.4	Ф90mm*130mm 955g	Camera & Lens & Follow Focus (MVGFF)		×

Note: "√" Means supports this function,"×" Means do not support