



Dell Pro 24 USB-C Hub-skärm

P2426HE

Dell Pro P 24 USB-C halogenfri hubbskärm

P2426HE

Dell Pro 24 16:10 USB-C Hub-skärm





P2426E


Dell Pro 27 USB-C Hub-skärm




P2726HE


Snabbstartsguide




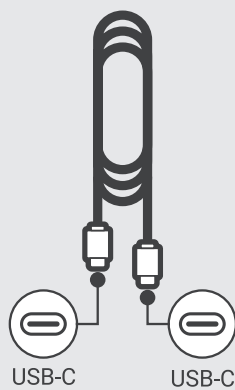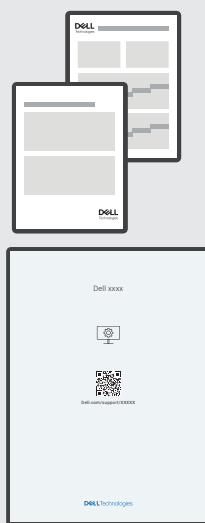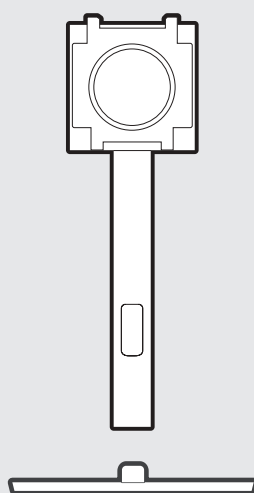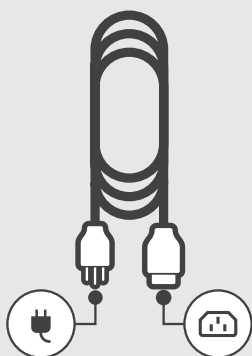


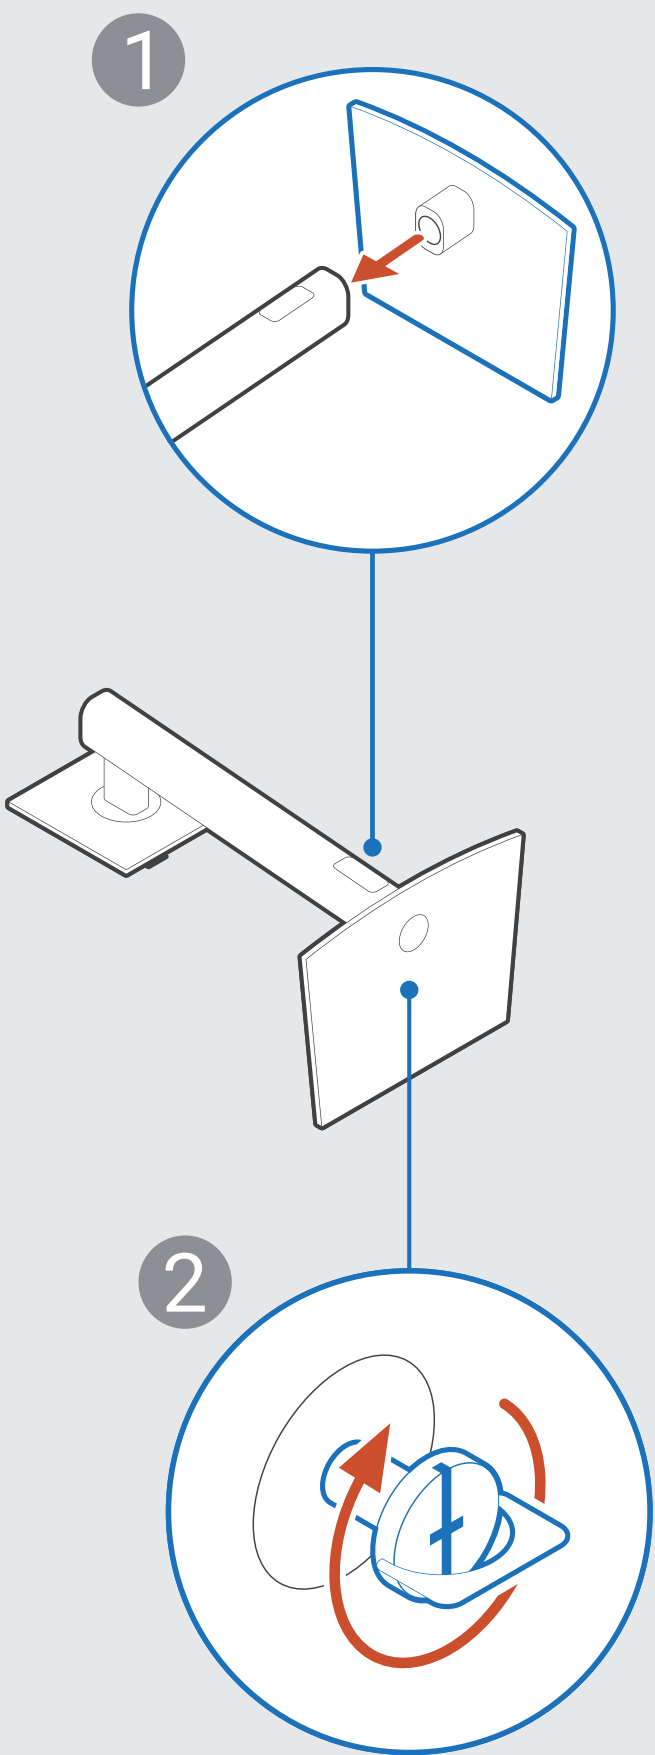


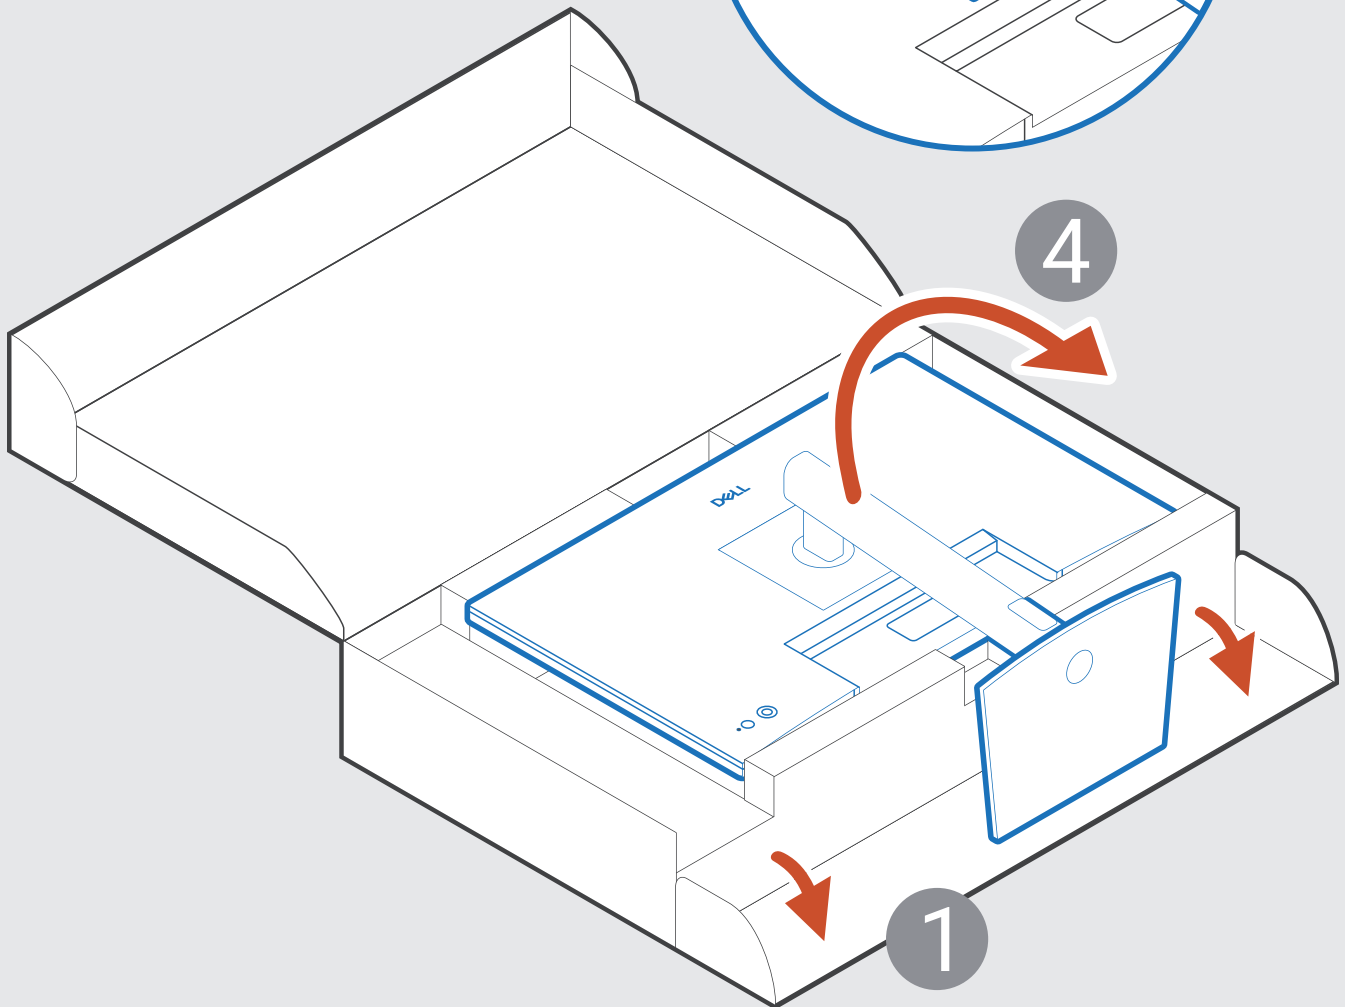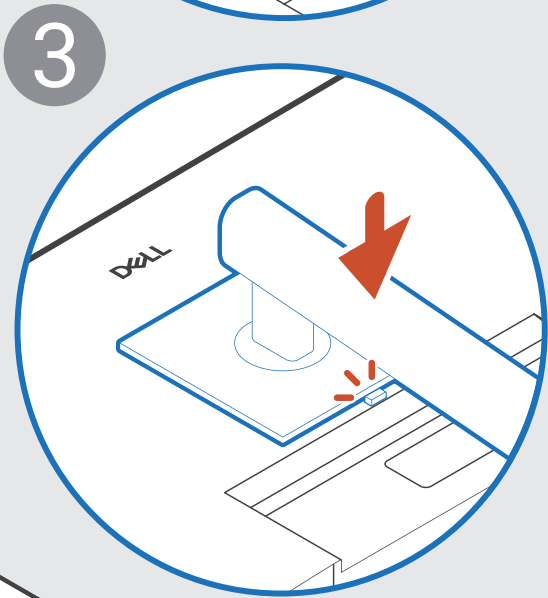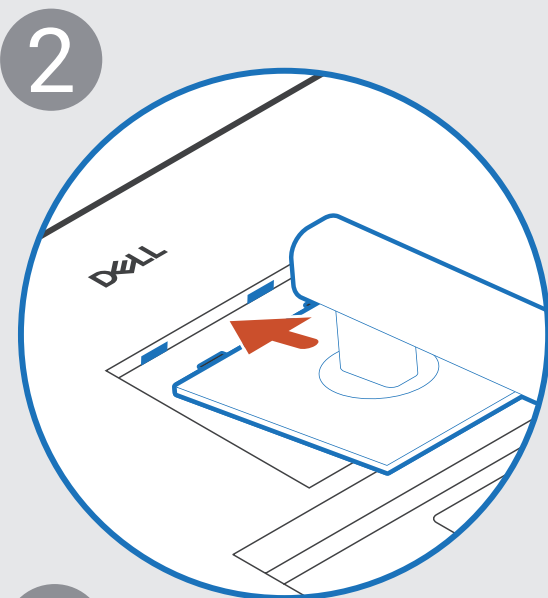


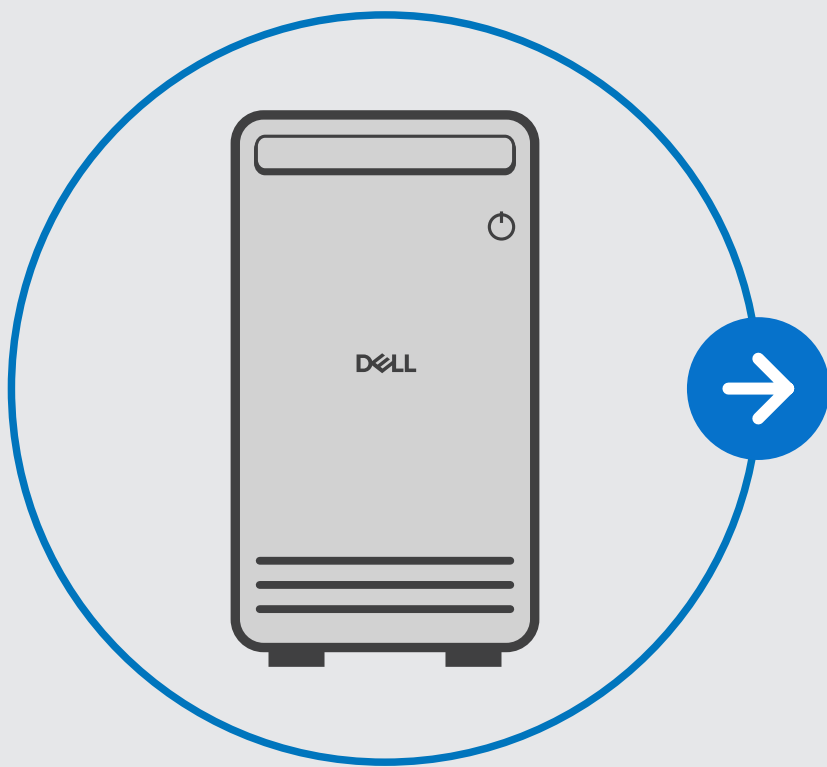

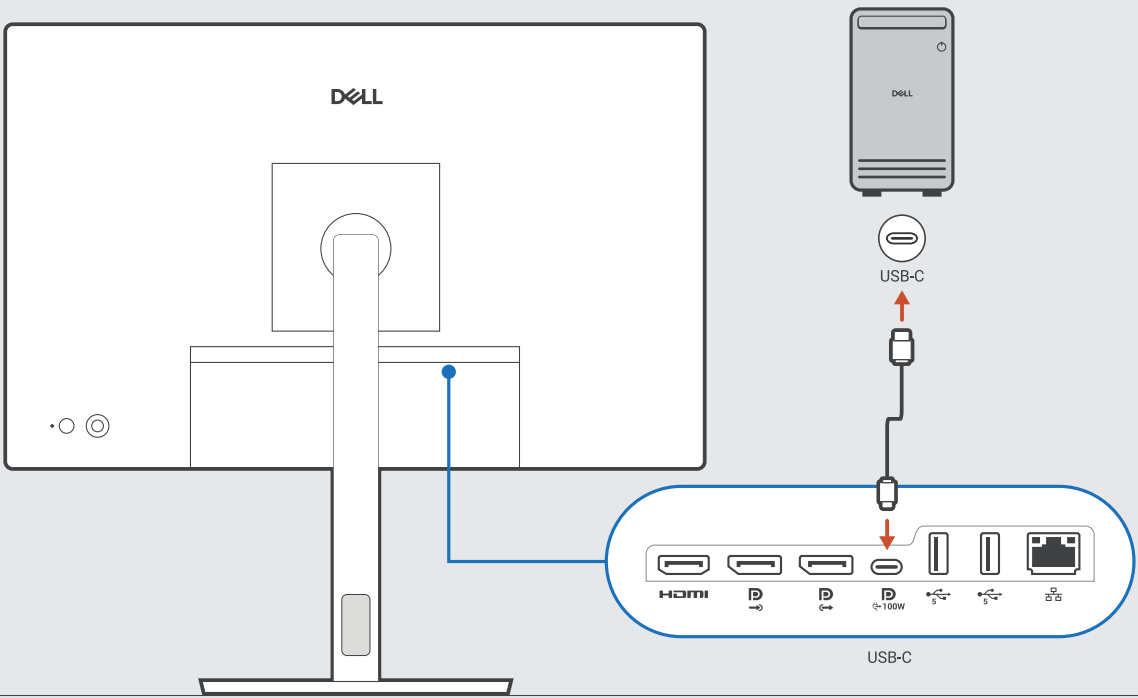


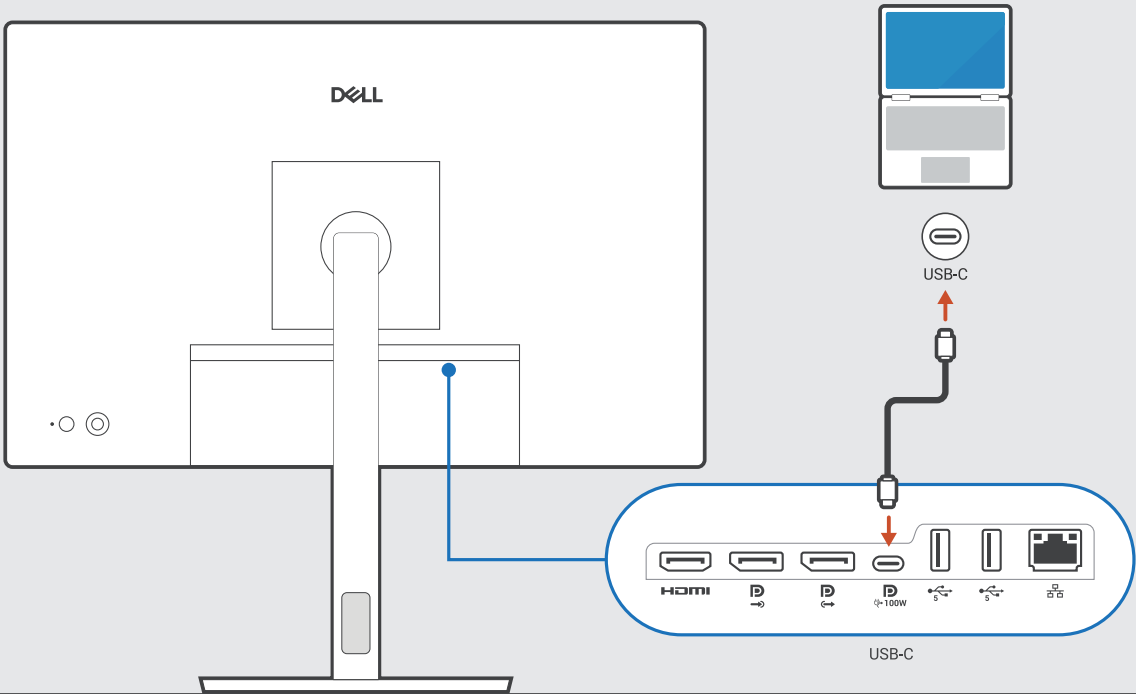

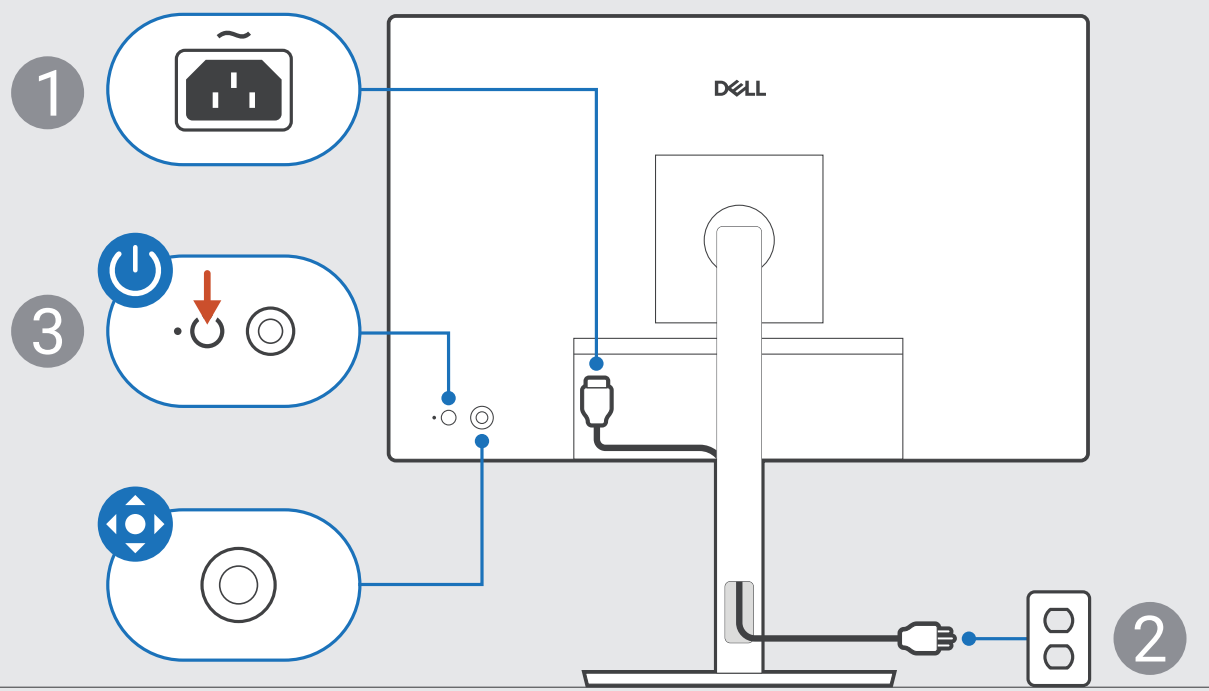


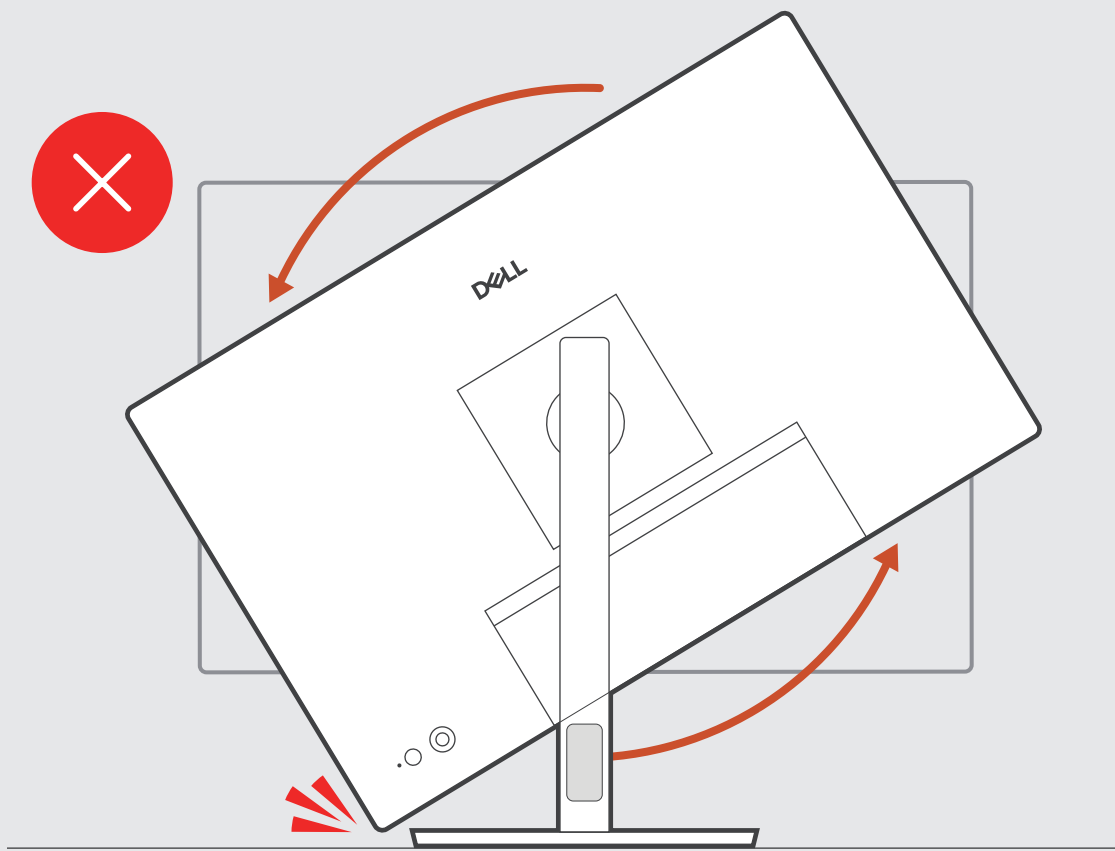



1

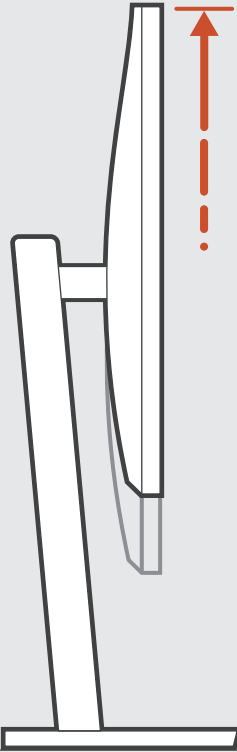


2

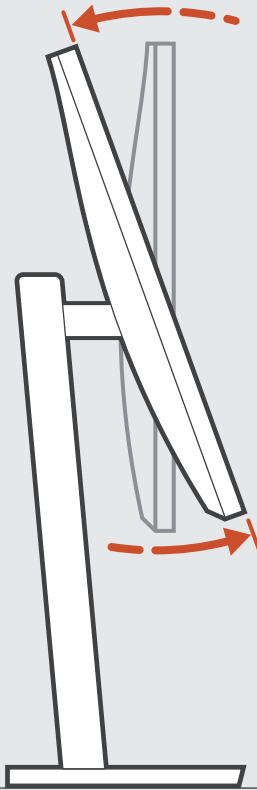


3

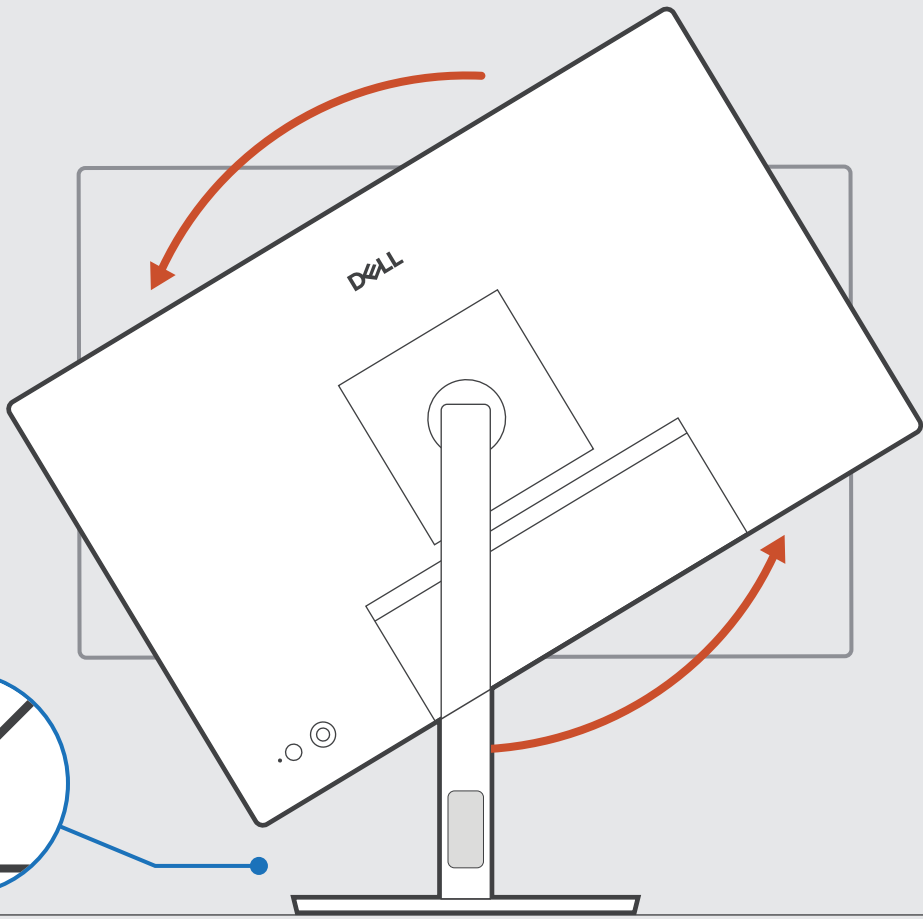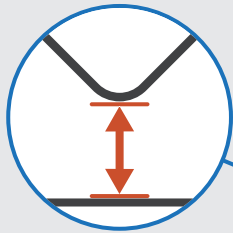


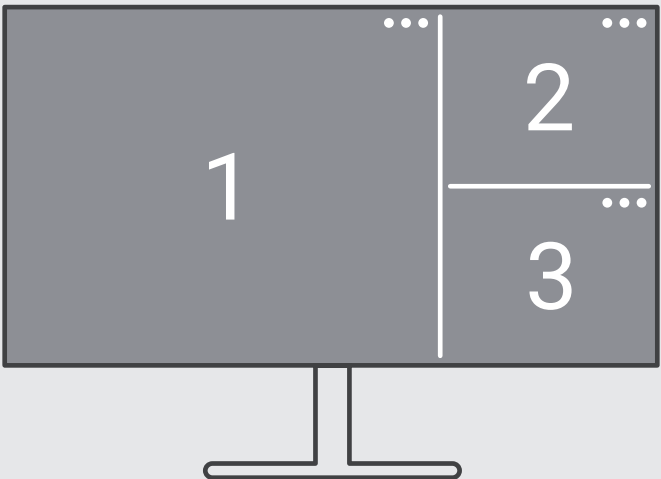

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

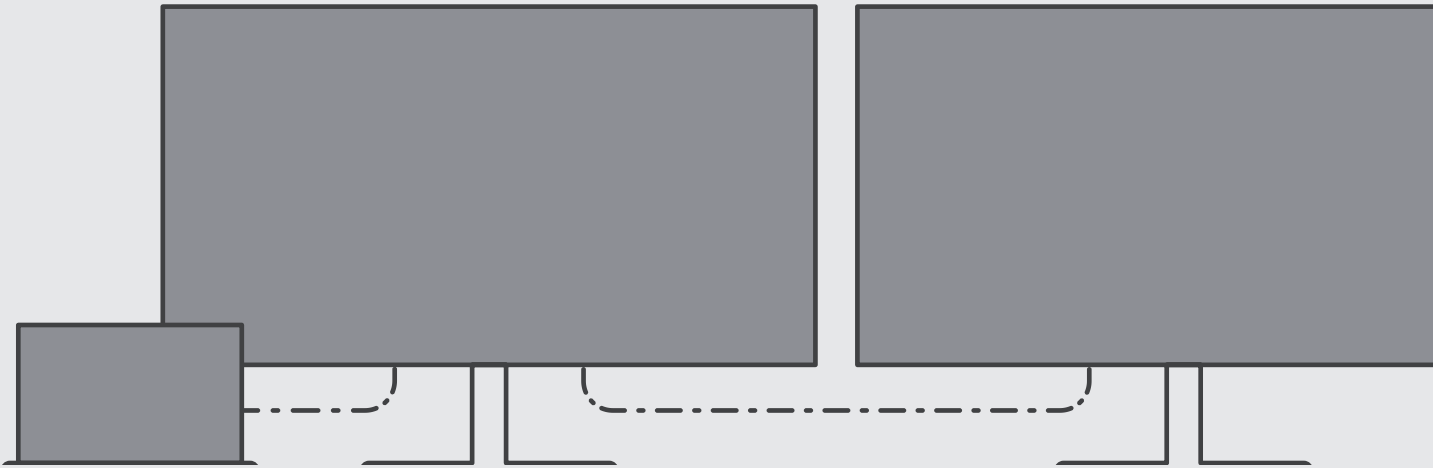

Daisy Chain

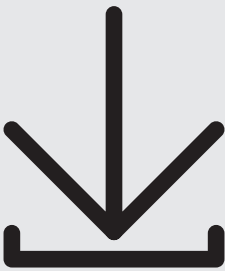

- [Dell.com/support/P2426HE](https://Dell.com/support/P2426HE)
- [Dell.com/support/P2426HE-HF](https://Dell.com/support/P2426HE-HF)
- [Dell.com/support/P2426E](https://Dell.com/support/P2426E)
- [Dell.com/support/P2726HE](https://Dell.com/support/P2726HE)