









Dell Pro P 27 USB-C hubbskärm med webbkamera




P2726DEV



Snabbstartsguide




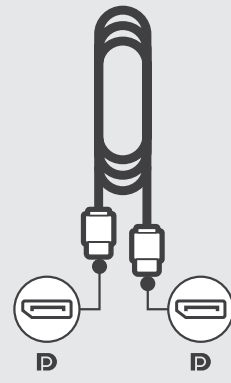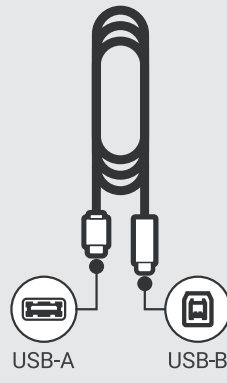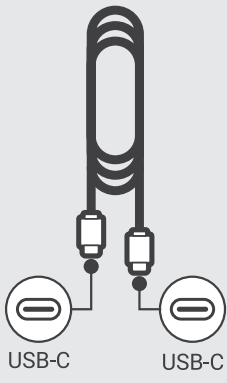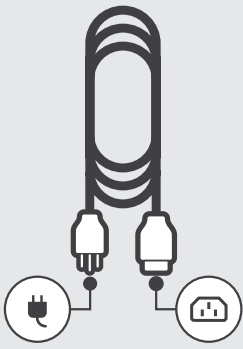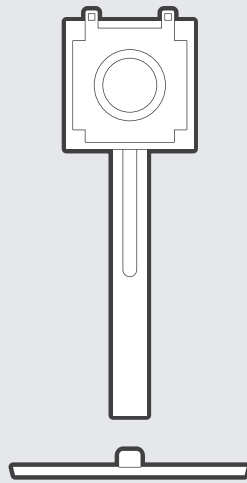


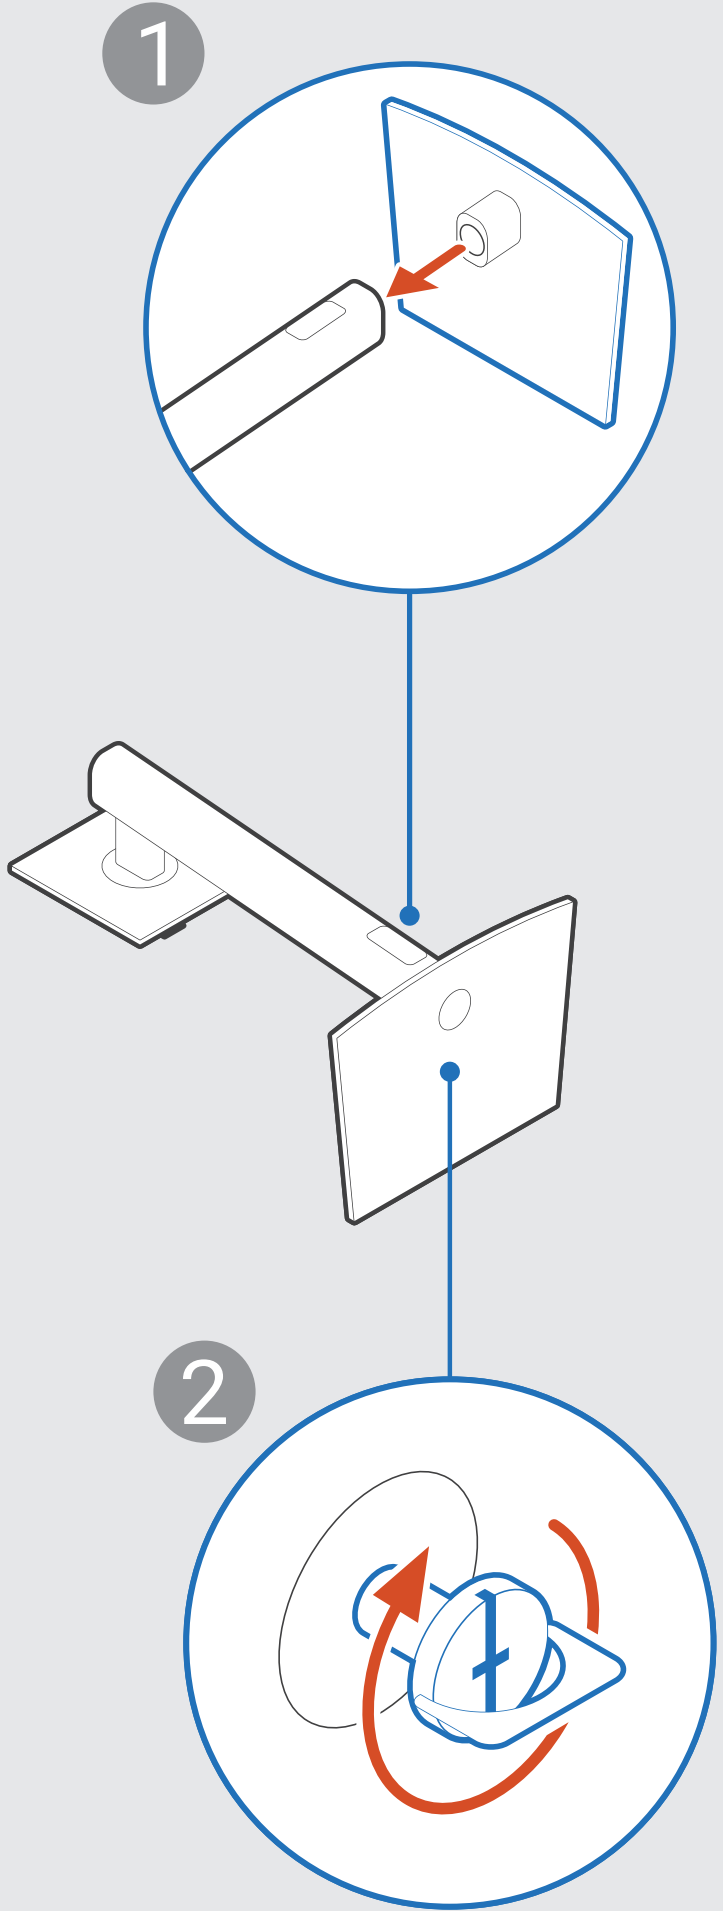


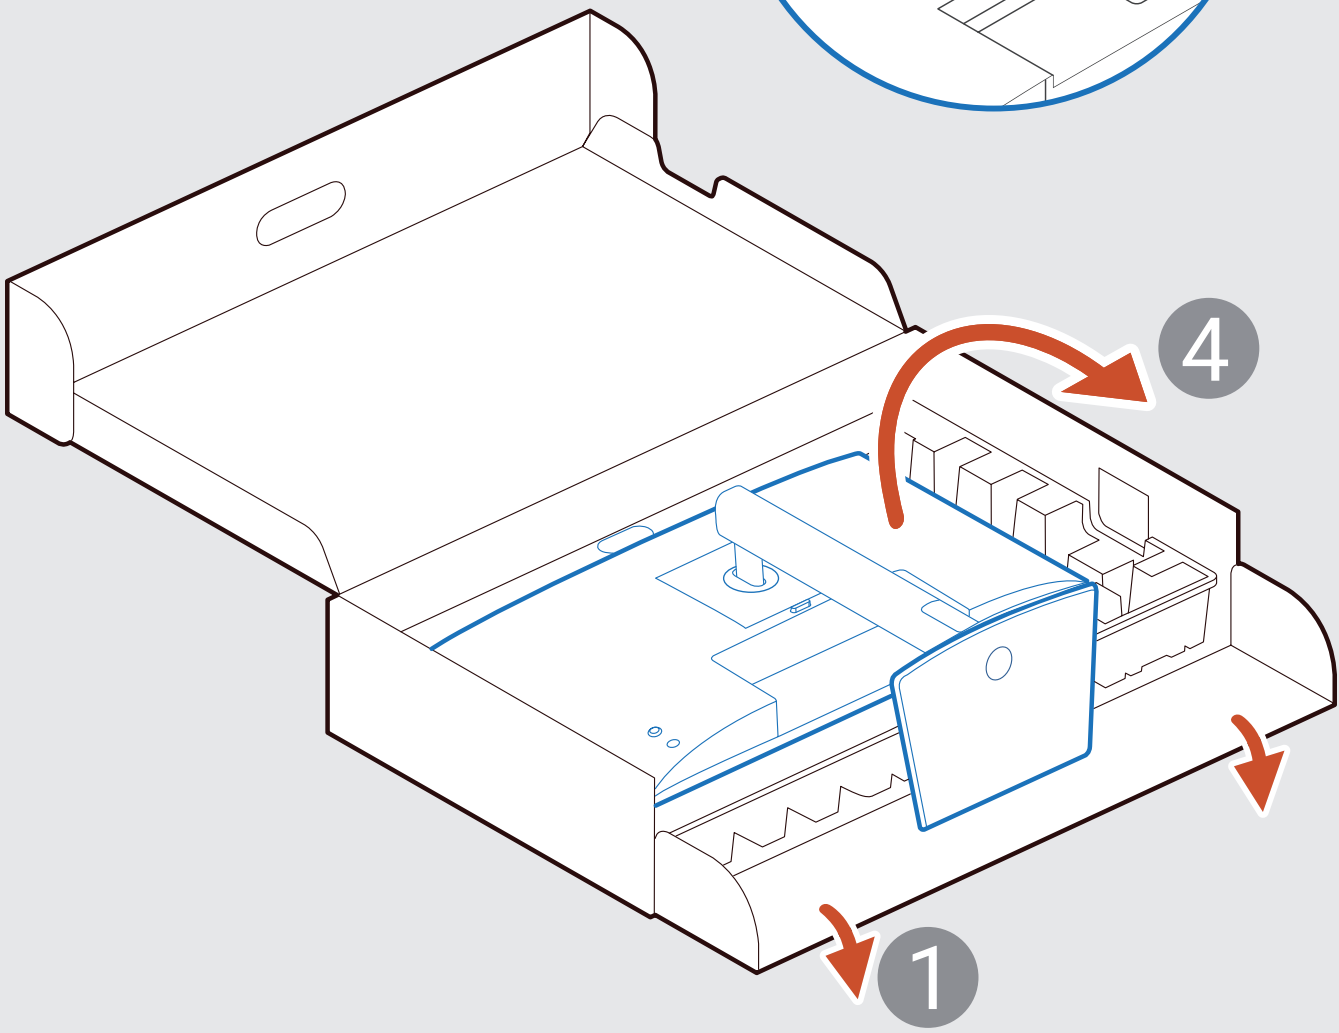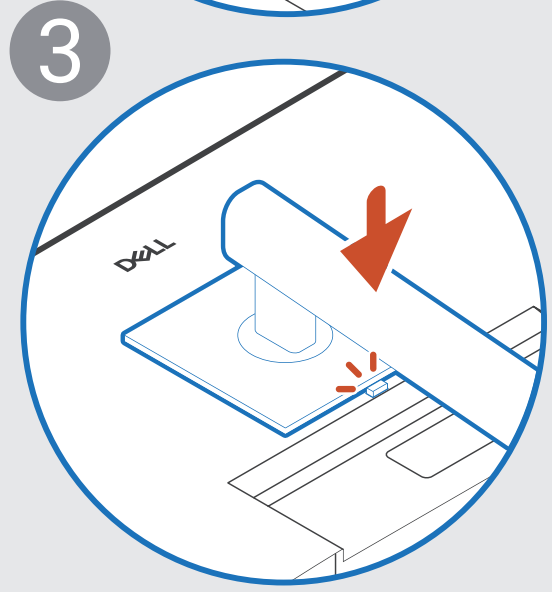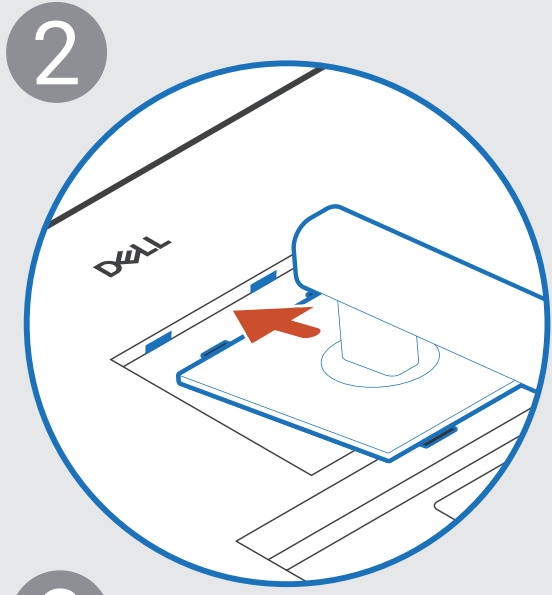


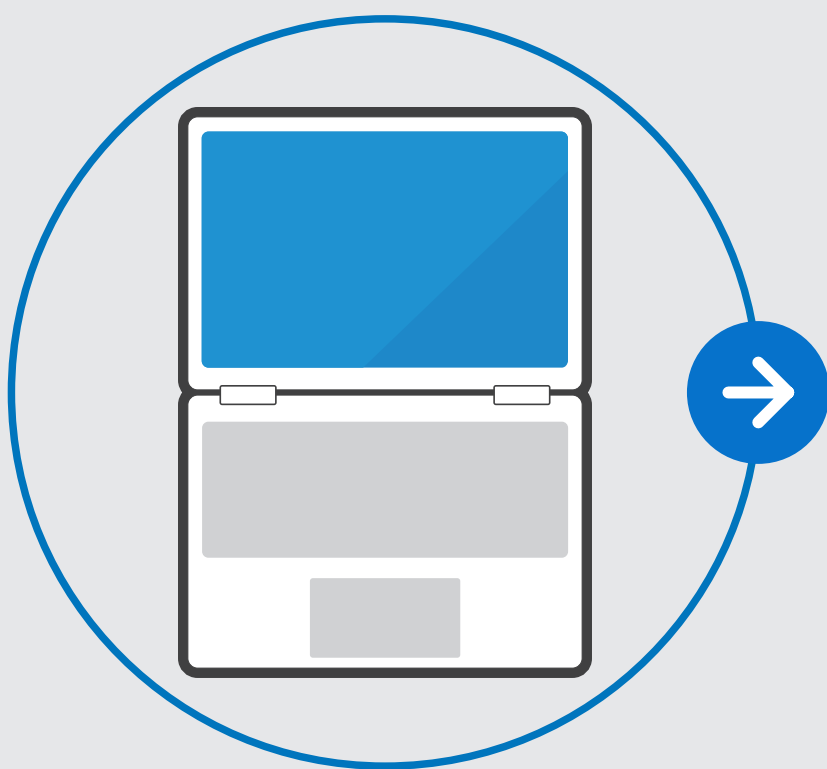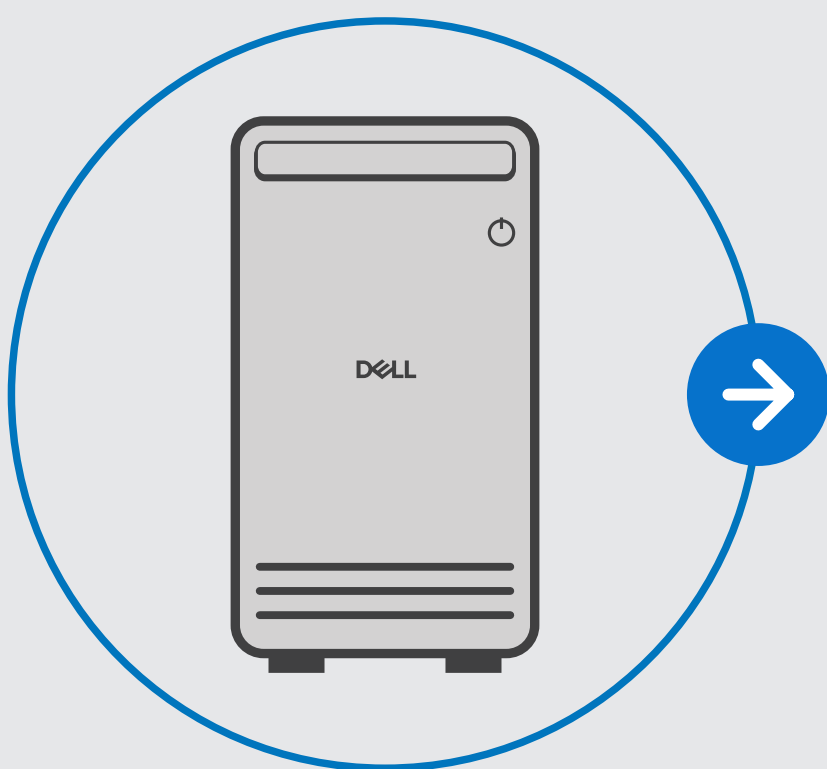

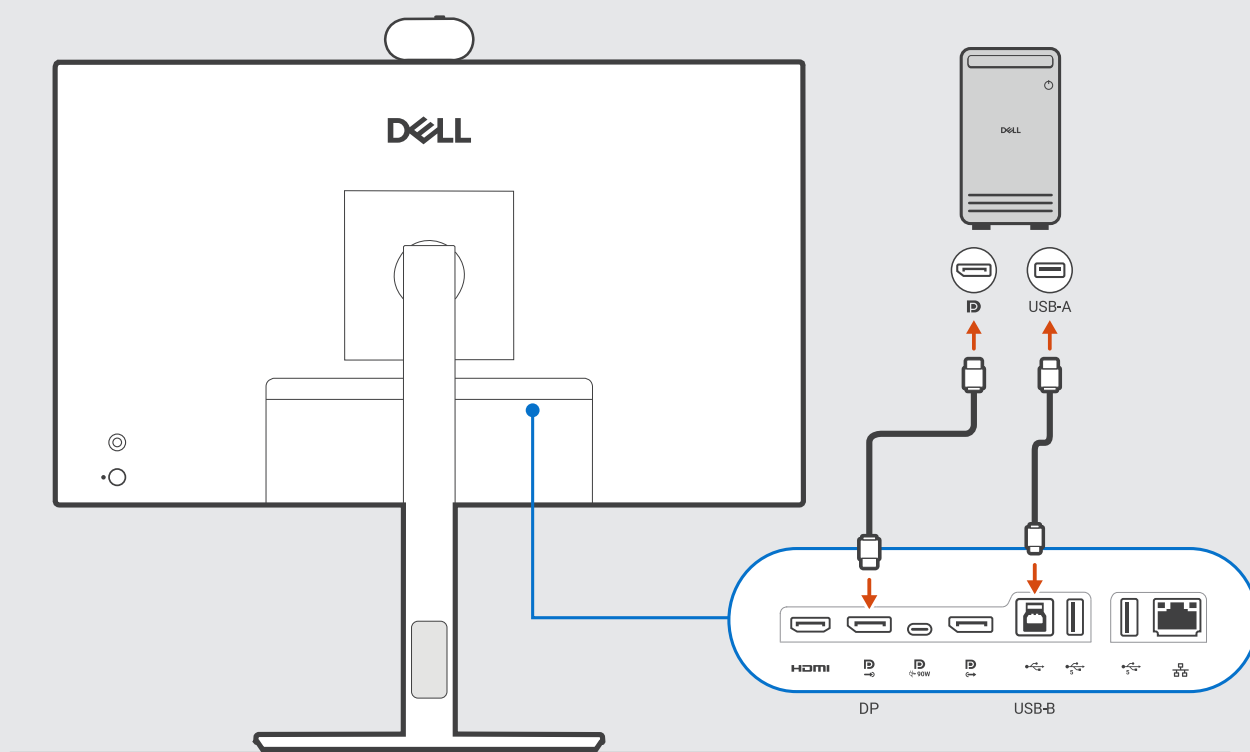


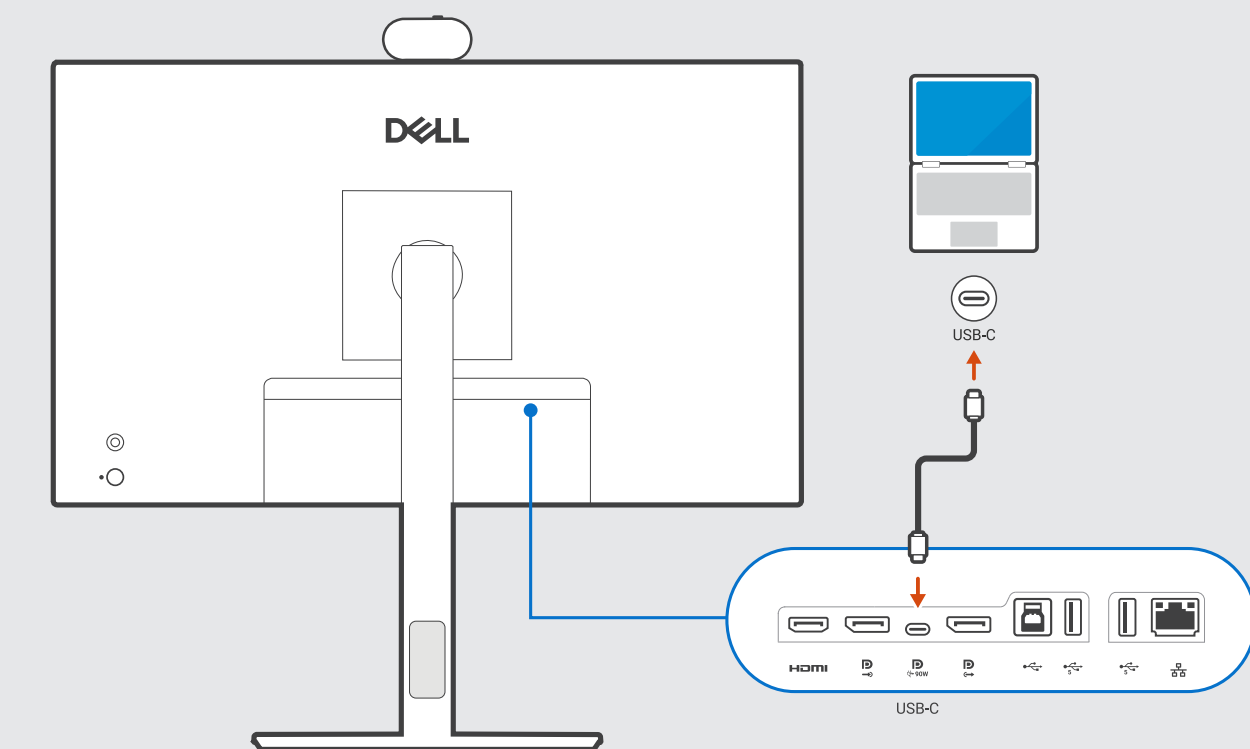

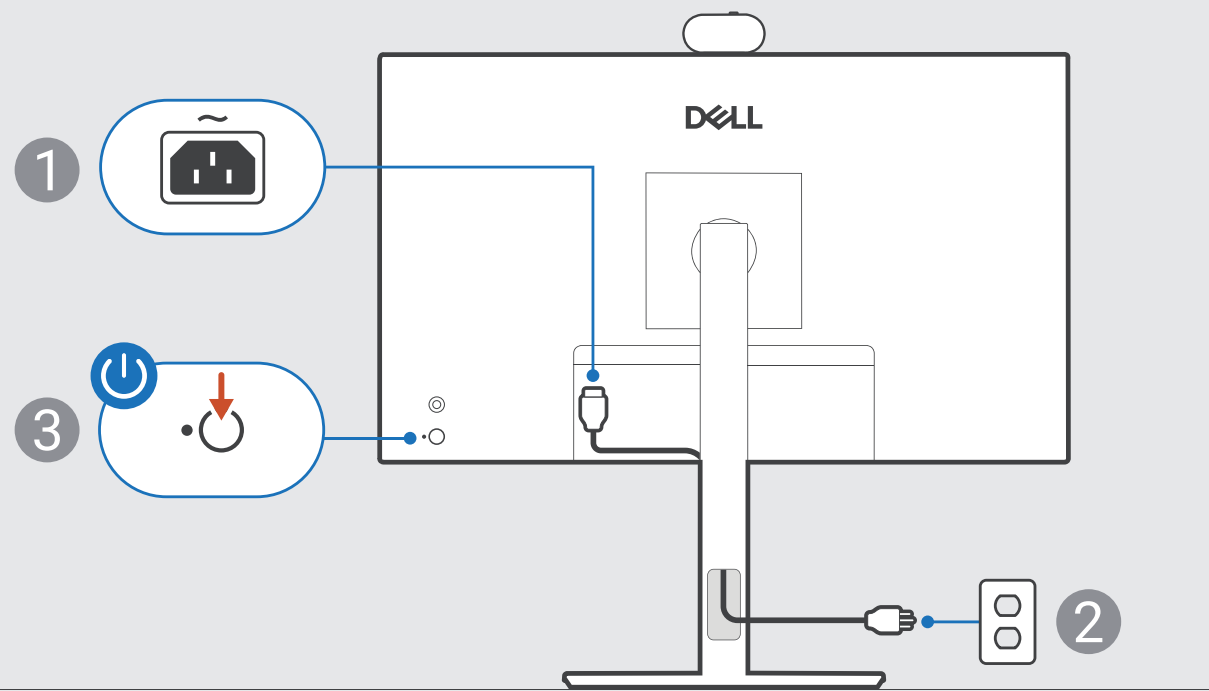


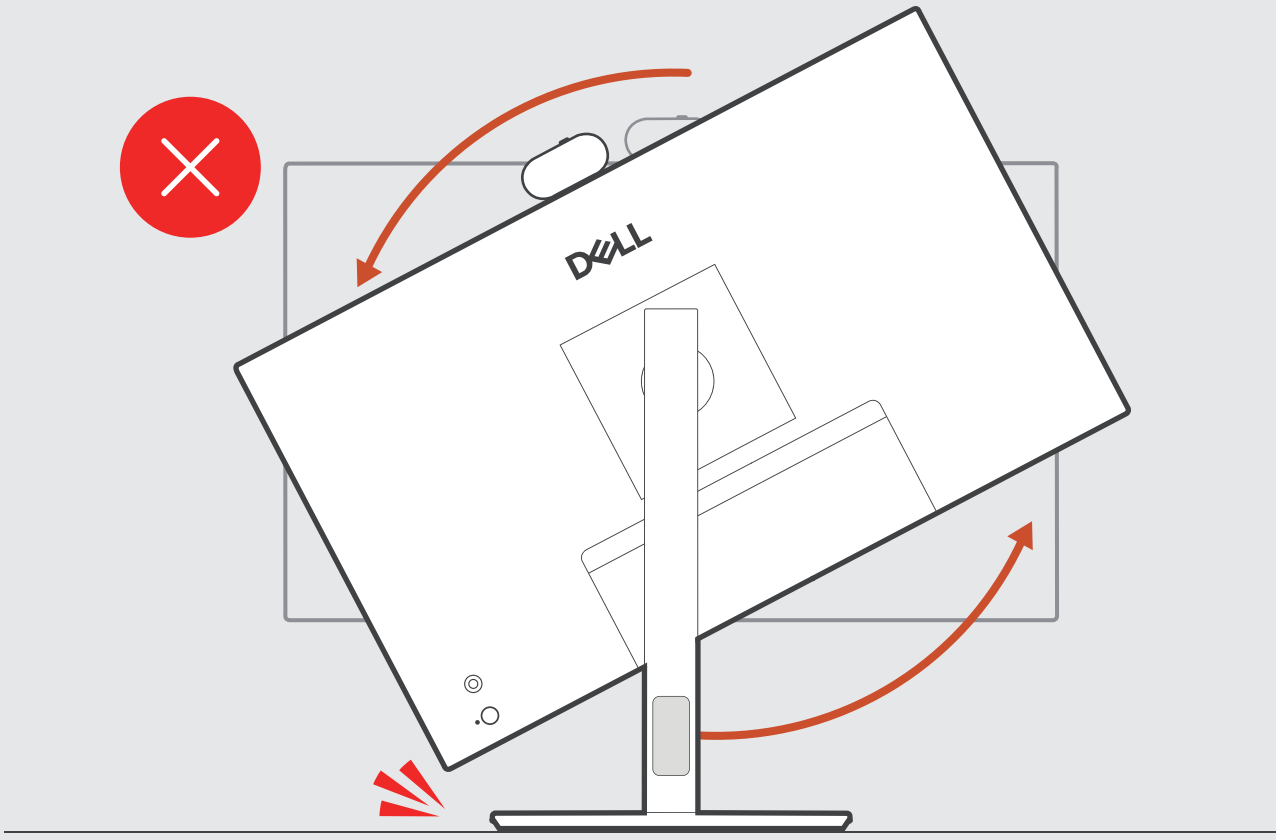



1


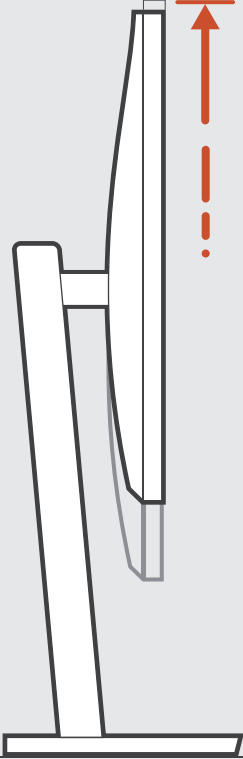



2

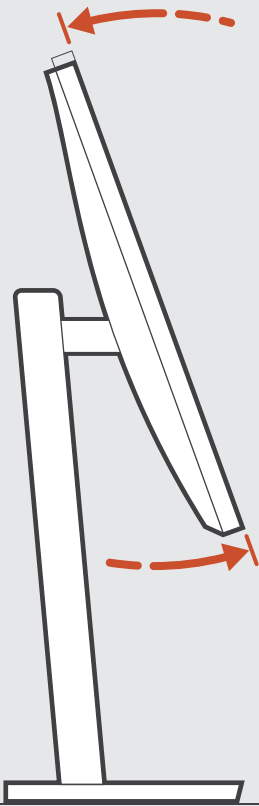


3

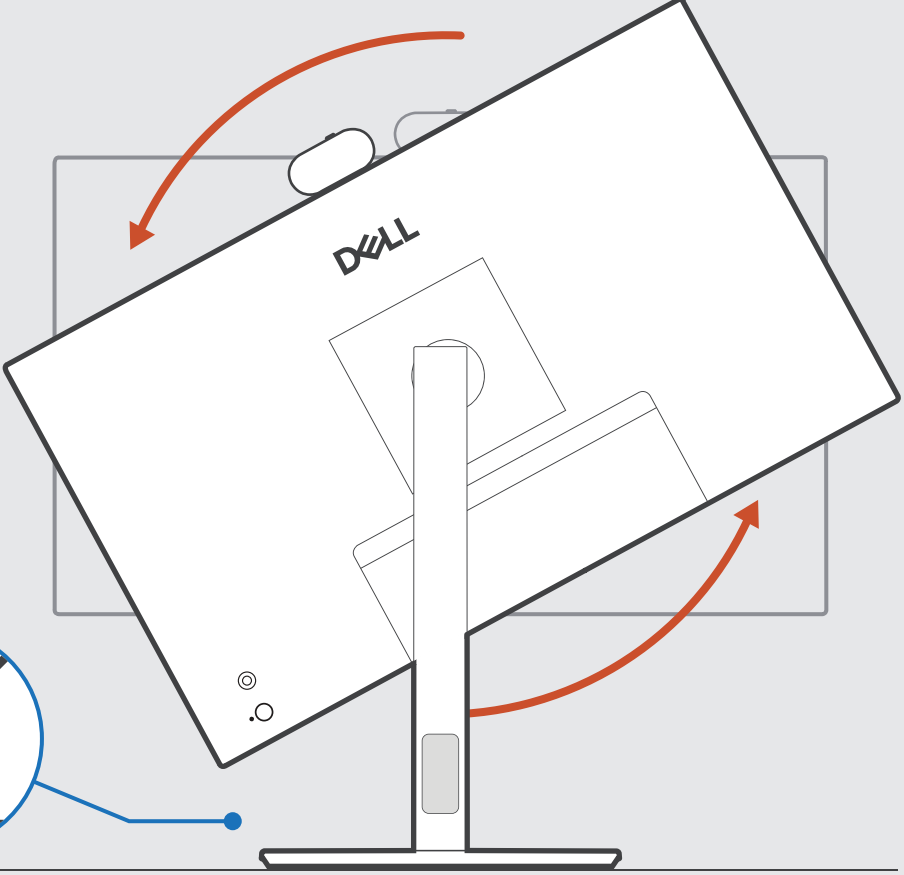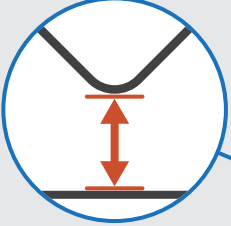


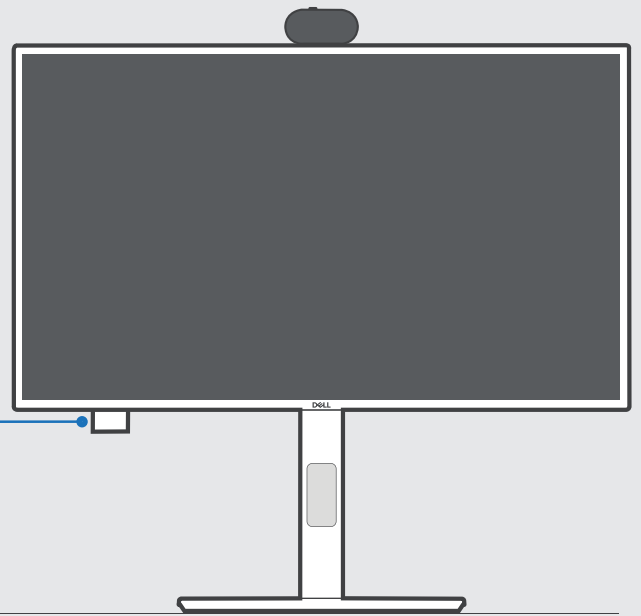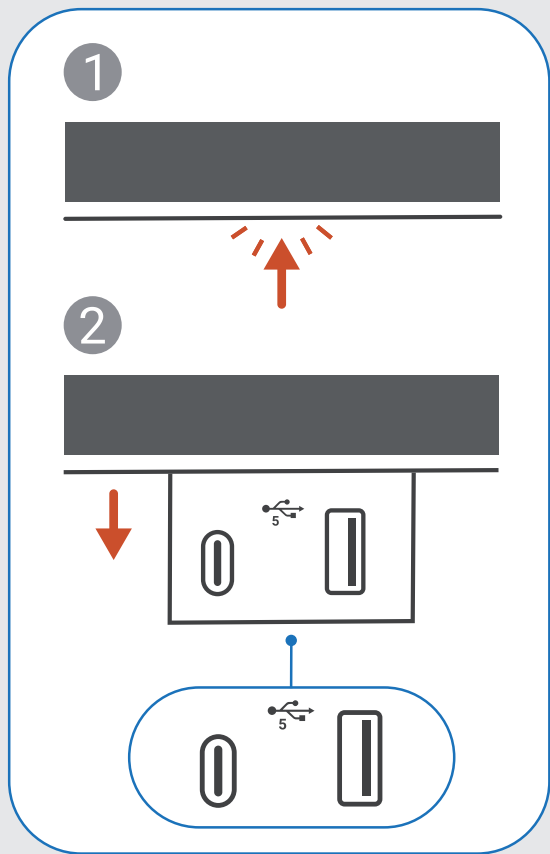

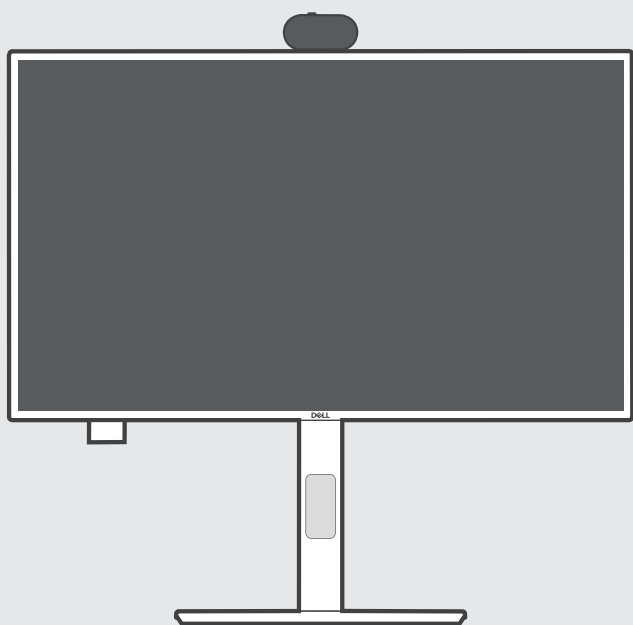


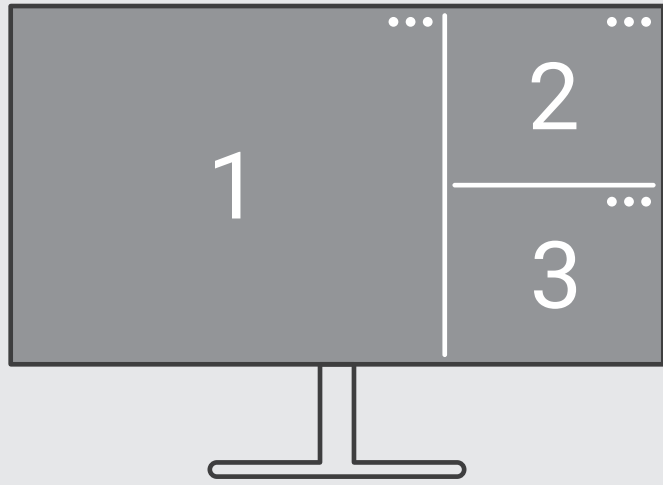


Dell Display and Peripheral Manager
Dell.com/support/ddpm

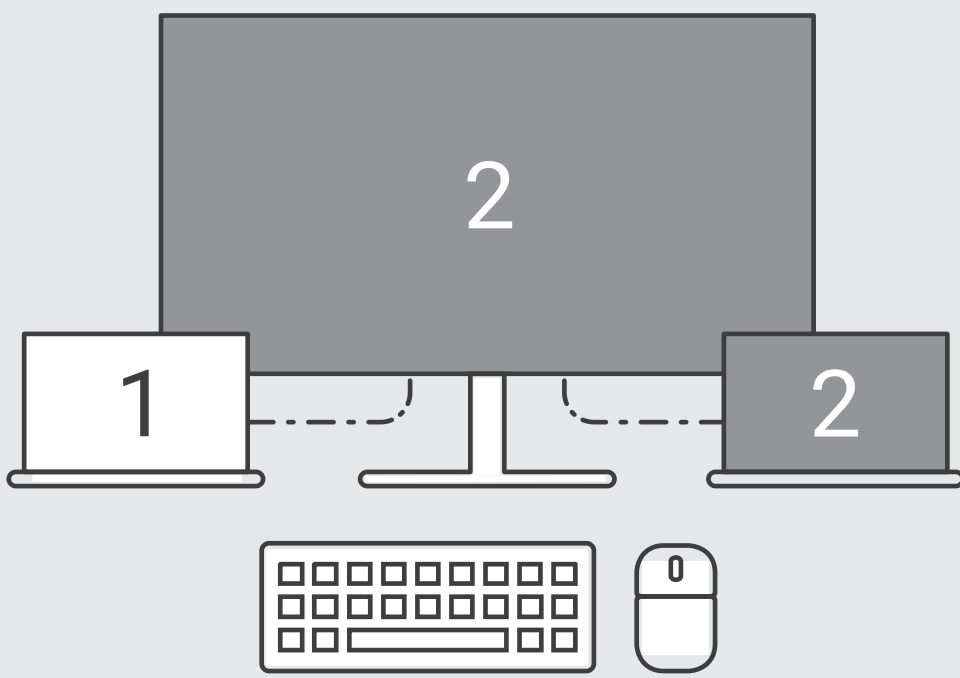

KVM

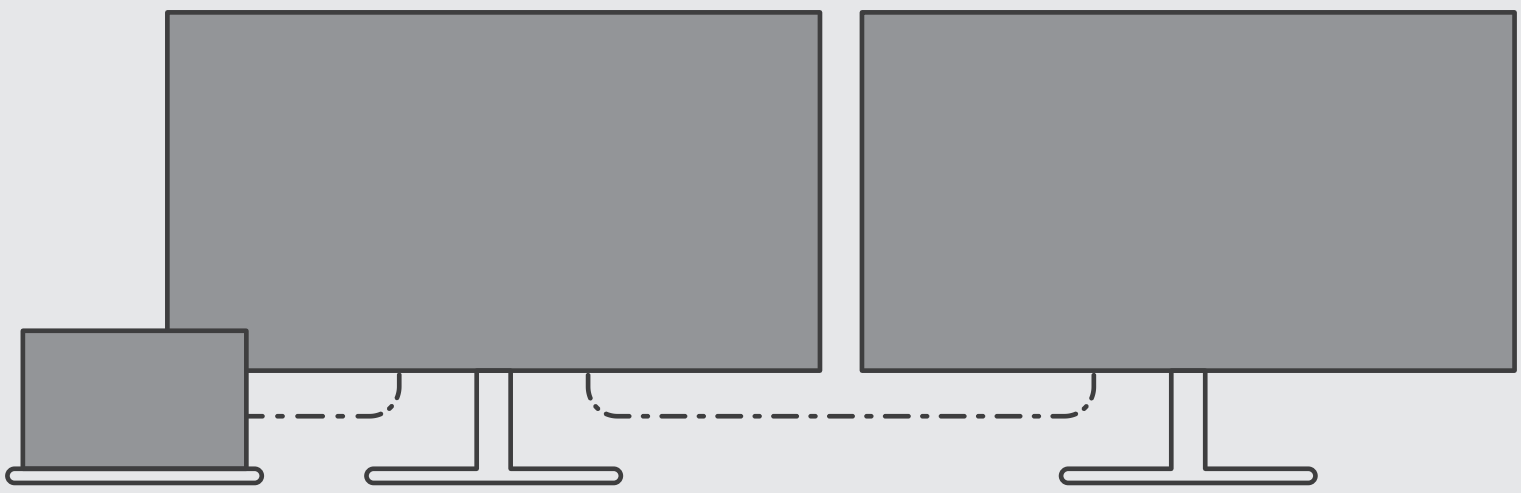

Kedjekoppling

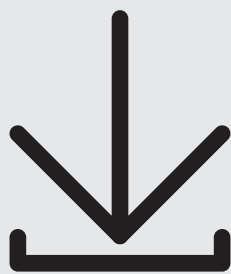

Dell.com/support/P2726DEV