



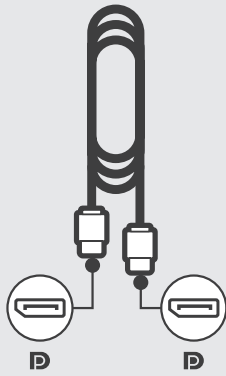
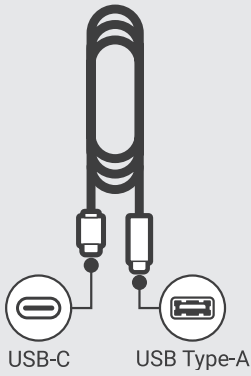
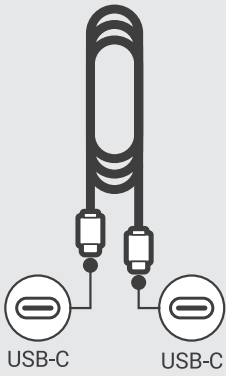
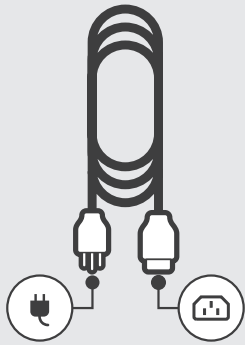


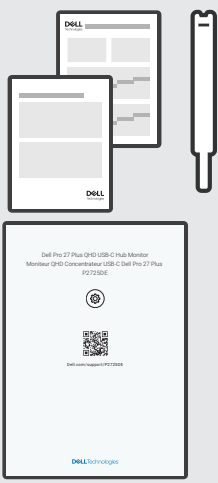



Dell Pro 27 Plus QHD USB-C Hub skärm
P2725DE

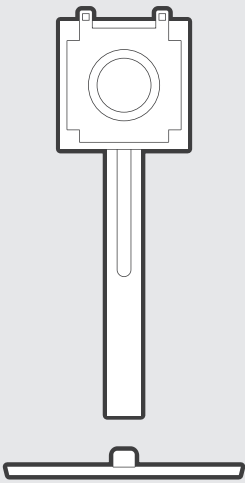


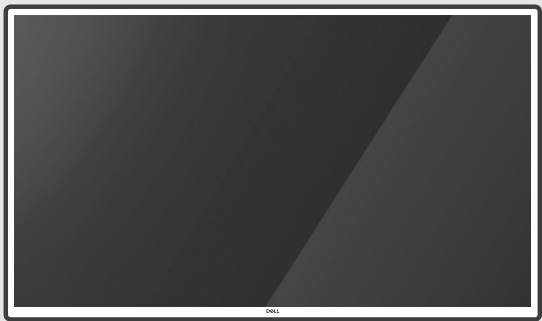


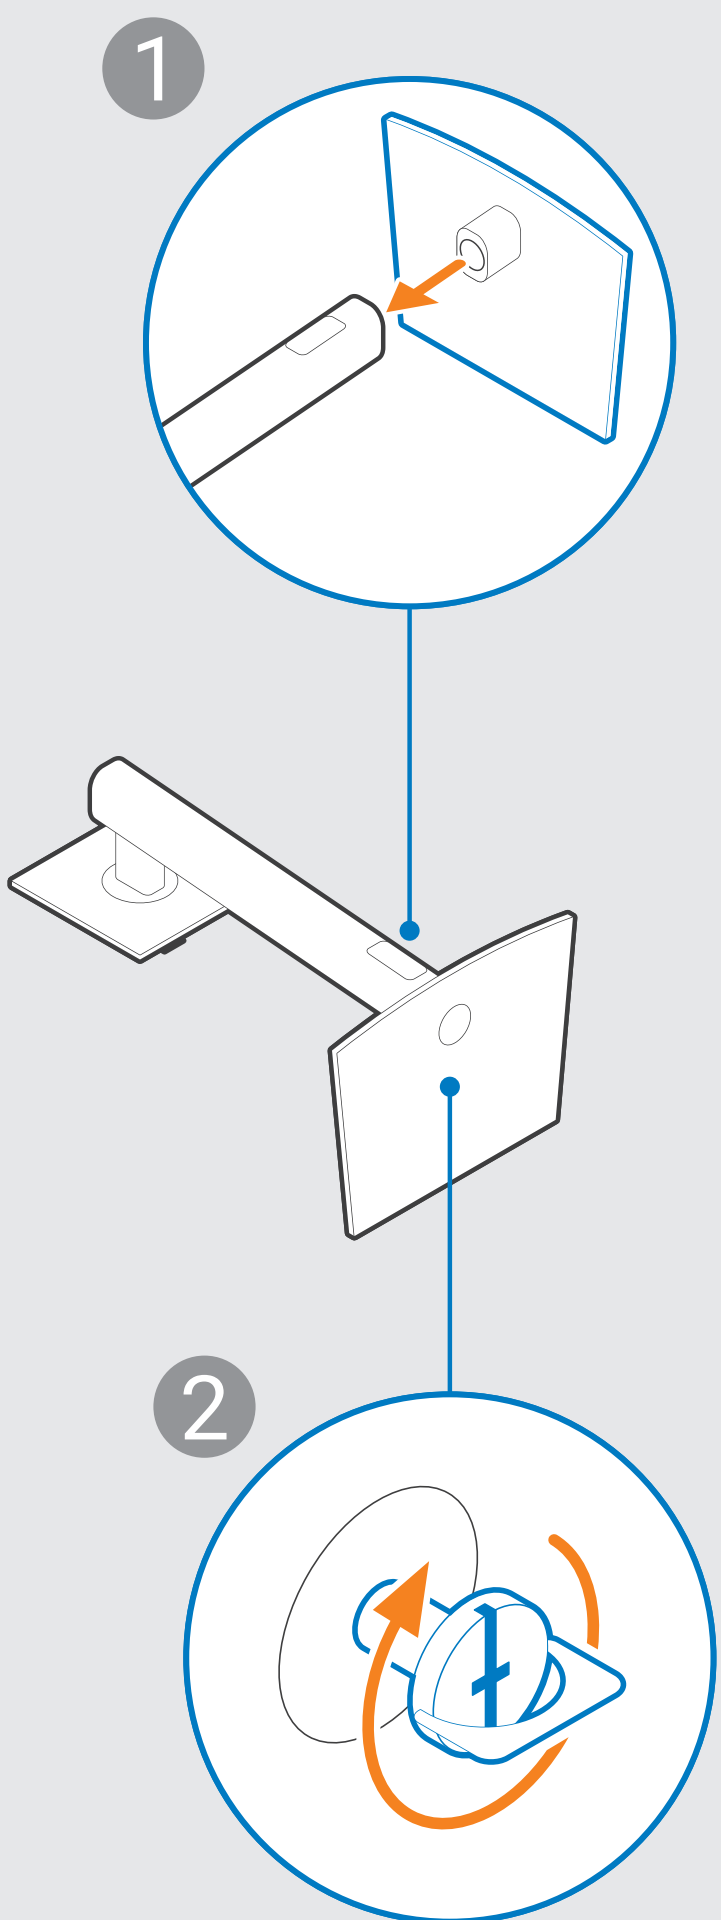


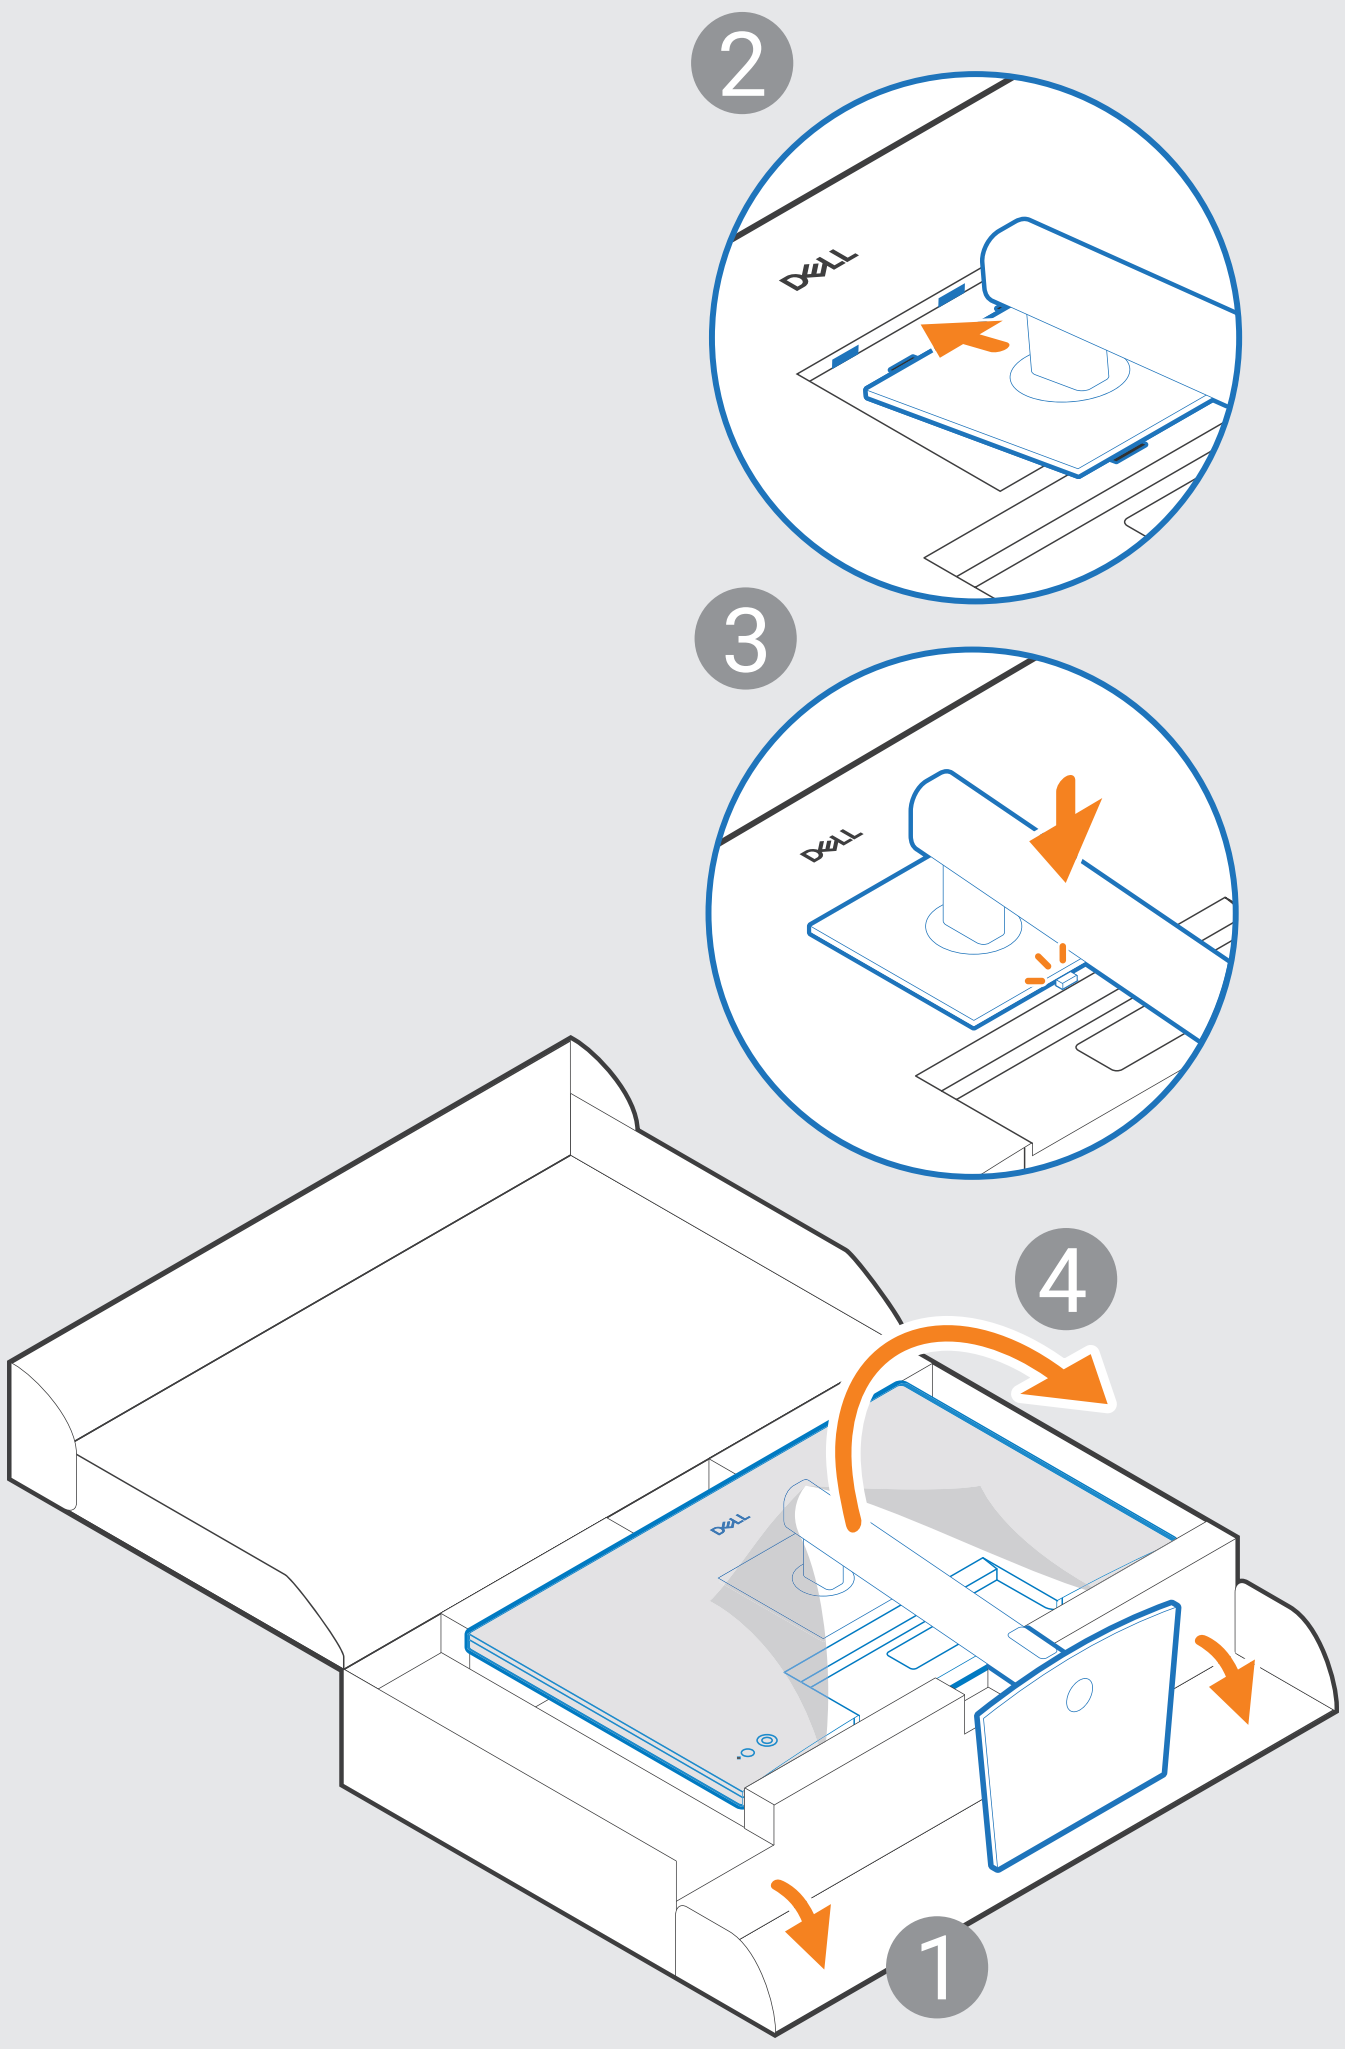


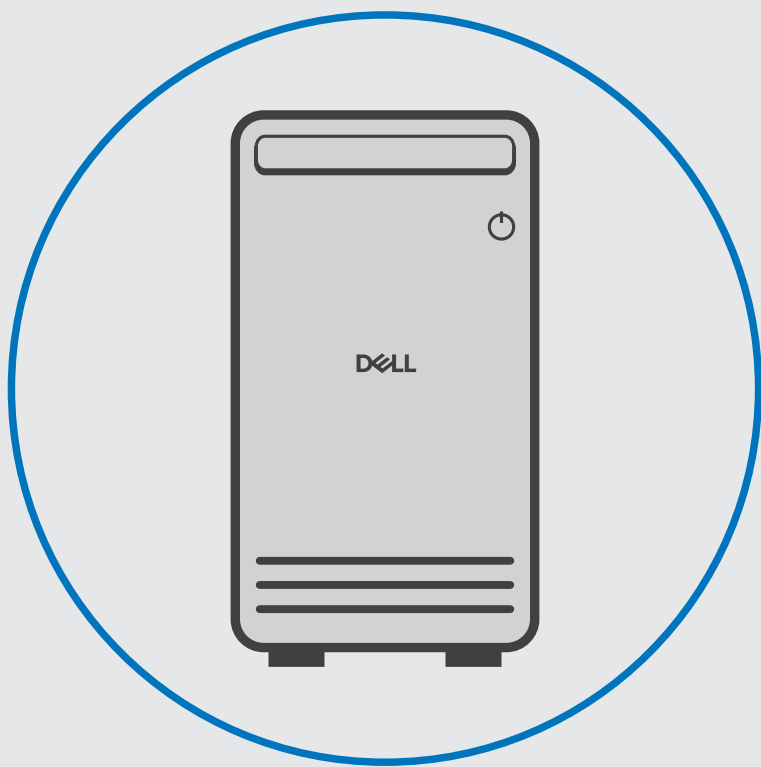


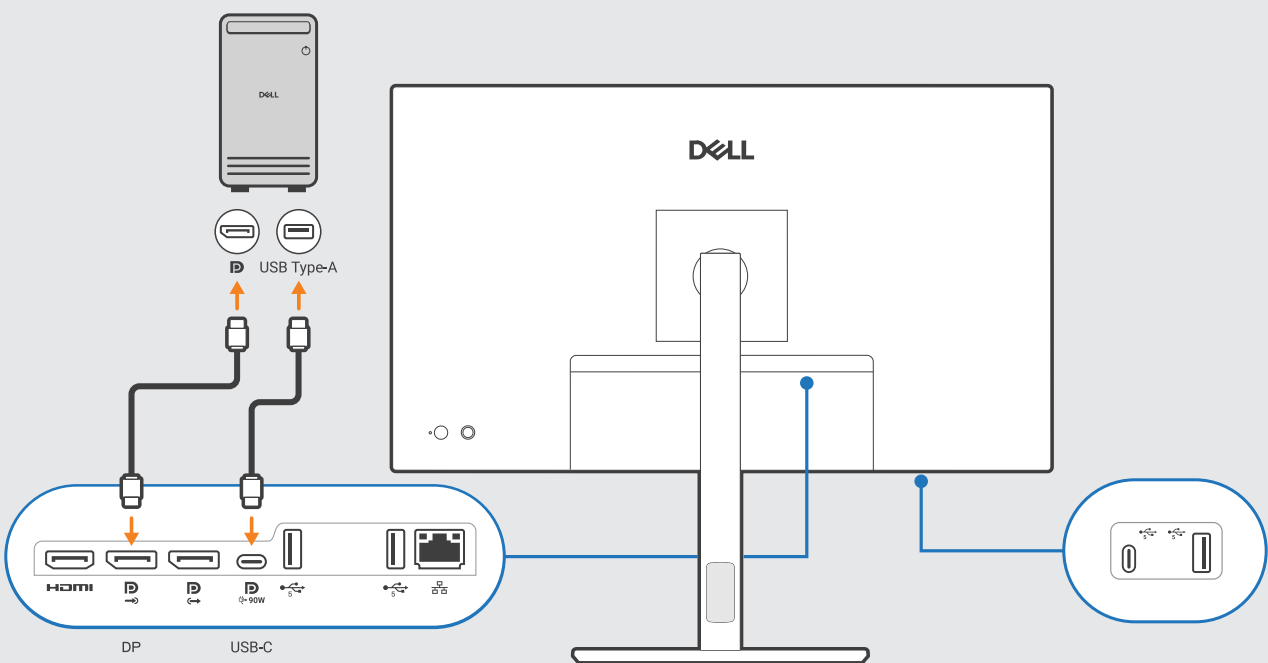

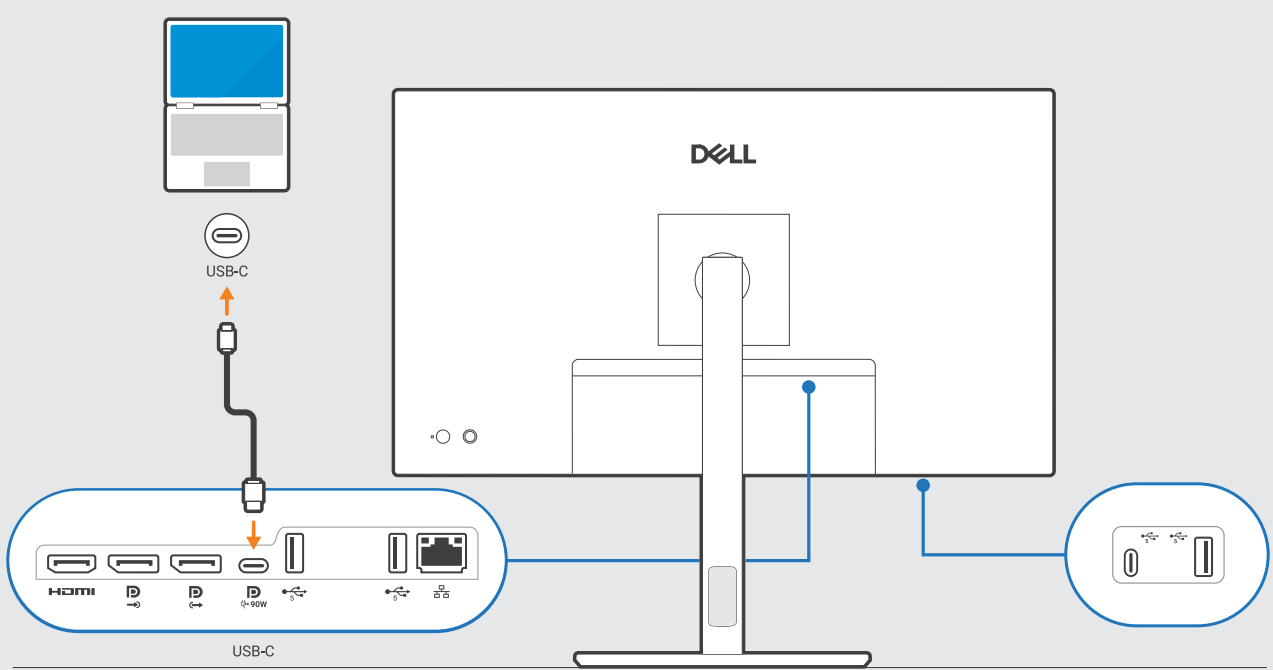


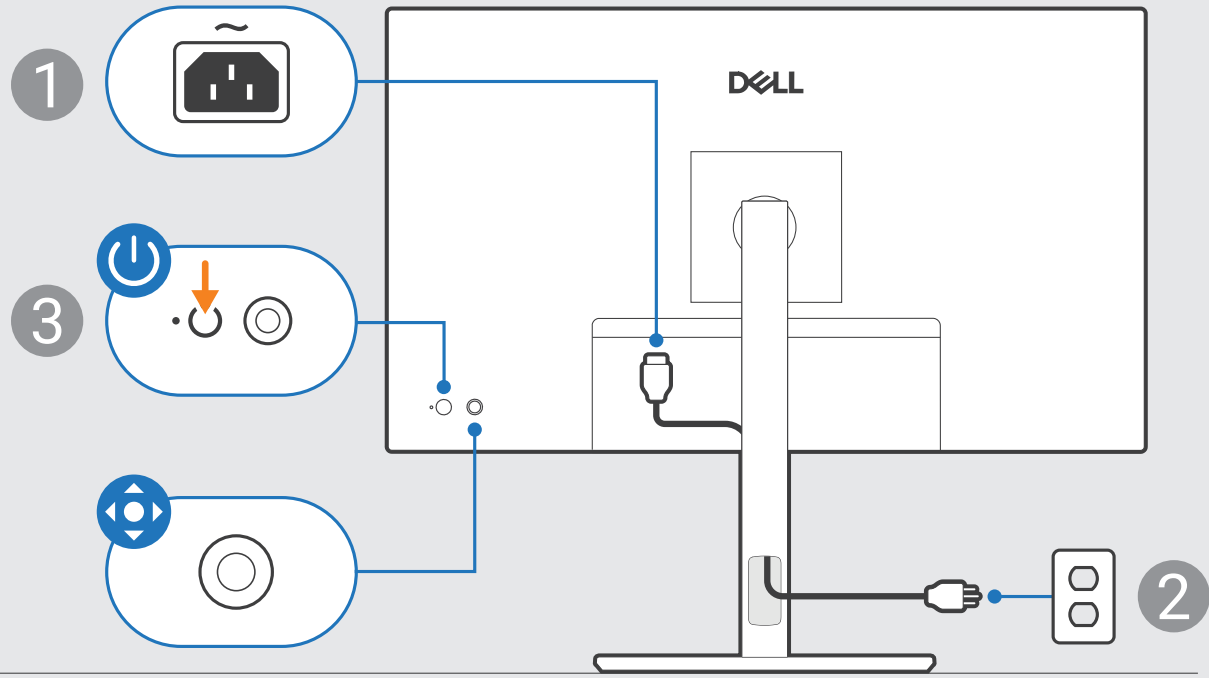

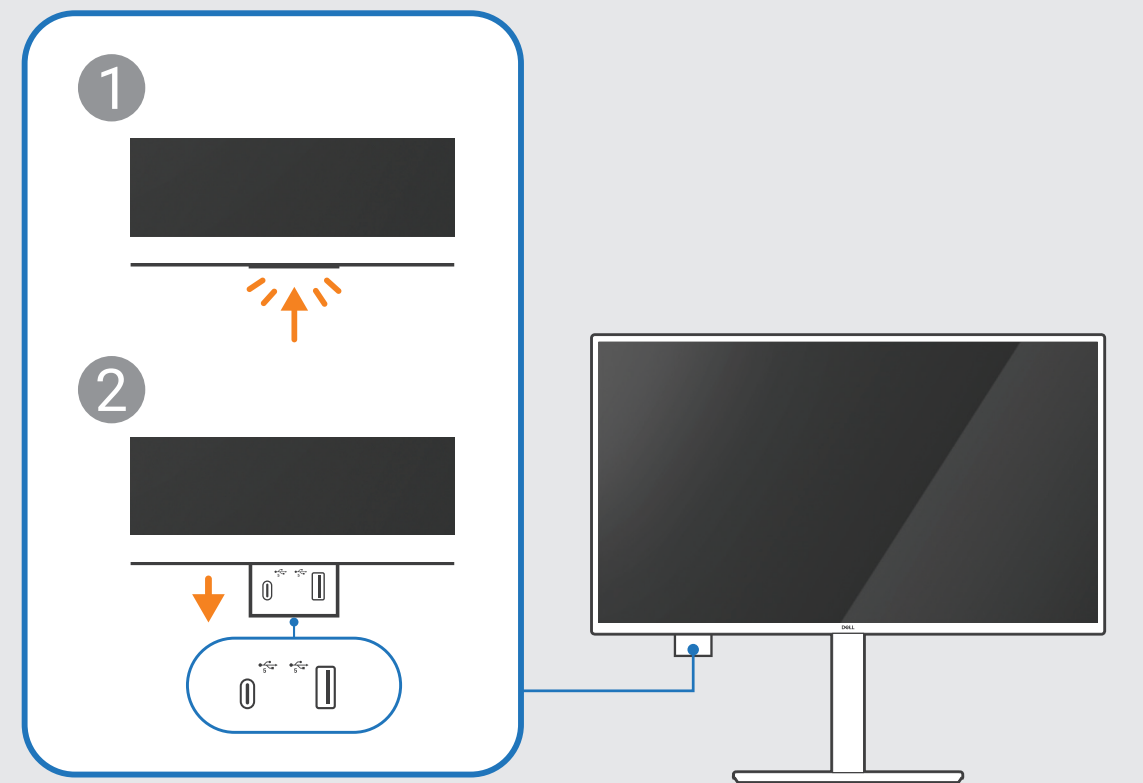


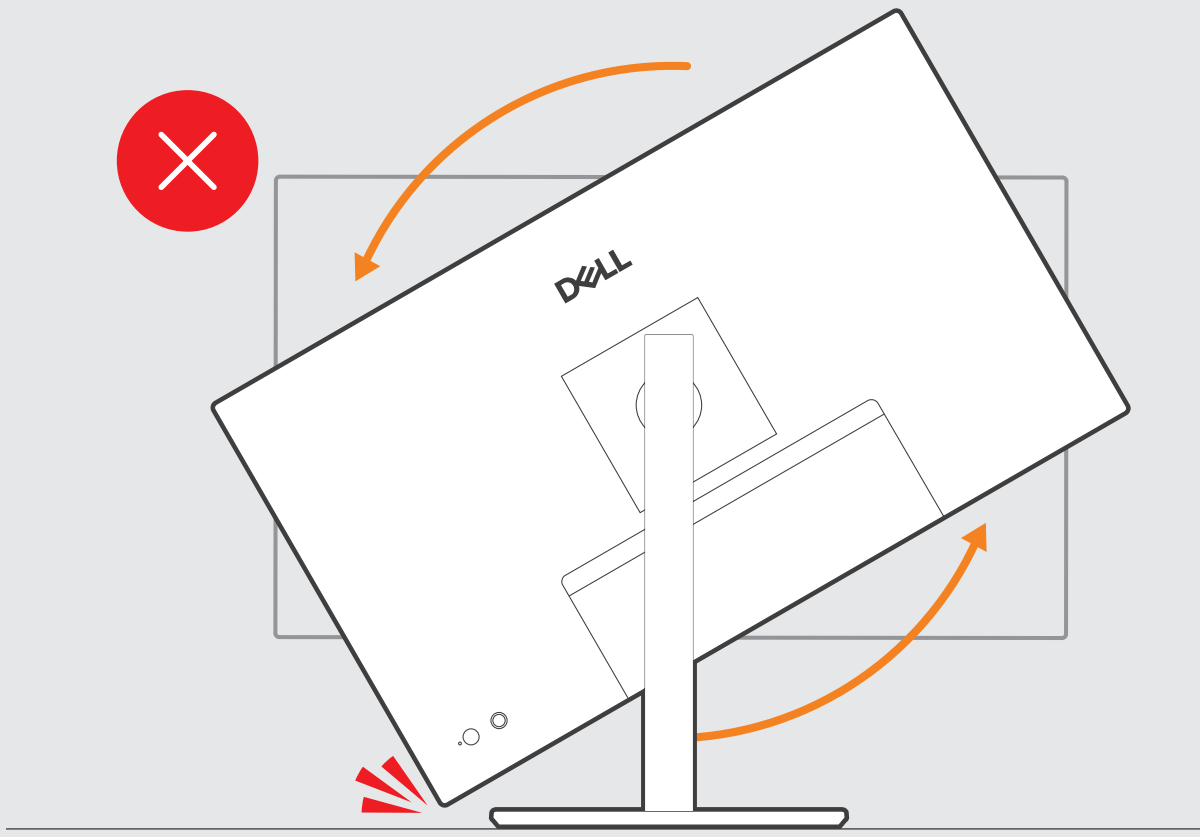


1


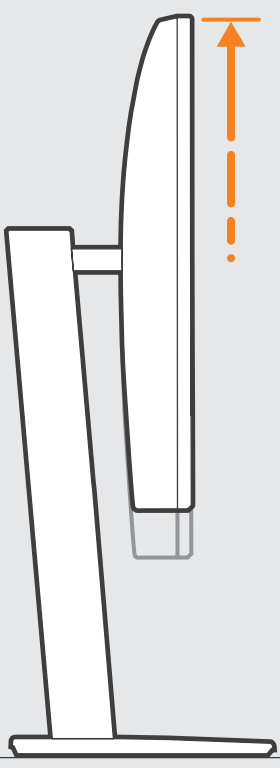



2

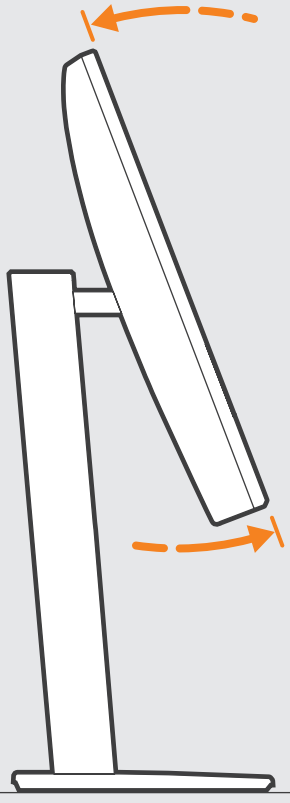


3

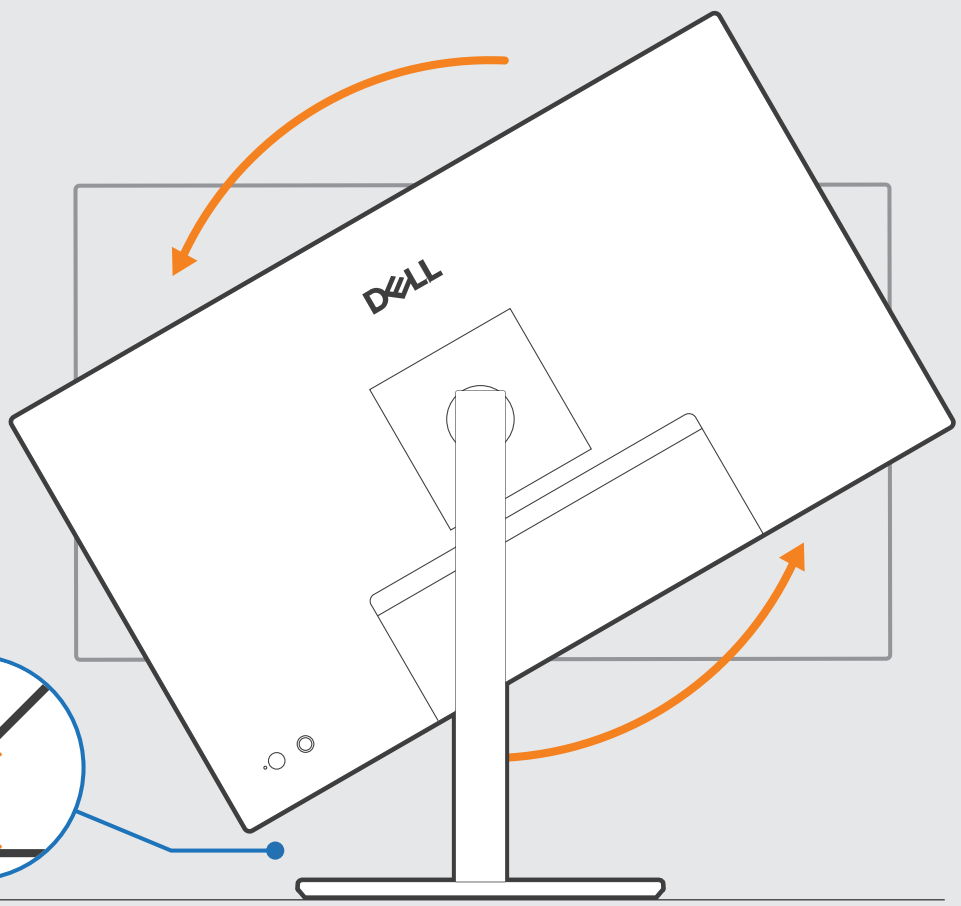

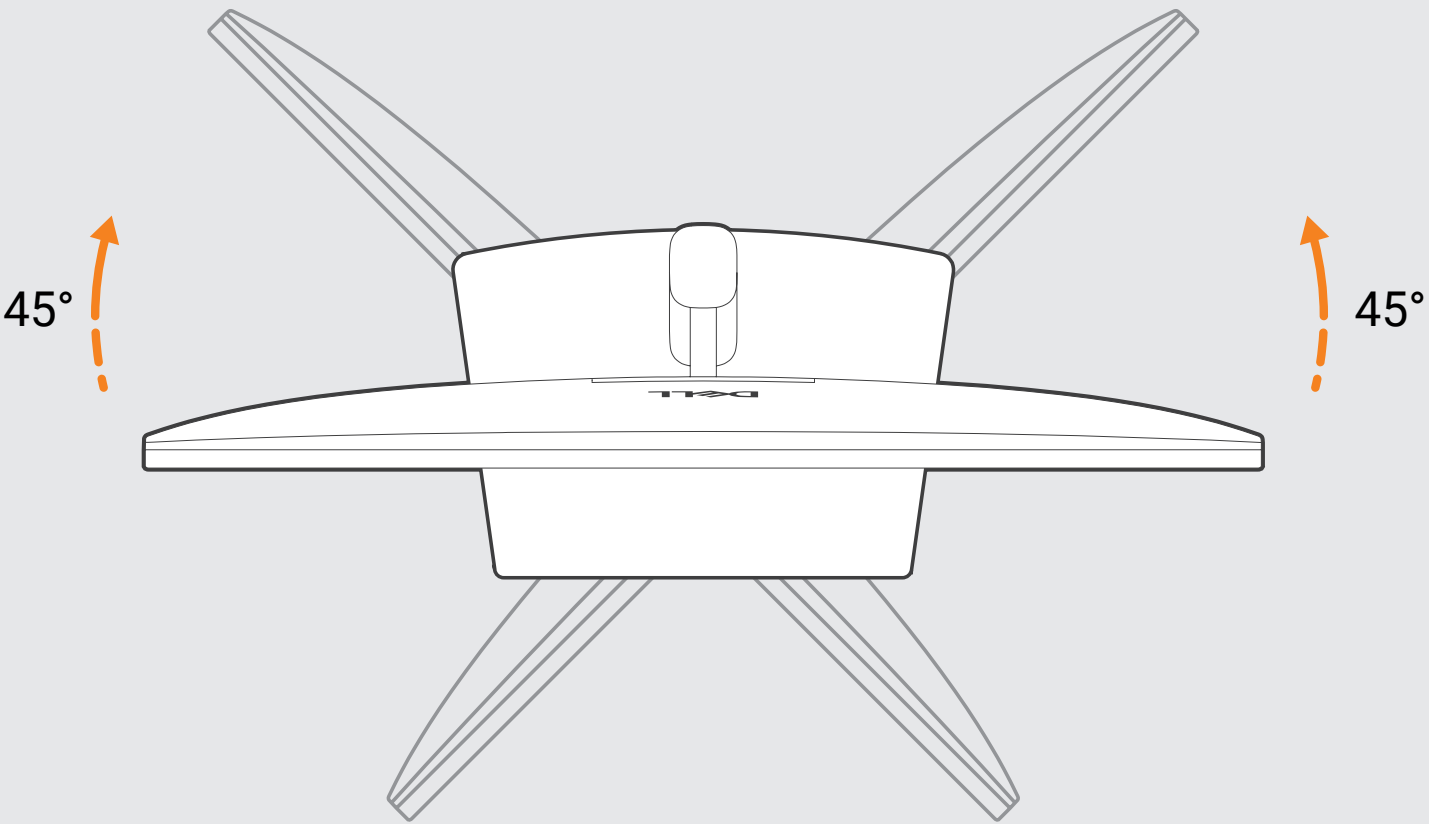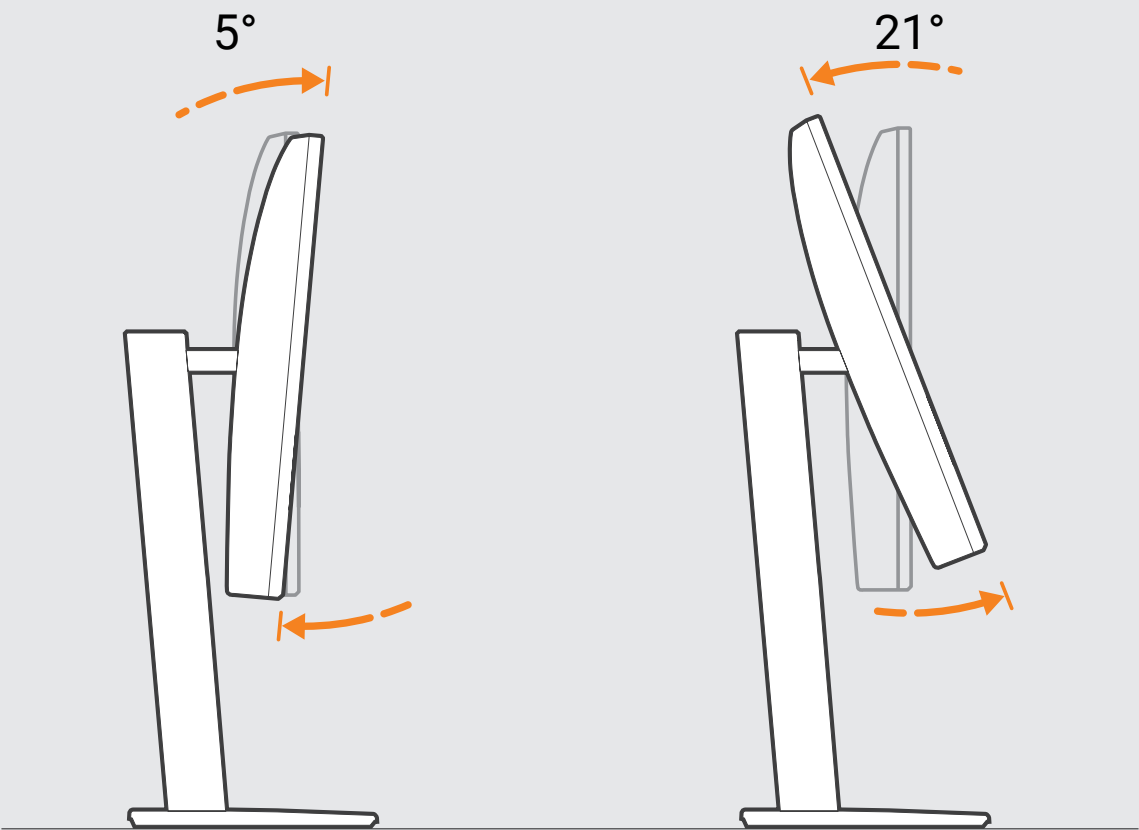


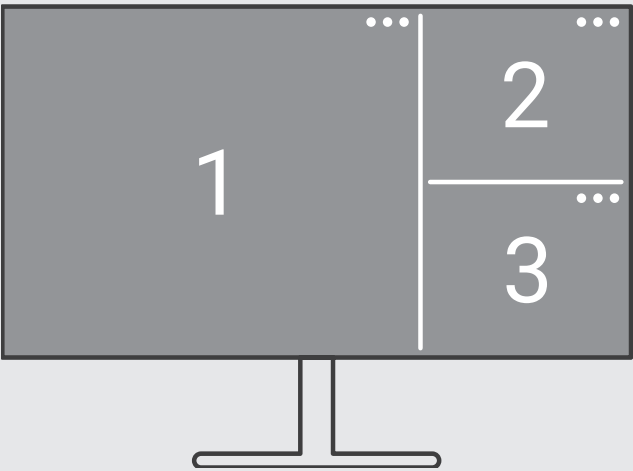

Dell Display and Peripheral Manager
Dell.com/support/ddpm

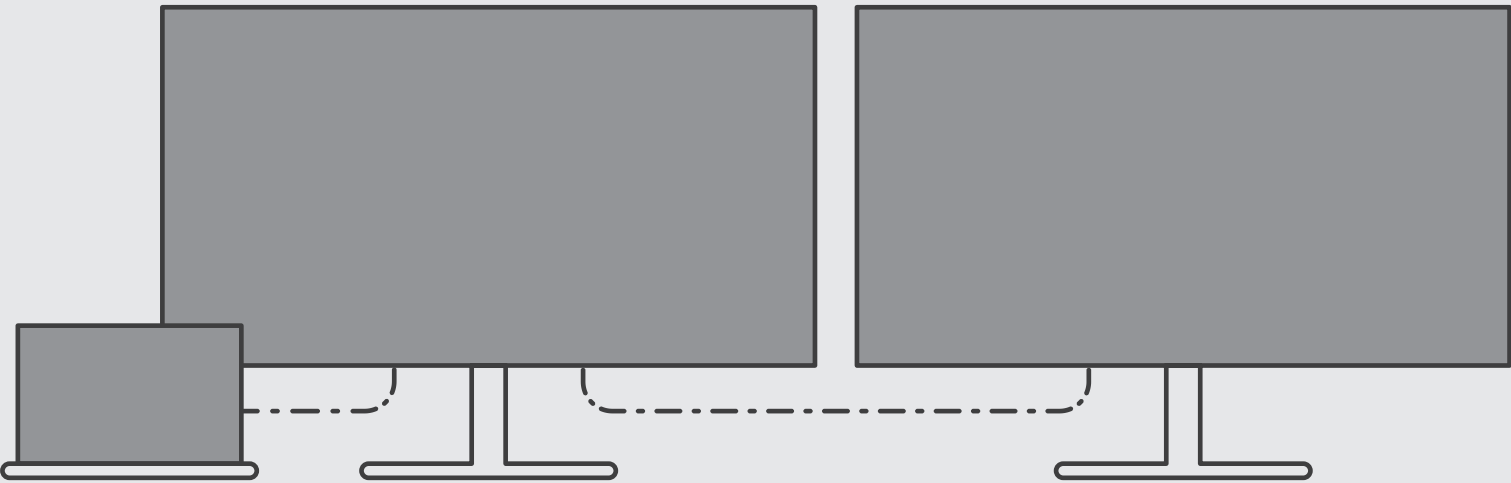

Daisy Chain

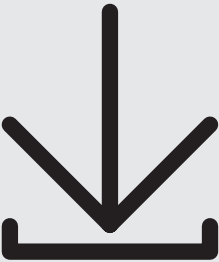

Dell.com/support/P2725DE