
Instruction manual

BLUETOOTH PARTY SPEAKER BPS-370



denver.eu
01/26



FR

Cet appareil et
ses accessoires
sont recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

 
Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium polymer batteries.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
9. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.
10. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
11. Only charge with supplied charging cable.
12. Do not use non original accessories together with the product as this can make the product functionality abnormal.


Denver A/S reserve the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

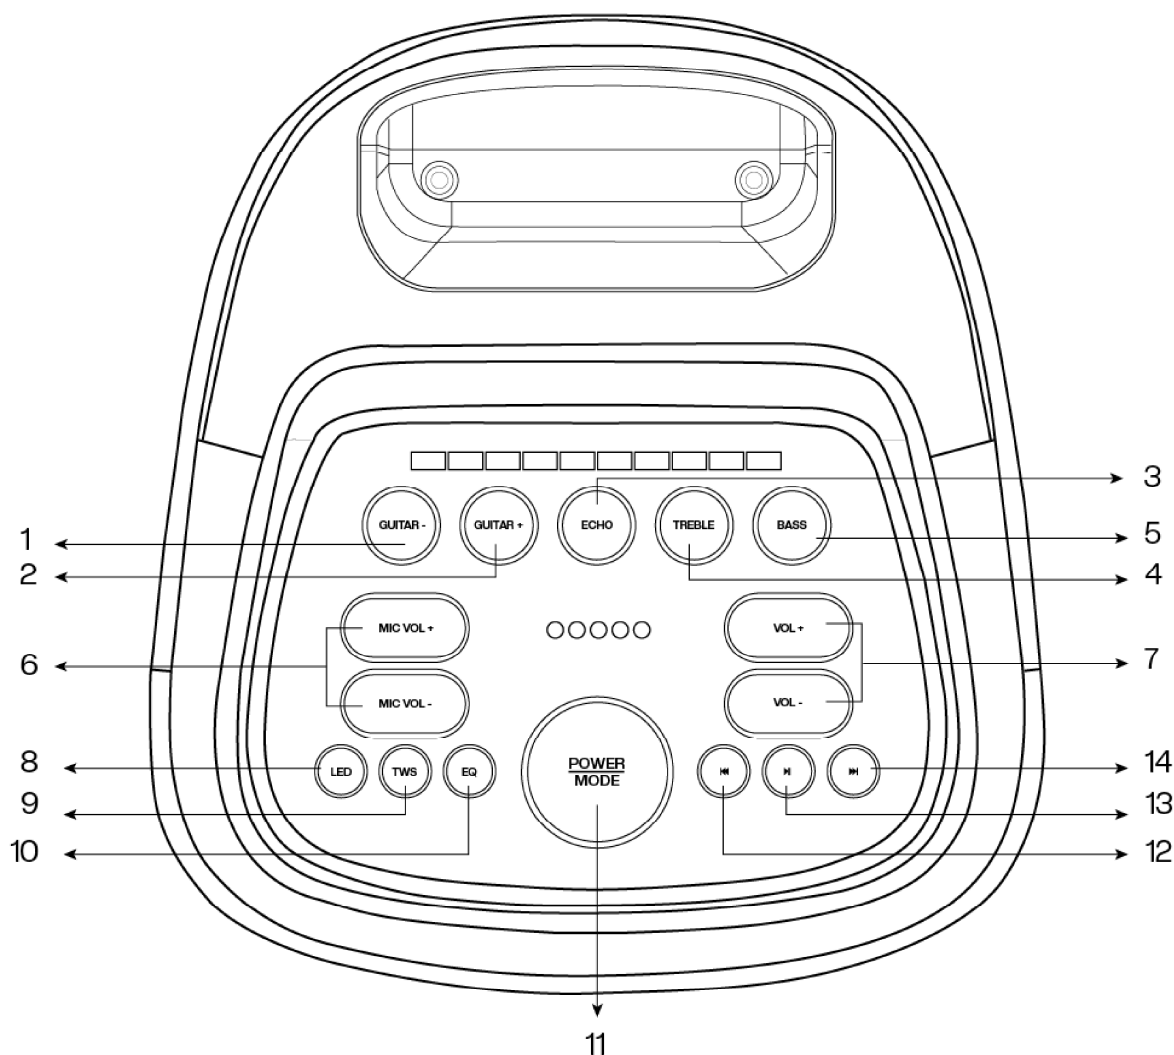

Control Panel:

 
1. GUITAR -: Decrease the volume of guitar.
2. GUITAR +: Increase the volume of guitar.
3. ECHO: Adjust the echo of microphone.
4. TREBLE: Adjust the treble of the speaker
5. BASS: Adjust the bass of the speaker.
6. MIC VOL-/MIC VOL+: Adjust the volume of microphone.
7. VOL-/VOL+: Adjust the volume of the speaker.
8. LED: Change the led light mode.
9. TWS: Connect two speakers with TWS.
10. EQ: Adjust the EQ.
11. POWER/MODE: Press and hold to power on/off the speaker. Short press to change the modes.
12. ⏮ : Previous song.
13. ⏸ : Short press to play/pause music.
14. ⏭ :Next song.

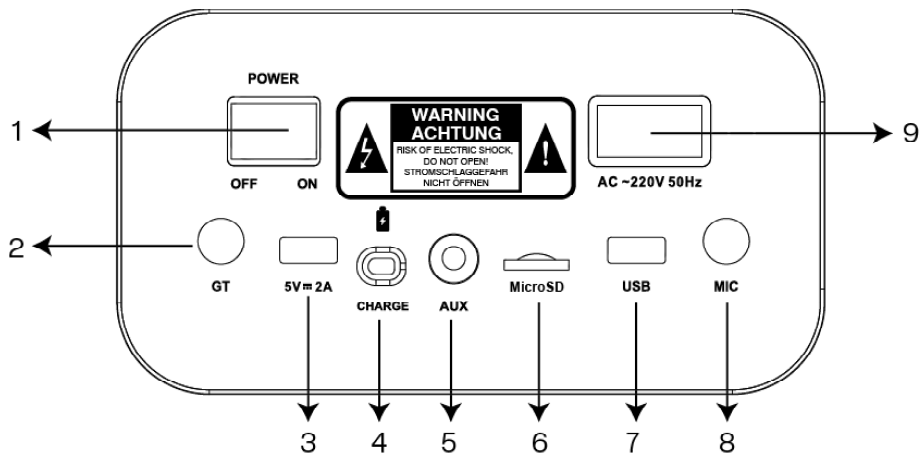

1. Hard switch power on/off.
2. Guitar input.
3. Charging for mobile phone.
4. Charging LED light: The indicator light remains red during charging and turns blue when fully charged.
5. Aux Input.
6. Micro SD card slot.
7. USB input.
8. Microphone input.
9. AC Jack: Charging port.

Remote control:

1. On/Off Switch.
2. MODE: Press to switch between operating modes: BT mode, Micro SD card mode, U disk mode, AUX mode.
3. VOL+: To increase volume.
4. **▶||**: Short press to play/pause music.
5. **◀◀**: To select the previous song from USB /Micro SD/ BT.
6. VOL-: To reduce volume.
7. EQ: To set equalizer variants.
8. TREBLE -: To reduce the treble.
9. BASS -: To reduce the bass.
10. MUTE: To mute.
11. LED: To change the LED mode.
12. **▶▶**: To select the next song from USB/Micro SD/ BT.
13. TREBLE +: To increase the treble.
14. BASS +: To increase the BASS.

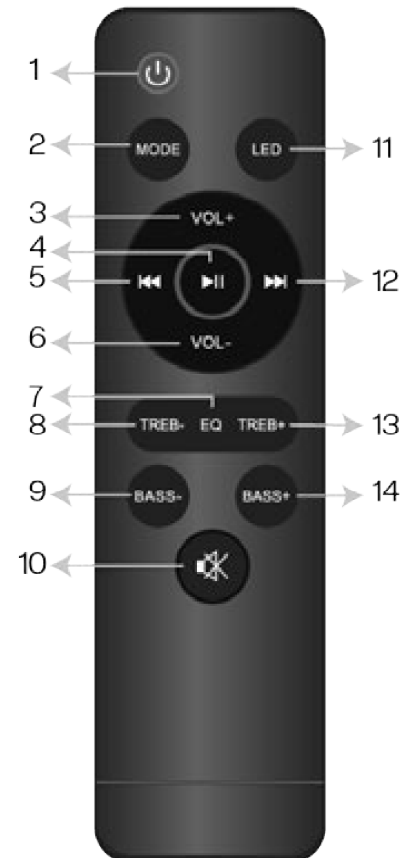 

FUNCTION DESCRIPTION

1. Charge the speaker

To charge the speaker's built-in battery, connect AC cable to the charging port. The battery charging LED will be red, and will turn to blue when fully charged.

2. Bluetooth function

- Power on the product then press MODE button to enter BT mode.
- Put your mobile device (cell phones, computers, etc.) into BT pairing mode, search for BT devices, and select the item name BPS-370 when it appears.
- After the device has been paired successfully for the first time, it will connect automatically in around 10 seconds to the device last connected when next time use. (Note: The product can connect to only one Bluetooth device at a time.)

Bluetooth Re-connection Function:

- Press and hold ►|| to disconnect the Bluetooth connection between the mobile device (cell phones, computers, etc.) and the speaker.
- Press and hold ►|| again to reconnect the Bluetooth connection between the mobile device and the speaker. For detailed Bluetooth connection instructions, please refer to the above "Bluetooth function".

3.TWS Function

Power on two speakers and enter Bluetooth mode.

Turn off the Bluetooth function on your phone or other Bluetooth device. press the TWS button of either speaker, A voice prompt will then be heard to signify that the two speakers have connected via Bluetooth.

Turn on Bluetooth on the mobile phone and search for “BPS-370” and connect.

A voice prompt will then be heard signifying that the mobile has connected to the speakers. You can now enjoy music from the two speakers.

4. USB mode

1. Insert a USB device into the speaker's USB port.
2. Or press MODE to switch to USB mode.
3. Press the ►|| button to play or pause the music.

5. Auxiliary input mode

1. Connect a 3.5 mm audio cable to the unit's auxiliary input.
2. Press MODE to switch to auxiliary input mode.
3. Use the controls of the connected device to select and play the audio.

6. Micro SD card mode

1. Insert an SD card, SD card mode will start automatically.
2. Or press MODE to switch to Micro SD card mode.
3. Press the ►|| button to play or pause the music.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type BPS-370 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: BPS-370. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: BPS-370 and enter the page.

Max audio output power: 100W RMS
Bluetooth operating frequency range: 2402MHz-2480MHz
DAB radio operating frequenc: 20Hz-20KHz
Operating frequency range: 20Hz-20KHz
Max RF output power: 10 dBm

DENVER A/S
Omega 5A, Soeften DK-8382 Hinnerup Denmark
www.denver.eu
www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

