 
 
 
 
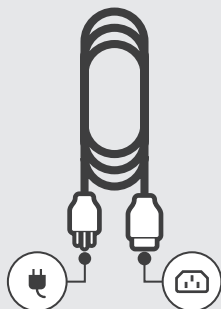 
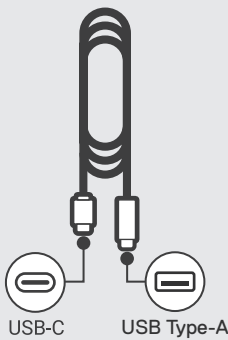 
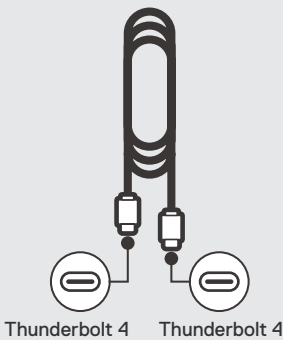 
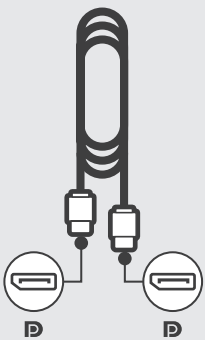 





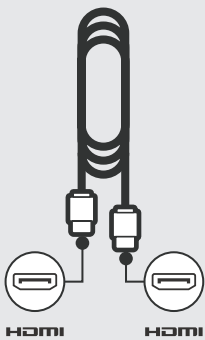


     
 
 
Bildskärm Dell UltraSharp 52 Thunderbolt Hub Monitor
U5226KW/U5226KW WOST
Snabbstartsguide

 
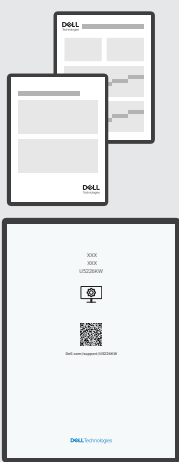 


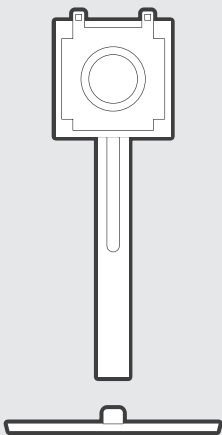 


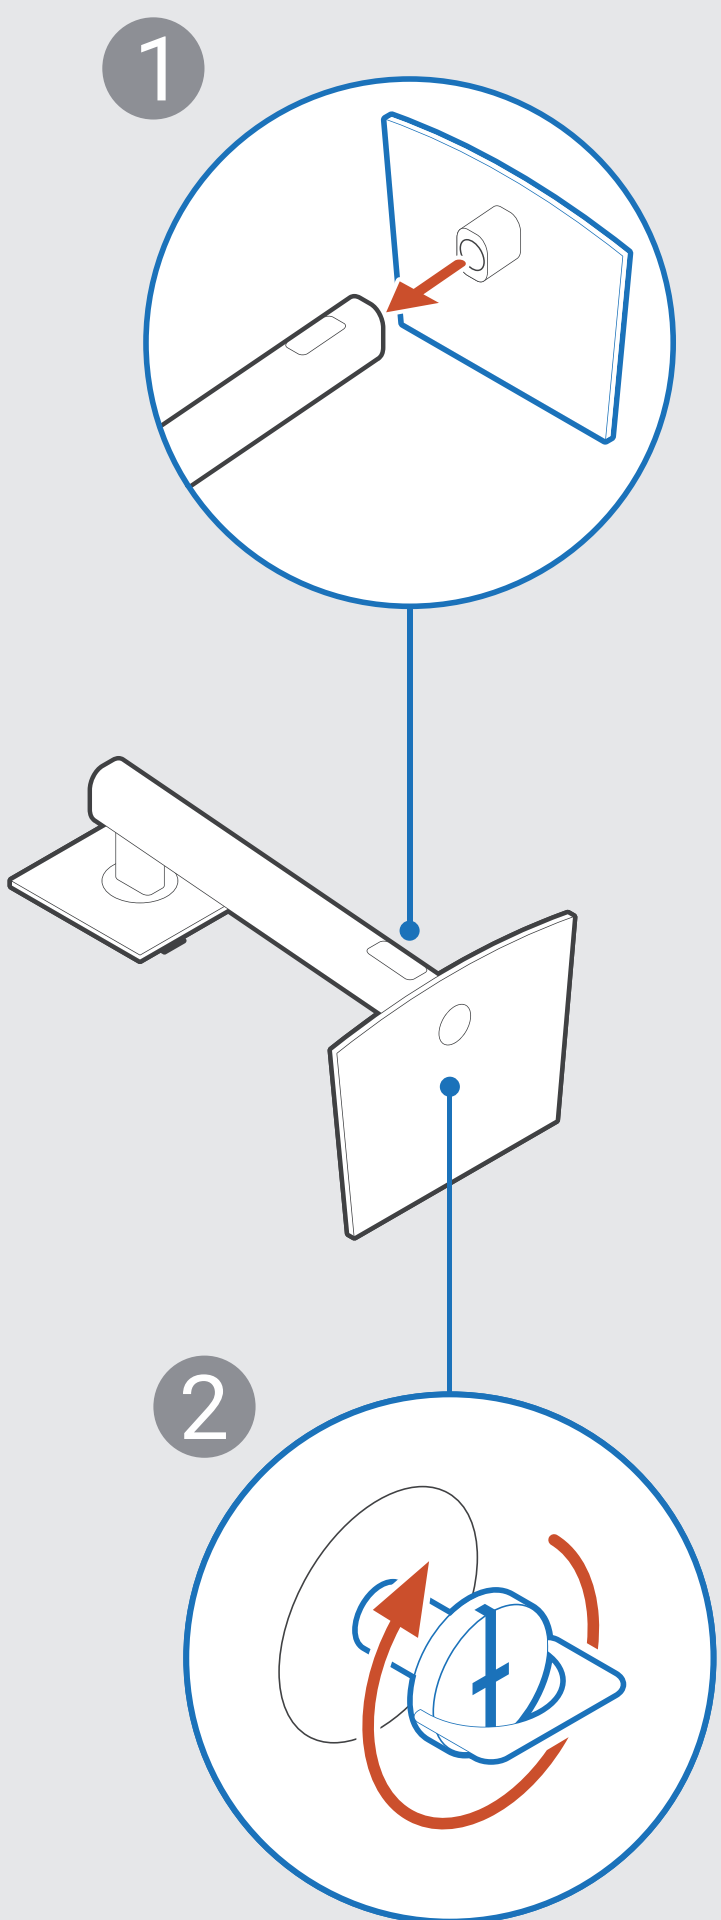 


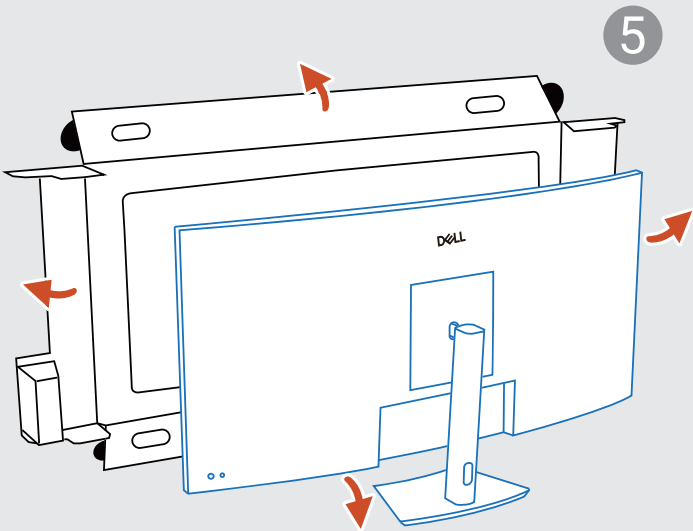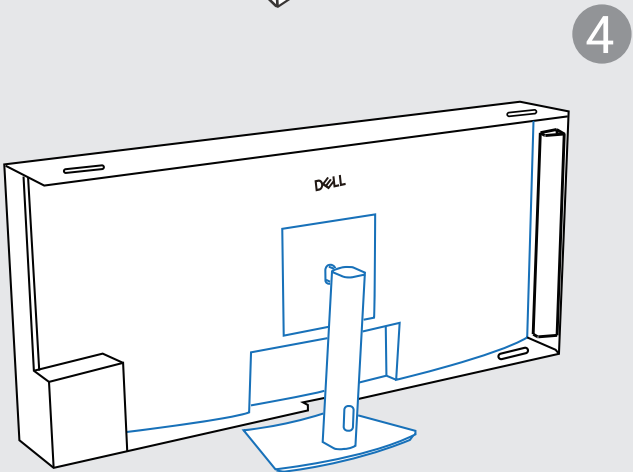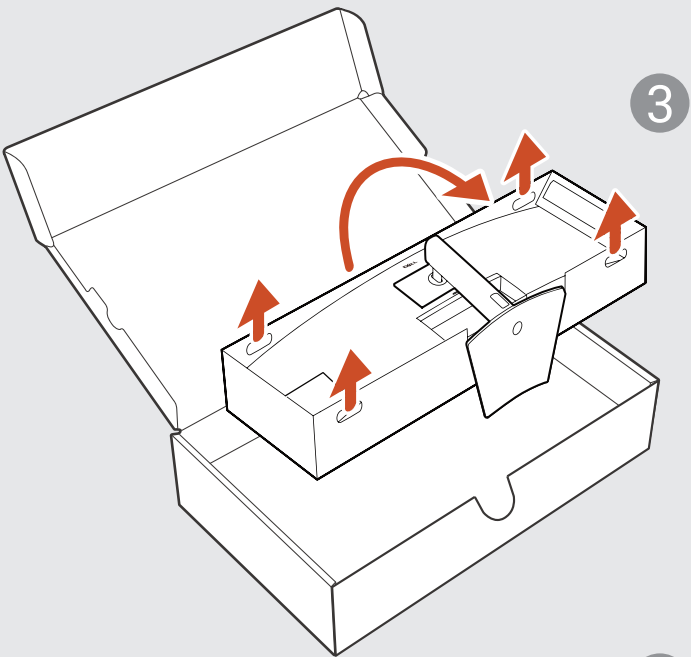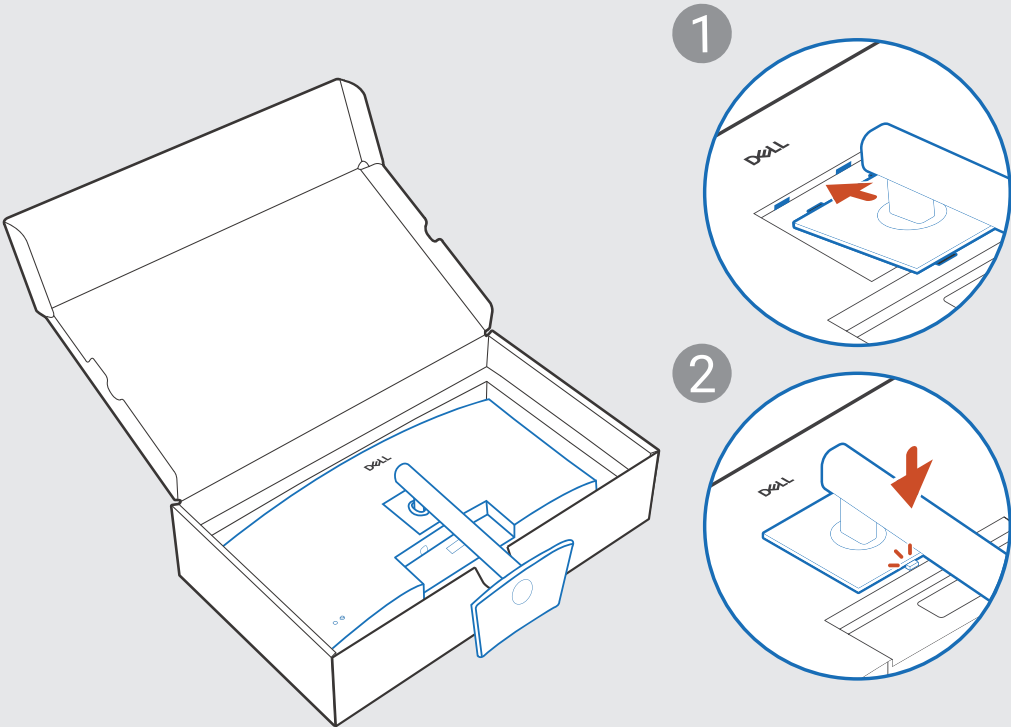 


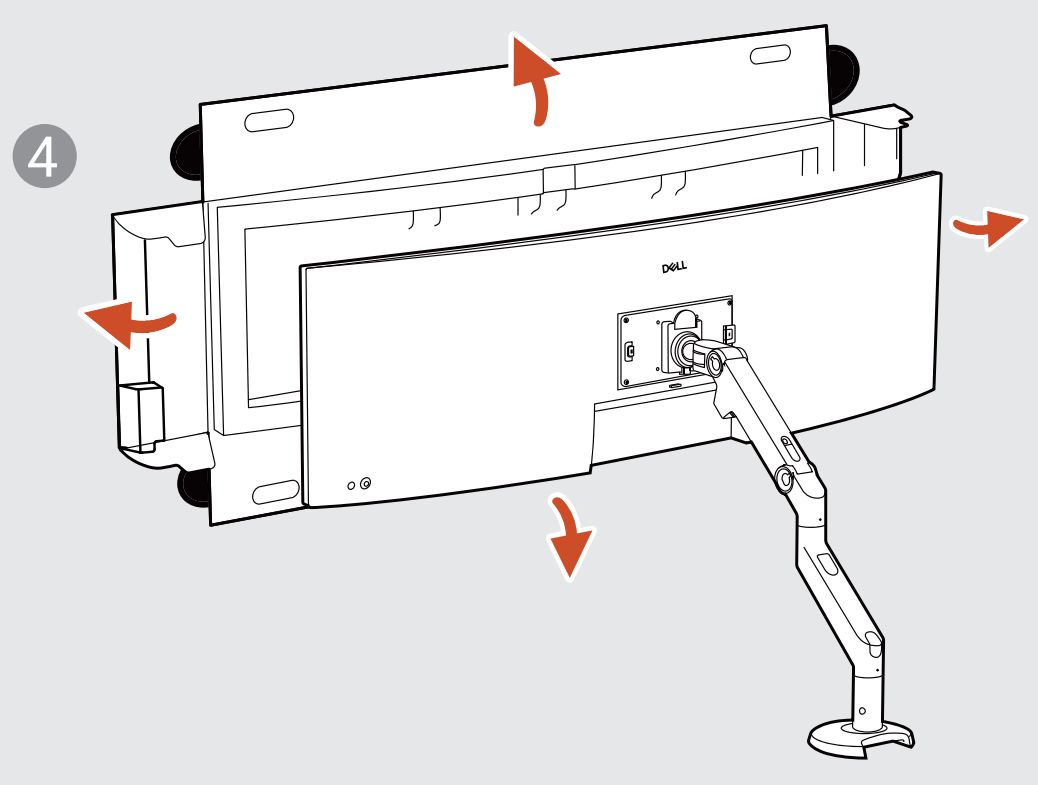 
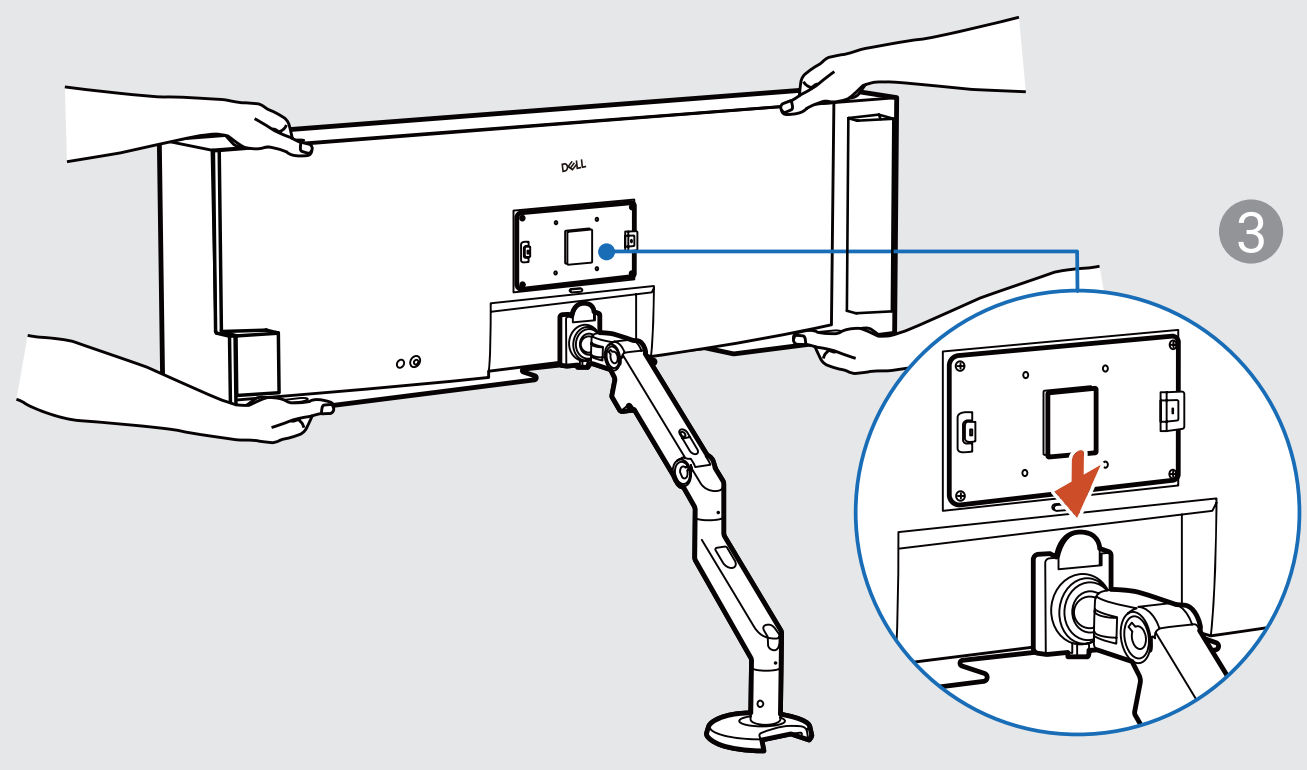 
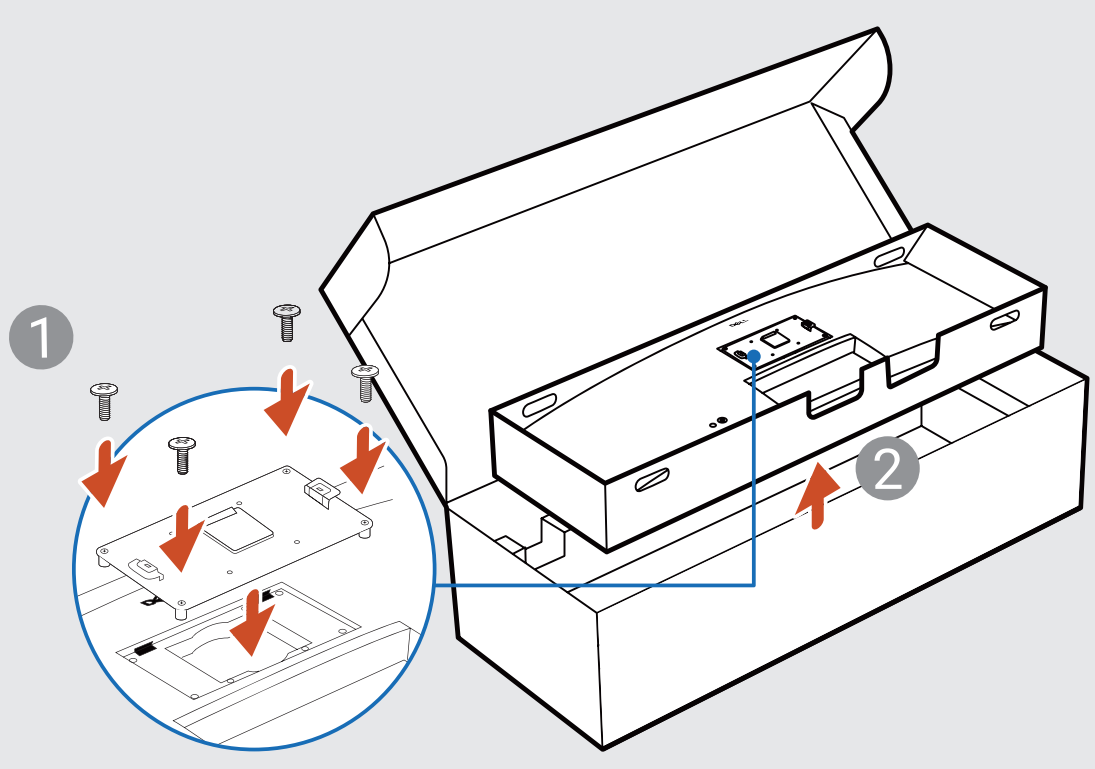 


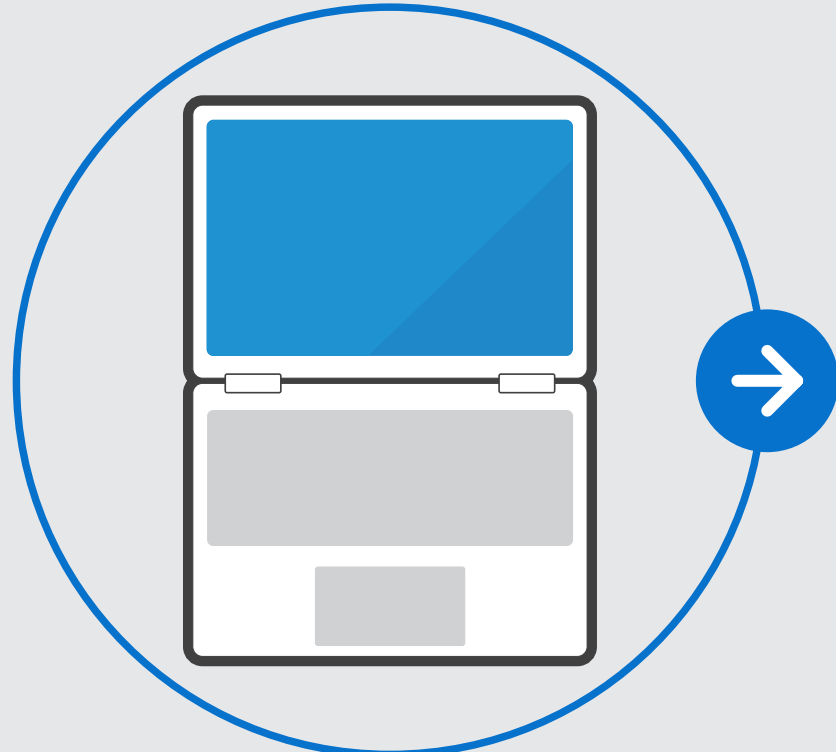 
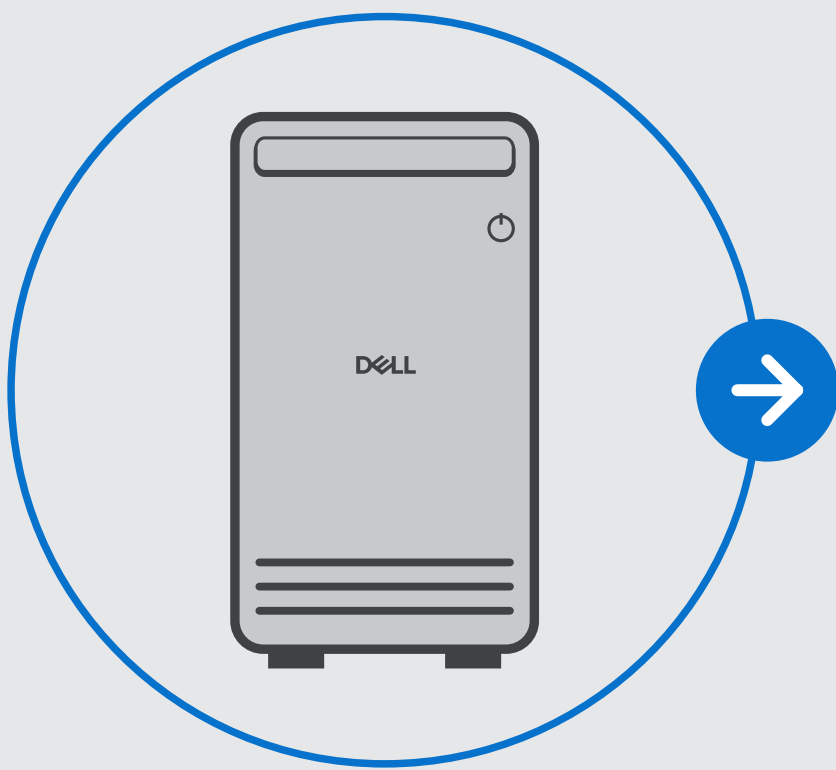 


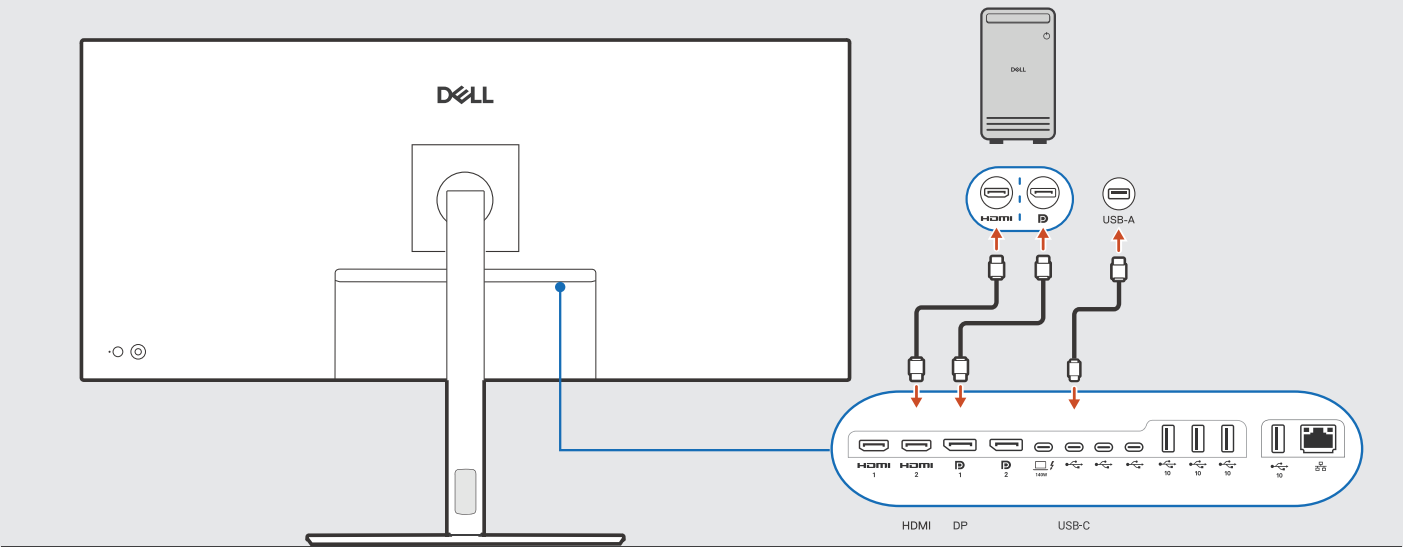 


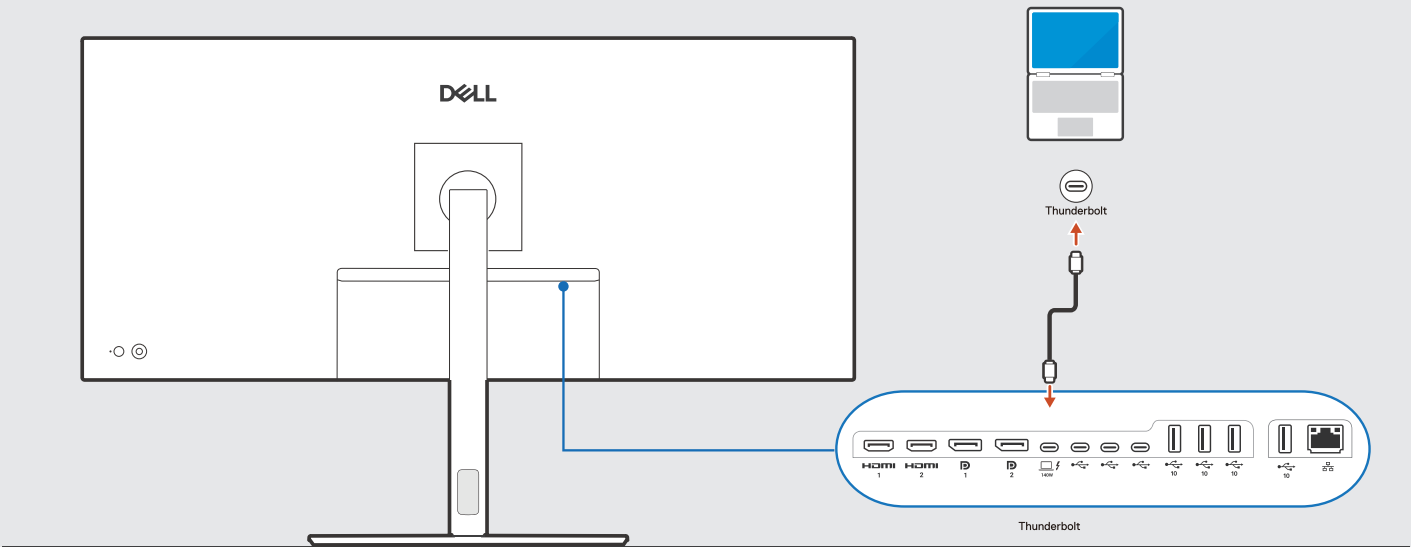

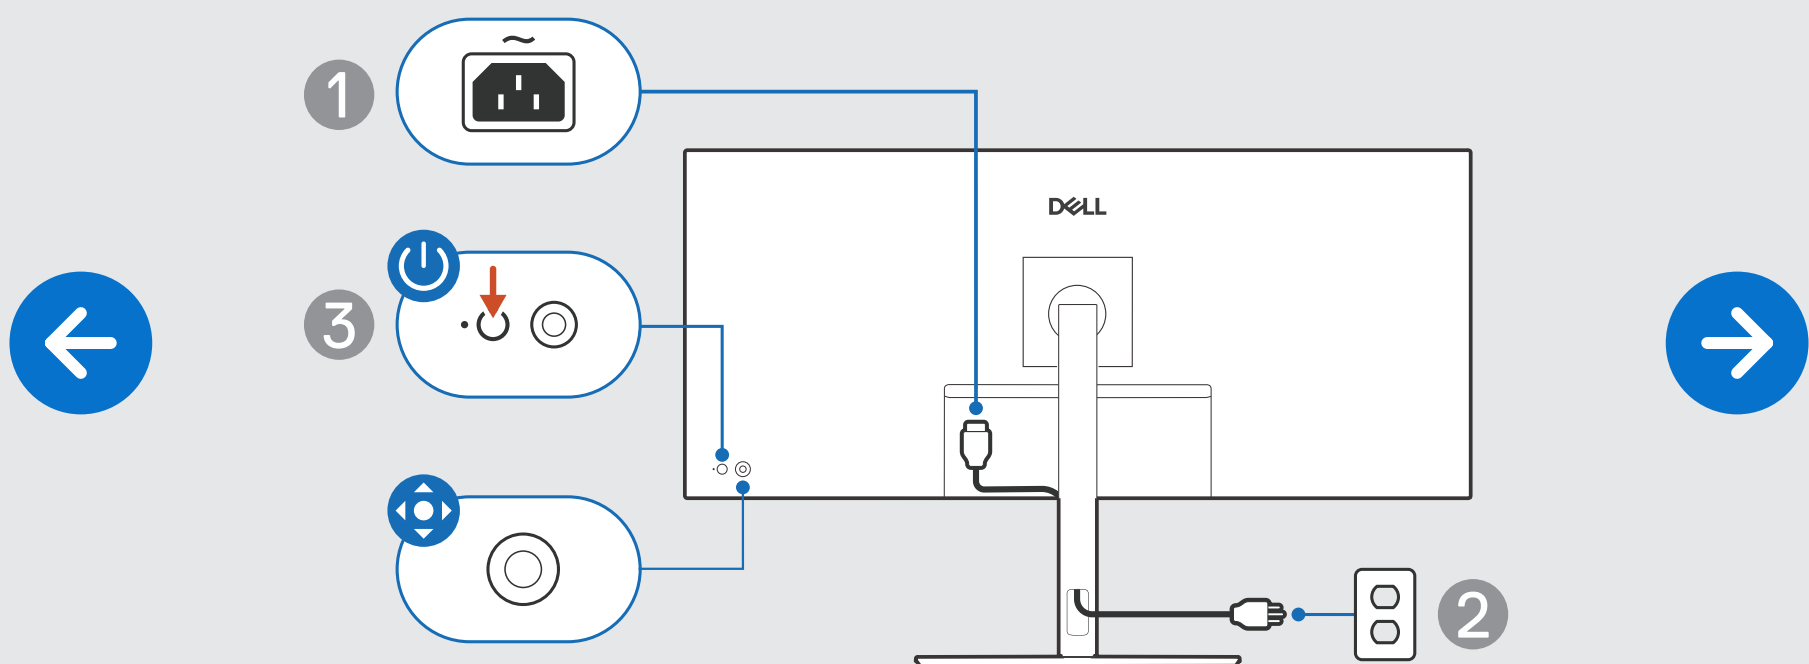


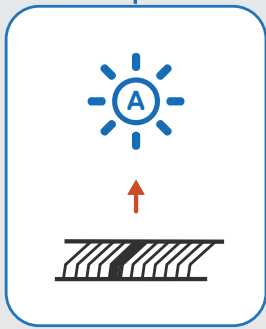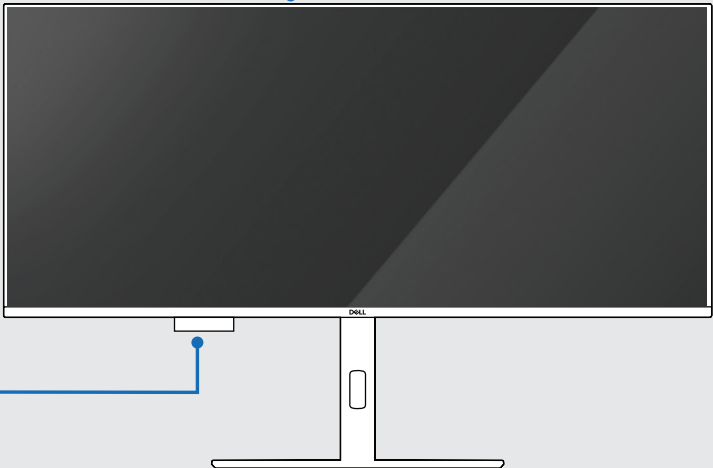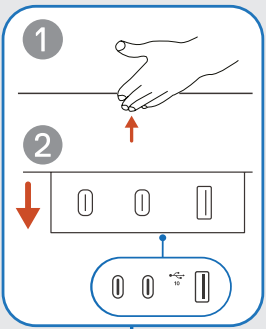

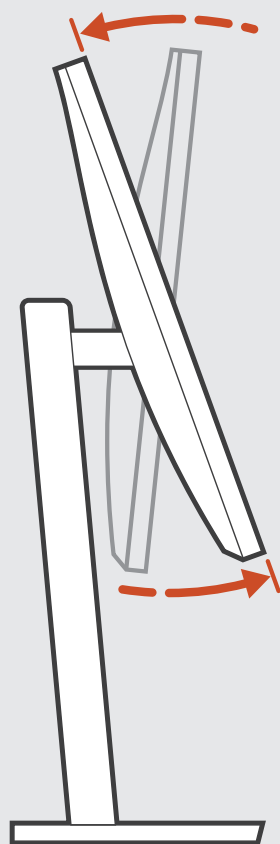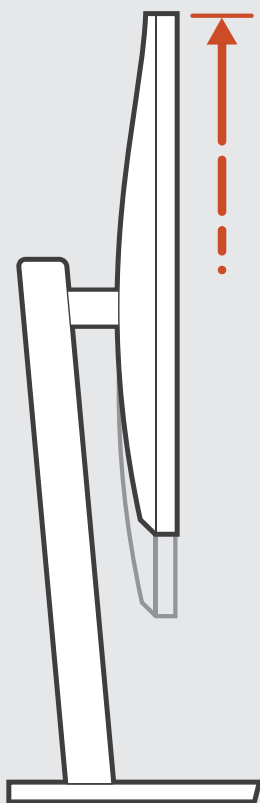


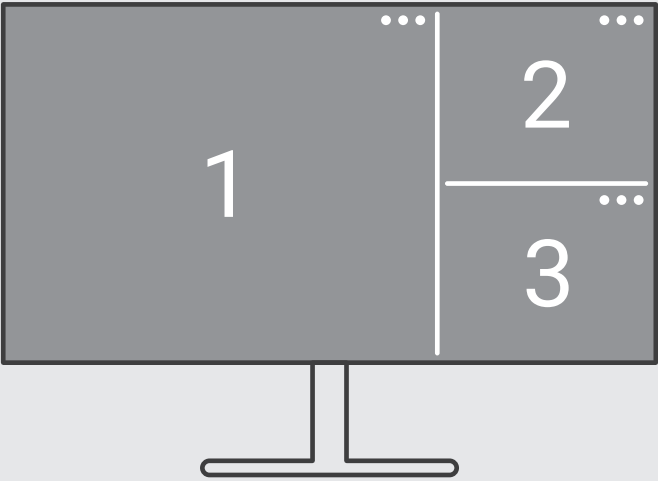

 Dell Display and Peripheral Manager:
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

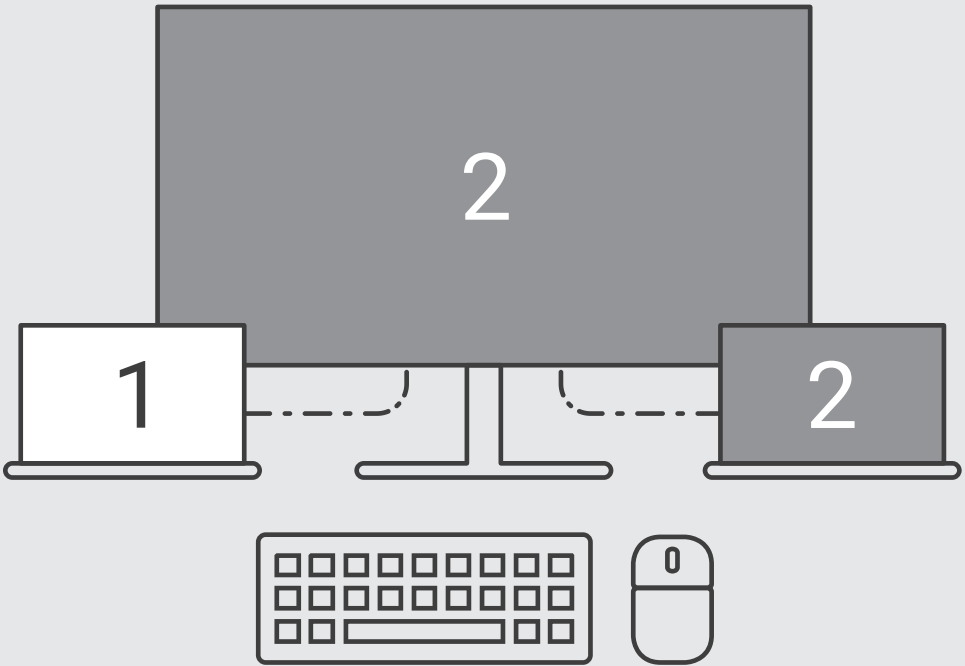

KVM

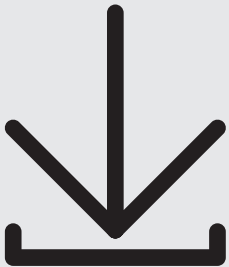 

[Dell.com/support/U5226KW](https://dell.com/support/U5226KW)