PQCA-10320
denver.eu
02/2025

Important safety information

WARNING: Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Please keep the product away from pets.
3. Warning! This power bank is with lithium polymer battery inside.
4. Do not try to open the power bank.
5. Do not expose to heat, water, moisture or direct sunlight!
6. Do not attempt to replace the battery yourself- you may damage the battery, which could cause overheating and injury. Repairs or service should only be performed by qualified personnel.
7. Battery must be recycled or disposed of separately from household waste. Do not incinerate the battery.
8. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
9. Please remove the charging cable when the power bank is fully charged.
10. Product operating and storage temperature is from 5 degrees Celsius to 35 degrees Celsius. Under and over this temperature might affect the function.
11. Do not drop or expose to impact or shock in any way.

Item Overview

1. Type-C Input/Output
2. Micro Input
3. USB Output
4. LED Indicator
5. Power Button
6. USB-C Cable
7. Lightning Cable

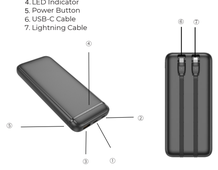

Package Contents

Power Bank
Type-C Charging Cable
User Manual

Specifications

* Battery Capacity: 10,000mAh
* Type-C Input: 5V/3A 9V/2A 12V/1.5A
* Micro Input: 5V/2A 9V/2A
* Type-C Output: 5V/3A 9V/2.22A 12V/1.67A
* USB-A Output: 5V/3A 9V/2A 12V/1.5A
* Type-C Cable Output:5V/3A 9V/2A 12V/1.5A
* Lightning Cable Output: 5V/2A
* With Battery Level Indicator

Charging the Power Bank

1. Fully charge the power bank before using it for the first time.
2. Connect the Type-C cable to the device's Type-C input port or
3. Connect the Micro cable to the device's Micro input port (the Micro cable is not included).
4. Connect the other end of the cable to a USB power source. When all 4 LEDs are lit, the power bank is fully charged.

Charging the Phone

1. Use the built-in USB-C cable to charge your phones.
2. Use the built-in Lightning cable to charge your phones.
3. Use the USB-C cable,connect the USB-A port to the power bank and connect the USB-C port to the phone, it will start charging.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT
DENVER A/S

denver
denver.eu

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Addi-tional information is available at the technical department of your city.

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics
Headquarter Denver A/S
Omega 5A, Soeften DK-8382
Hinnerup Denmark

Phone: **+45 86 22 61 00**
(Push "7" for support)

E-Mail:
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Fairfix GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2 53859
Niederkassel

(for TV, E-Mobility/Hoverboards/ Balanceboards, Smartphones & Tablets)

Phone: **+4915173936969**
E-Mail: **denver@fairfix.de**

Germany
Denver Germany GmbH Service
Max Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369-40**
E-Mail: **support.de@denver.eu**

Austria
Luxf Premium Service
GmbH Deutschstrasse 11230 Wien

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Benelux
DENVER BENELUX B.V
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal
DENVER SPAIN S.A
Ronda Auguste y Louis Lumiere, nº 23 – Nave 16
Parque Tecnológico 46980
PATERNA Valencia (Spain)

Spain
Phone: **+34 960 046 883**

E-Mail: **support.es@denver.eu**

Portugal
Phone: **+35 1255 240 294**
E-Mail: **denver.service@sattel.com**

Poland
LetMeRepair Poland sp. z o.o.
Ul. Częstochowska
14/62-800 Kalisz

Phone: **62 75 38 092**
E-Mail:
denver-service@letmerepair.pl

Godziny pracy: 8 – 18
(poniedziałek – piątek)

If your country is not listed above,
please write an email to support@denver.eu

denver
Denver A/S Omega 5A,
Soeften DK-8382 Hinnerup Denmark
facebook.com/denver.eu

22
PAP