



Recon

Hybrid VND Matte Box.



What's Included

Available Kits / Bundles.

RECON KITS_

Base Kit

VND 3-6+ Filter | Thread Base | Aero-Hood + Flag | Defender Protective Cap (Front & Back)
Soft Storage Pouch

Directors Kit

VND 3-6+ Filter | Mist [1/4] Filter | BlueMorphic Filter | Thread Base | Aero-Hood + Flag
Defender Protective Cap (Front & Back) | Soft Storage Pouch

VND 3-6+ Filter

How to use the VND 3-6+ filter base.



INSTALLATION_

Step 1:

First, detach (unthread) the rear aluminum Defender Cap from the VND 3-6+ filter.

Step 2:

With the front rubber Defender Cap still installed, thread on the VND 3-6+ filter to your camera lens.

Step 3:

Once the VND 3-6+ filter is installed on your lens, simply remove the front rubber Defender Cap and begin shooting.

REMOVAL_

Step 1:

Reinstall the front rubber Defender Cap onto the VND 3-6+ filter. Unthread the filter from you lens, and reinstall the rear aluminum Defender Cap.

Aero-Hood

How to use the Recon Aero-Hood.



INSTALLATION_

Step 1:

First, unlock the gold/bronze Rotation Lock Lever, located on the rear top-right of the hood.

Step 2:

Next, pull and hold the gold/bronze Hood Release Slider to the right.

Step 3:

With the Hood Release Slider still pulled, insert the Recon VND 3-6+ filter or Thread Base under the static lip on the opposite side (left side) of the hood. Release the Hood Release Slider once in place.

Step 4:

Once in place, engage/lock the Rotation Lock Lever.

REMOVAL_

Step 1:

Reverse the steps above for removal.

Flag

How to use the Recon Flag.



INSTALLATION_

Step 1:

First, loosen the gold/bronze Flag Lock Knob located on the Aero-Hood.

Step 2:

Next, insert the Flag's tab into the hinge on the Aero-Hood at a 45-degree angle until it sits flush.

Step 3:

Set the Flag to the desired angle, then tighten the Flag Lock Knob.


REMOVAL_

Step 1:

Reverse the steps above for removal or adjustments.

Stage 2 Filters

How to install Recon stage 2 filters.

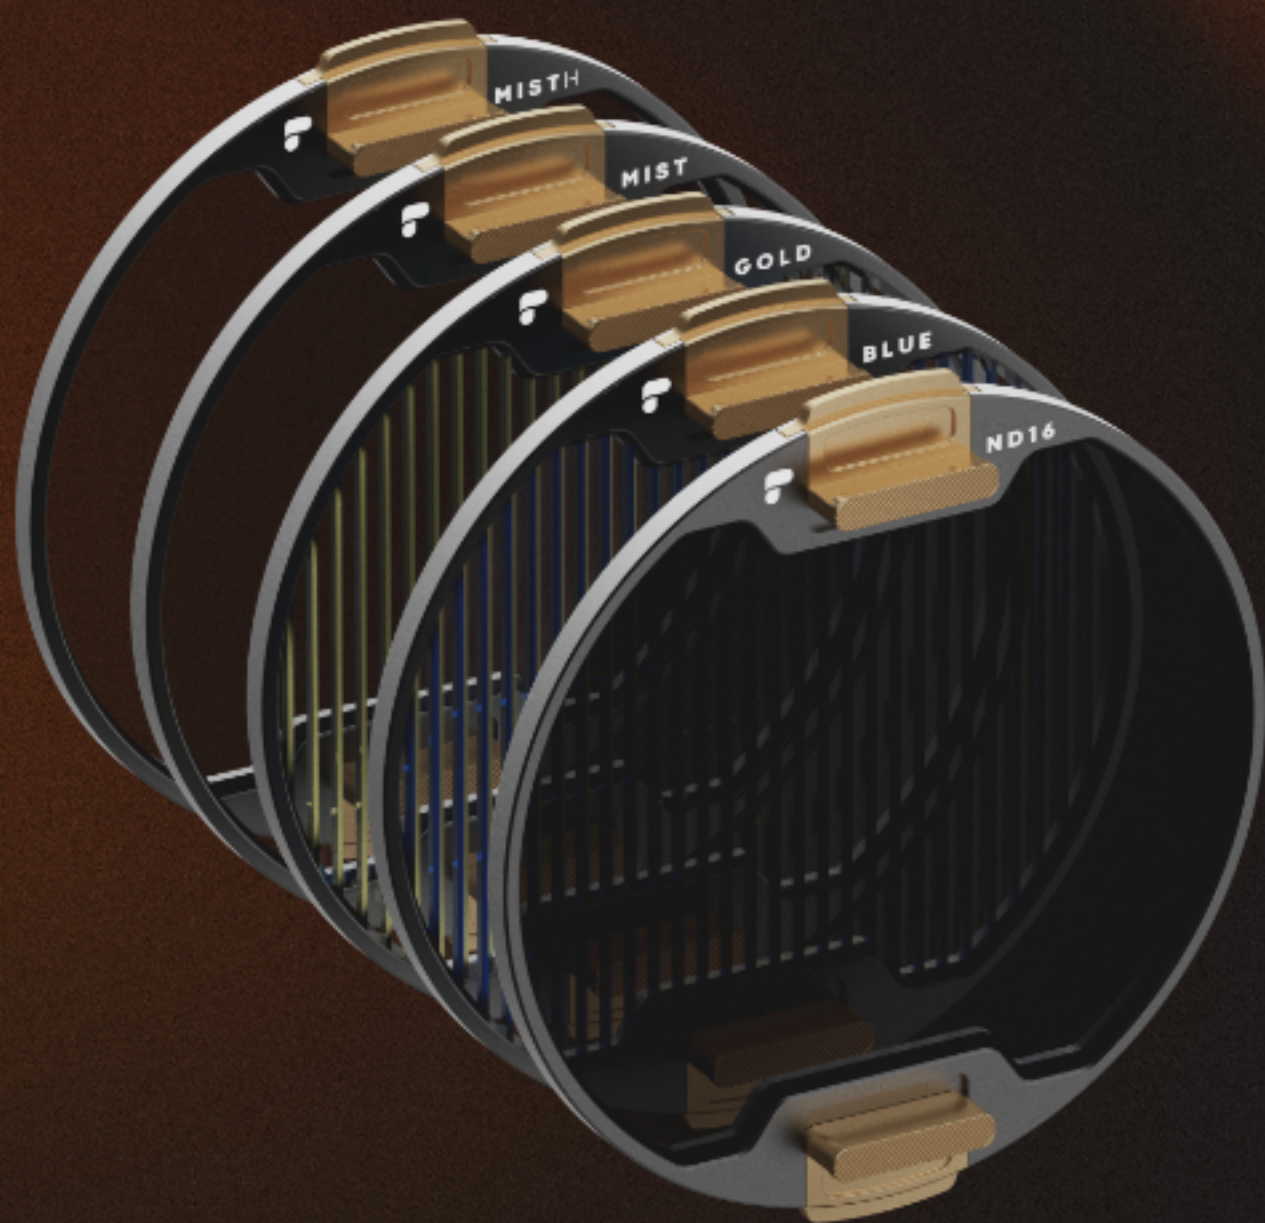

INSTALLATION

Step 1:

First, pinch the gold/bronze attachment clips located on the front top/bottom of the filter.

Step 2:

With the clips still pinched down, insert the filter into the VND 3-6+ filter base or Thread Base.

Step 3:

Once inserted, release the clips, ensuring they are snug under the lip of the VND 3-6+ filter base or Thread Base. Rotate filter to the desired orientation by pinching the clips and rotating.


REMOVAL

Step 1:

Pinch the two clips and remove the filter.

Thread Base

How to use the Recon Thread Base.

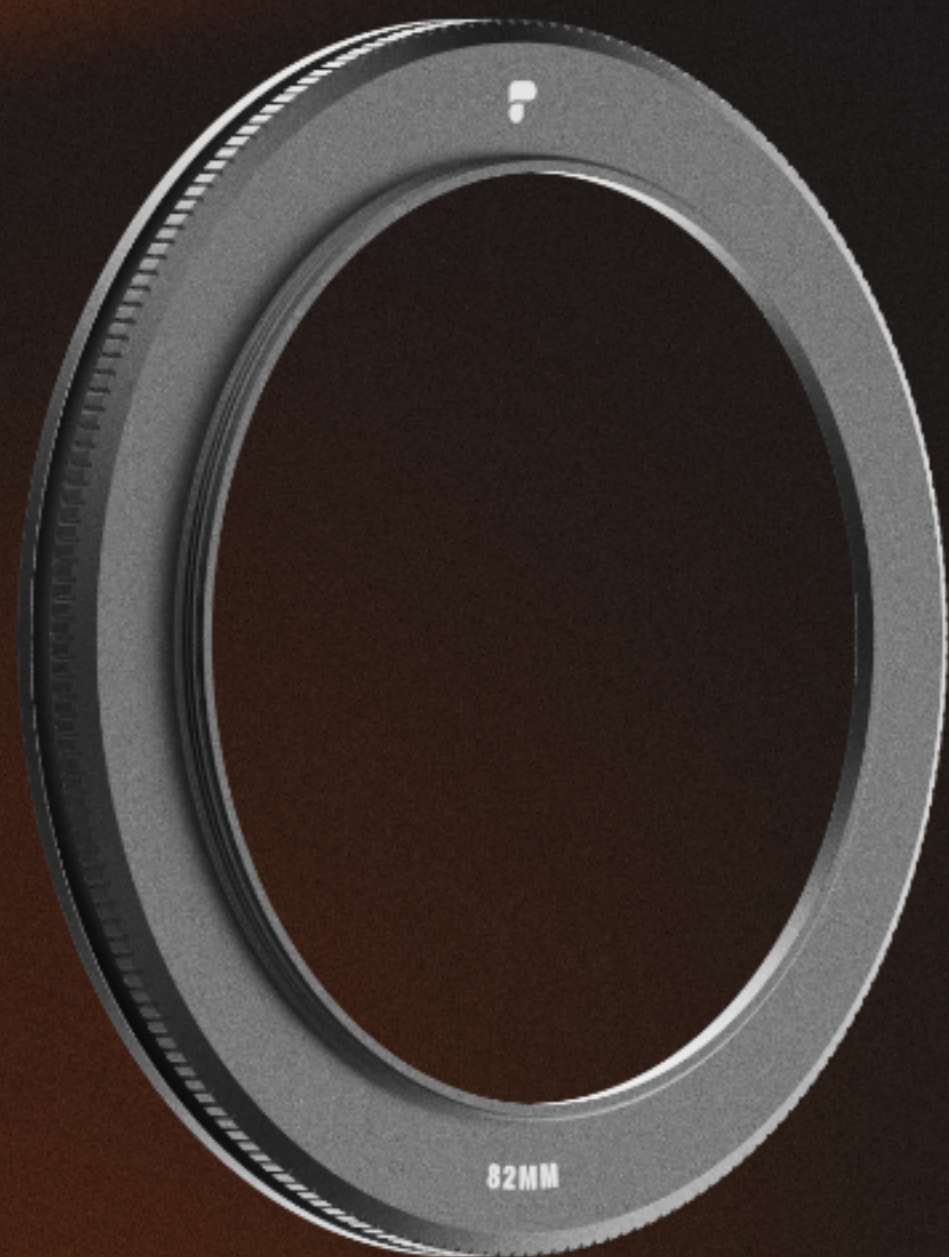

INSTALLATION_

Step 1:

Simply thread on the Thread Base to your lens.

Step 2:

The Recon Aero-Hood + Flag and Stage 2 Filters are compatible and work with the Thread Base in the same way as the VND 3-6+ Filter base.

REMOVAL_

Step 1:

Unthread the Thread Base from your lens.

More Info

Questions and support.

QUESTIONS?

Reach out any time via live-chat on our website, or shoot us an email. We're happy to help!

polarpro.com | support@polarpro.com | 949.220.9395